


DXM-Automatic Fan Staging

DXM-Automatic Fan Staging

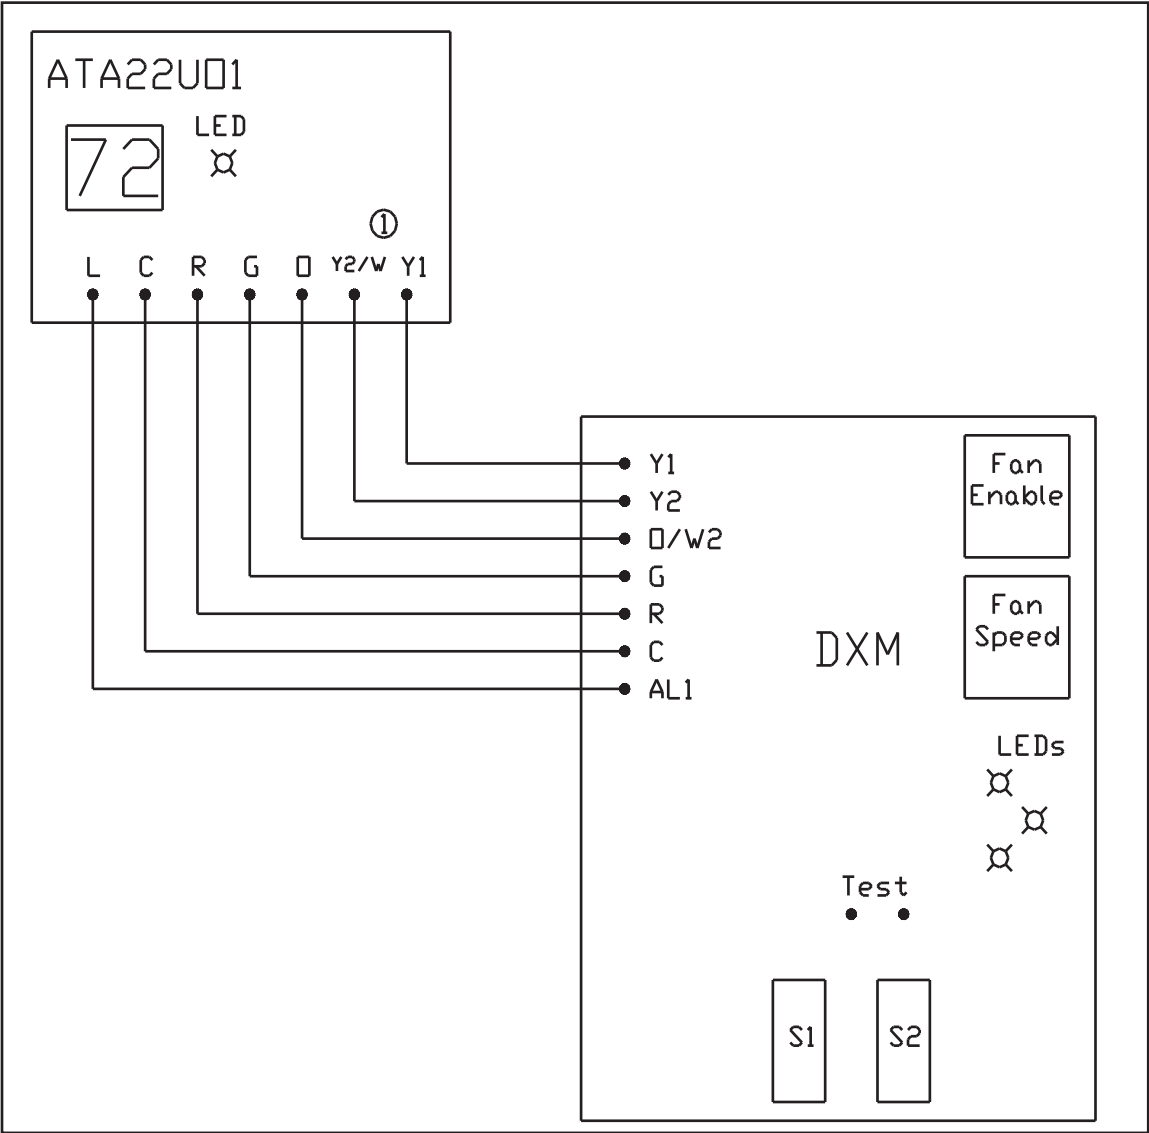

Notes

1) Y1, Y2/W simultaneous thermostat output will automatically upstage fan. Y1 output turns on Fan Enable relay. Y1 and Y2/W outputs turn on Fan Enable and Fan Speed relays.