

Climate Master



decentralized air conditioning systems

WALL BOX AND LOUVER ASSEMBLY INSTRUCTIONS

Step 1. Consult plans and specifications to determine exact location of each wall box. Plans should show: (1) height of wall box above finished floor, (2) along wall position, and (3) depth wall box is to be recessed into wall.

NOTE: Wall box should be installed only after the interior walls and the floors have been finished.

- Step 2. Remove waxed weather panel from front of wall box.
- Step 3. Loosen (do not remove) nuts that secure supports to sides of wall box.
- Step 4. Place wall box in correct position in wall opening.
- Step 5. IMPORTANT!! Tie line to louver and fasten to wall box before inserting louver assembly through wall box opening.
- Step 6. Insert louver assembly through wall box opening (with weep holes on bottom) and pull back firmly into position.
- Step 7. Push wall box firmly against wall and rotate louver clips over inside edge of wall box and tighten screws.
- Step 8. Level wall box left and right and front to back using level and support legs. (Use level on top surface of wall box only. Bottom surface is designed to pitch toward outside when top surface is level). After wall box is level and supports are adjusted squarely on finished floor, press down on supports to compress rubber tape on bottom flange. Then tighten nuts. (Holes are provided on bottom flange of support if Lagging is required).
- Step 9. If chassis is not to be installed immediately, weather panel may be put back on.

NOTE: See opposite side for illustration.

Climate Master Division
International Heating
and Air Conditioning Corp.
2007 Beechgrove Place.
Utica, New York 13501

Copyright*, 1970
Crimate Master Division
International Heating
and Air Conditioning Corp.
Printed in U.S.A. All rights reserved
Climate Master is a registered trade mark.

