

# CLIMATEMASTER®

## ATC32U01 Basic Operation Guide

*Communicating Programmable Thermostat*

---


### Display

- 1 Date
- 2 Outdoor Temperature (Optional)
- 3 Current Humidity Level
- 4 Indoor Temperature
- 5 Time
- 6 Fan Mode
- 7 Operating Mode  
Off, Cool, Heat, Emergency Heat
- 8 Temperature Setpoints  
HEAT 70  
COOL 72
- 9 User Options  
TEMP MODE FAN MENU



## Select Mode


- From the main menu select Mode

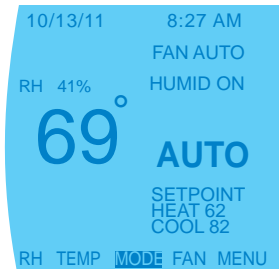

Select one of the following:


- OFF** - Turns unit off
- AUTO** - Automatically cool or heat based on setpoint
- COOL** - Cool down to the cool setpoint temperature
- HEAT** - Heat up to the heat setpoint temperature
- EMERGENCY HEAT** - Turn on backup heating source to heat up to heat setpoint temperature (optional)

Select enter button  to save settings

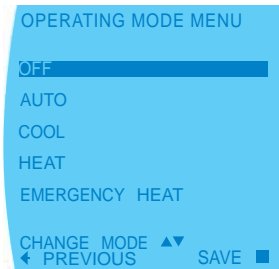

## Change Temperature Setpoints


Use left-right arrow keys to select TEMP

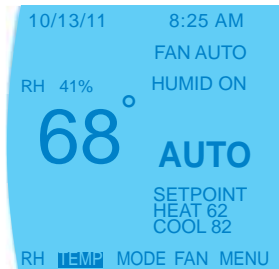

Use left-right arrow keys to select HEAT or COOL

Once selected, use up-down arrow keys to change temperature setpoint (desired temperature)

Select enter button  to save settings

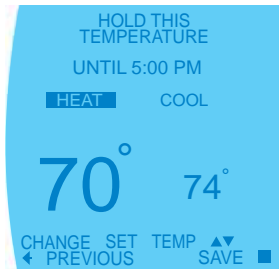


## Select Fan Mode

Use left-right arrow keys to select FAN

Select one of the following:

- **AUTO** - Runs when the unit is heating/cooling
- **CONTINUOUS ON** - Runs all the time, regardless if it is heating/cooling
- **PROGRAMMED FAN** - Follows daily/weekly schedule (see section on daily/weekly schedule)

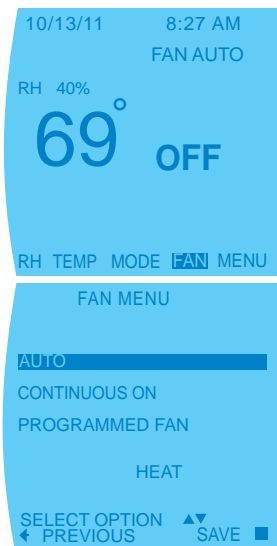


## Select Humidity Level

Use left-right arrow keys to select RH

Select one of the following:


- **HUMIDITY SETTING** - Desired humidity when trying to humidify the space (in heating mode, for example)
- **DEHUMID SETTING (OPTIONAL)** - Desired humidity when trying to remove humidity from the space (in cooling mode, for example)

Select enter button  to save settings

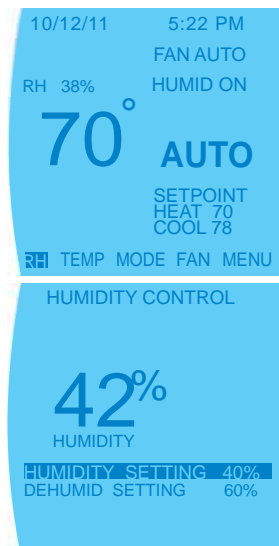


# Program Daily/Weekly Schedule


Use left-right arrow keys to select MENU

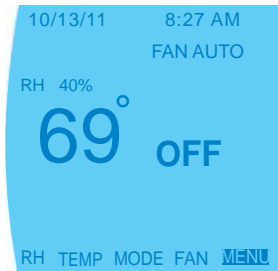

Use up-down arrow keys to select PROGRAM

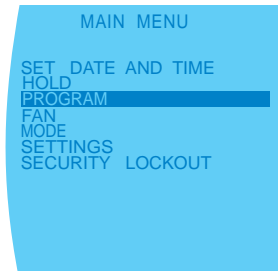


Use up-down arrow keys to select DAY

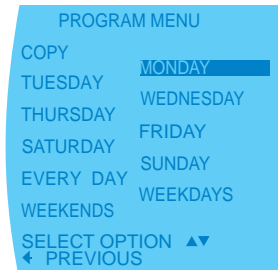

Use left-right arrow keys to select setpoints for cooling & heating

You can also select if you want the unit's fan to run while heating/cooling, or continuous during that period

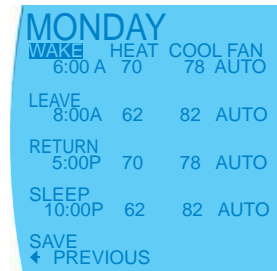


Select COPY to copy program from one day to another

Use up-down arrow keys to select day to copy FROM




Use up-down arrow keys to select day/group of days to copy to

Select enter button  to save settings

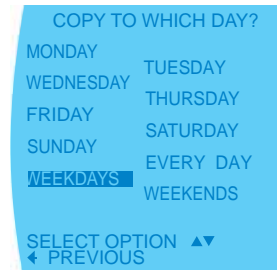



# Main Menu

Use left-right arrow keys to select MENU

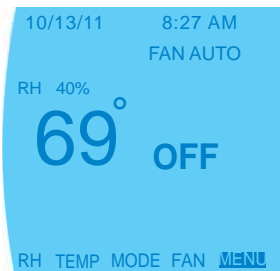


Select one of the following:

- SET DATE AND TIME
- HOLD - Over ride daily/weekly schedule
  - VACATION - Set hold temperatures till certain day/time
  - PERMANENT - Set hold temperatures till cancelled
  - CANCEL - Select CANCEL OVERRIDE on main screen

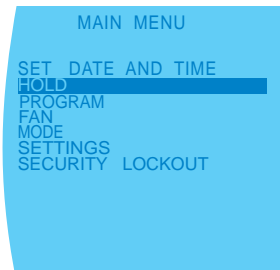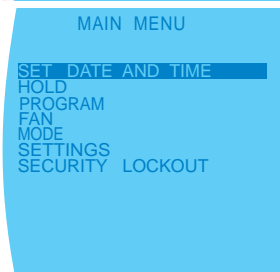


- SETTINGS - See document 97B0055N02 for more details

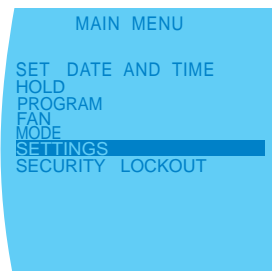

- SECURITY LOCKOUT
  - TEMP ADJUST ONLY - Set pass code to lockout any changes EXCEPT changing temperature setpoints
  - TOTAL KEYPAD LOCKOUT - Set pass code to lock out ANY changes




Select enter button  to save settings

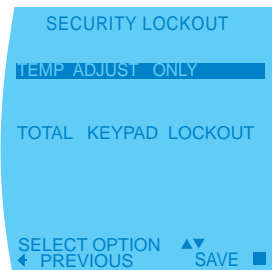


# Change Filter

Choose CANCEL ALARM once the filter is changed

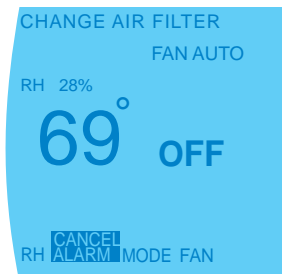


## Service Needed

Press any button for more information

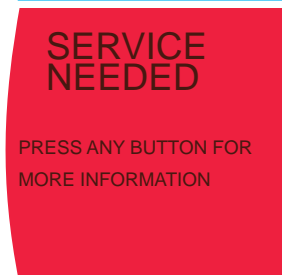

The next screen will display the model and serial number of your ClimateMaster unit, the phone number of your installing contractor, and the fault code and a description of the fault that triggered the Service Needed screen

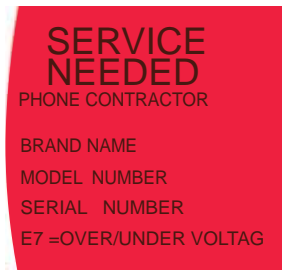



7300 S.W. 44th Street | Oklahoma City, OK 73179 | Phone: 405-745-6000 | Fax: 405-745-6058 | [climatemaster.com](http://climatemaster.com)

ClimateMaster works continually to improve its products. As a result, the design and specifications of each product at the time for order may be changed without notice and may not be as described herein. Please contact ClimateMaster's Customer Service Department at 1-405-745-6000 for specific information on the current design and specifications. Statements and other information contained herein are not express warranties and do not form the basis of any bargain between the parties, but are merely ClimateMaster's opinion or commendation of its products.

The management system governing the manufacture of ClimateMaster's products is ISO 9001:2000 certified.

The 'USGBC Member Logo' is a trademark owned by the U.S. Green Building Council and is used by permission. The logo signifies only that ClimateMaster, Inc. is a USGBC member; USGBC does not review, certify, or endorse the products or services offered by its members.

We are a proud supporter of the Geothermal Exchange Organization - GEO. For more information visit [geoexchange.org](http://geoexchange.org)

ClimateMaster is a company of LSB Industries, New York Stock Exchange Symbol: LXU

