



TRANQUILITY® 18 (SR) VERSATILE SINGLE-STAGE SERIES

INSTALLATION, OPERATION & MAINTENANCE MANUAL

Part#: 97B0075N34 | Updated: March 6, 2024

Models: SR 006-060
60 Hz – R-454B



Preliminary

Models:
SR
006-060

Table of Contents

3	Model Nomenclature	35	Electrical: Power Wiring
4	Attentions, Cautions, and Warnings	36	Electrical: CXM2 Example Wiring Diagram
6	General Information	37	Electrical: Low Voltage Wiring
9	Minimum Installation Area	40	Electrical: Thermostat Wiring
11	Refrigerant System Servicing	41	Blower Performance Standard Unit
13	Physical Data	52	Constant Volume (CV) EC Motor Limits
14	Horizontal Installation	53	Controls: CXM2 and DXM2.5
15	Horizontal Installation: Service Access	54	Operating Limits and Commissioning Conditions
18	Duct System Installation	55	Piping System: Cleaning and Flushing
19	Field Conversion of Air Discharge	56	Unit and System Checkout
20	Vertical Installation	57	Unit Startup Procedure
22	Vertical Installation: Service Access	60	Unit Operating Conditions
23	Piping Installation	66	Preventative Maintenance
24	Water-Loop Heat Pump Applications	67	Functional Troubleshooting
25	Ground-Loop Heat Pump Application	69	Performance Troubleshooting
27	Water Quality Requirements	71	Startup Log Sheet
31	Electrical Data: PSC Blower Motor Standard Unit	72	Functional Troubleshooting Form
32	Electrical Data: PSC Blower Motor with Internal Secondary Pump	73	Warranty (U.S. and Canada)
33	Electrical Data: EC Blower Motor Standard Unit	74	Warranty (International)
34	Electrical Data: EC Blower Motor with Internal Secondary Pump	76	Revision History

ClimateMaster works continually to improve its products. As a result, the design and specifications of each product at the time of order may be changed without notice and may not be as described herein. Please contact ClimateMaster's Customer Service Department at 1-800-299-9747 for specific information on the current design and specifications. Statements and other information contained herein are not express warranties and do not form the basis of any bargain between the parties, but are merely ClimateMaster's opinion or commendation of its products.

Model Nomenclature

1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15
S | **R** | **L** | **O** | **2** | **4** | **A** | **G** | **C** | **3** | **0** | **C** | **0** | **P** | **S**

PRODUCT NAME

S = R-454B Refrigerant

MODEL TYPE

R = Versatile Single-Stage Series

SUPPLY & RETURN CONFIGURATIONS

Horizontal Configuration		
	Left	Right
Straight	L	R
Back	B	P

Vertical Configuration		
	Left	Right
Top	T	K

SIZE

006	018	042
009	024	048
012	030	060
015	036	

REVISION

A = Current

VOLTAGE

A = 115-1-60	B = 115-1-60 Refrigerant Detection System
G = 208/230-1-60	J = 208/230-1-60 Refrigerant Detection System
H = 208/230-3-60	K = 208/230-3-60 Refrigerant Detection System
E = 265-1-60	D = 265-1-60 Refrigerant Detection System
F = 460-3-60	L = 460-3-60 Refrigerant Detection System
N = 575-3-60	M = 575-3-60 Refrigerant Detection System

CONTROLS

Control	Standard	MPC
CXM2	C	N
DXM2.5	D	P
CXM2 with Disconnect	W	R
DXM2.5 with Disconnect	B	S

CABINET

Cabinet	UltraQuiet	Rail		Frame	
		1"	2"	1"	2"
Extended Range	No	1	J	K	A
	Yes	2	L	M	C
Standard Range	No	3	N	P	E
	Yes	4	F	S	G

STANDARD

S = Standard

BLOWER MOTOR

P = Permanent Split Capacitor (PSC)
 T = Constant Torque Electronically Commuted (CT EC)
 V = Constant Volume Electronically Commuted (CV EC)

EXTENDED OPTIONS

0 = Standard
 G = Hot Water Generator (HWG)

DRAIN PAN/HEAT EXCHANGER OPTIONS

C = Standard Drain Pan, Non-Coated Air Coil
 T = Standard Drain Pan, Tin-Coated Air Coil
 S = Stainless Steel Drain Pan, Non-Coated Air Coil
 R = Stainless Steel Drain Pan, Tin-Coated Air Coil

WATER/HEAT EXCHANGER OPTIONS

Water Option	Standard	Cupro Nickel
None	0	Z
Motorized Water Valve (MWV)	M	V
Internal Secondary Pump (ISP)	7	-
Auto Flow Regulator (AFR) 2.5 GPM/ton	A	-
AFR 2.5 GPM/ton	F	-
MWV & AFR 2.5 GPM/ton	W	-
MWV & AFR 3.0 GPM/ton	T	-

Use ClimateMaster's selection software at <https://climatemastersolutions.com/eRep/> to configure your Tranquility SR model.

Models:
SR
006-060

Attentions, Cautions, and Warnings

SAFETY

Warnings, cautions, and notices appear throughout this manual. Read these items carefully before attempting any installation, service, or troubleshooting of the equipment.


DANGER: Indicates an immediate hazardous situation, which if not avoided will result in death or serious injury. DANGER labels on unit access panels must be observed.

WARNING: Indicates a potentially hazardous situation, which if not avoided could result in death or serious injury.

CAUTION: Indicates a potentially hazardous situation or an unsafe practice, which if not avoided could result in minor or moderate injury or product or property damage.

NOTICE: Notification of installation, operation, or maintenance information, which is important, but which is not hazard-related.

WARNING



Disconnect power supply(ies) before servicing. Refer servicing to qualified service personnel. Electric shock hazard. May result in injury or death!

WARNING

To avoid the release of refrigerant into the atmosphere, the refrigerant circuit of this unit must be serviced only by technicians who meet local, state, and federal proficiency requirements.

WARNING

The installation of water-source heat pumps and all associated components, parts, and accessories which make up the installation shall be in accordance with the regulations of ALL authorities having jurisdiction and MUST conform to all applicable codes. It is the responsibility of the installing contractor to determine and comply with ALL applicable codes and regulations.

WARNING

The appliance shall be stored in a room without continuously operating ignition sources (for example: open flames, an operating gas appliance or an operating electric heater).

WARNING

If unit connected via an air duct system to one or more rooms with R-454B is installed in a room with an area less than A_{min} or has an Effective Dispersal Volume less than minimum, that room shall be without continuously operating open flames or other POTENTIAL IGNITION SOURCES. A flame-producing device may be installed in the same space if the device is provided with an effective flame arrest.

WARNING

All refrigerant discharged from this unit must be recovered WITHOUT EXCEPTION. Technicians must follow industry accepted guidelines and all local, state, and federal statutes for the recovery and disposal of refrigerants. If a compressor is removed from this unit, refrigerant circuit oil will remain in the compressor. To avoid leakage of compressor oil, refrigerant lines of the compressor must be sealed after it is removed.

WARNING

This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

WARNING

An unventilated area where the appliance using FLAMMABLE REFRIGERANTS is installed shall be so constructed that should any refrigerant leak, it will not stagnate so as to create a fire or explosion hazard.

WARNING

Auxiliary devices which may be a POTENTIAL IGNITION SOURCE shall not be installed in the duct work. Examples of such POTENTIAL IGNITION SOURCES are hot surfaces with a temperature exceeding 1,292°F (700°C)

WARNING

An unventilated area where a water source heat pump is installed and surpasses a R-454B refrigerant charge of 62 oz (1.76 kg), shall be without continuously operating open flames (for example an operating gas appliance) or other POTENTIAL IGNITION SOURCES (for example, an operating electric heater, hot surfaces).

WARNING

Only auxiliary electric heaters approved by ClimateMaster shall be installed in connecting ductwork. The installation of any other auxiliary devices is beyond ClimateMaster's responsibility.

WARNING

For mechanical ventilation, the lower edge of the air extraction opening where air is exhausted from the room shall not be more than 3.94 inches (100 mm) above the floor. The location where the mechanical ventilation air extracted from the space is discharged shall be separated by a sufficient distance, but not less than 9.84 feet (3 m), from mechanical ventilation air intake openings, to prevent recirculation to the space.

WARNING

Children being supervised are NOT to play with the appliance.

WARNING

Do not pierce or burn.

WARNING

Be aware that refrigerants may not contain odor.

Attentions, Cautions, and Warnings

CAUTION

DO NOT store or install units in corrosive environments or in locations subject to temperature or humidity extremes (e.g., attics, garages, rooftops, etc.). Corrosive conditions and high temperature or humidity can significantly reduce performance, reliability, and service life. Always move and store units in an upright position. Tilting units on their sides will cause equipment damage.

CAUTION

CUT HAZARD - Failure to follow this caution may result in personal injury. Sheet metal parts may have sharp edges or burrs. Use care and wear appropriate protective clothing, safety glasses and gloves when handling parts and servicing heat pumps.

CAUTION

To avoid equipment damage, DO NOT use these units as a source of heating or cooling during the construction process. The mechanical components and filters can quickly become clogged with construction dirt and debris, which may cause system damage and void product warranty.

CAUTION

All three phase scroll compressors must have direction of rotation verified at startup. Verification is achieved by checking compressor Amp draw. Amp draw will be substantially lower compared to nameplate values. Additionally, reverse rotation results in an elevated sound level compared to correct rotation. Reverse rotation will result in compressor internal overload trip within several minutes. Verify compressor type before proceeding.

NOTICE

Service shall be performed only as recommended by the manufacturer.

NOTICE

REFRIGERANT SENSORS for REFRIGERANT DETECTION SYSTEMS shall only be replaced with sensors specified by the appliance manufacturer.

General Information

INSPECTION

Upon receipt of the equipment, carefully check the shipment against the bill of lading. Make sure all units have been received. Inspect the packaging of each unit, and inspect each unit for damage. Ensure that the carrier makes proper notation of any shortages or damage on all copies of the freight bill and completes a common carrier inspection report. Concealed damage not discovered during unloading must be reported to the carrier within 15 days of receipt of shipment. If not filed within 15 days, the freight company can deny the claim without recourse.

NOTE: It is the responsibility of the purchaser to file all necessary claims with the carrier. Notify your equipment supplier of all damage within 15 days of shipment.

STORAGE

Equipment should be stored in its original packaging in a clean, dry area. Store units in an upright position at all times. You may stack vertical configurations a maximum of two units high and horizontal configurations a maximum of three units high.

UNIT PROTECTION

Cover units on the job site with either the original packaging or an equivalent protective covering. Cap the open ends of pipes stored on the job site. In areas where painting, plastering, and/or spraying has not been completed, all due precautions must be taken to avoid physical damage to the units and contamination by foreign material. Physical damage and contamination may prevent proper startup and may result in costly equipment cleanup.

Examine all pipes, fittings, and valves before installing any of the system components. Remove any dirt or debris found in or on these components.

PRE-INSTALLATION

Installation, Operation, and Maintenance instructions are provided with each unit. Horizontal equipment is designed for installation above false ceiling or in a ceiling plenum. Other unit configurations are typically installed in a mechanical room. The installation site chosen should include adequate service clearance around the unit. Before unit startup, read all manuals and become familiar with the unit and its operation. Thoroughly check the system before operation.

PREPARE UNITS FOR INSTALLATION AS FOLLOWS:

1. Compare the electrical data on the unit nameplate with ordering and shipping information to verify that the correct unit has been shipped.
2. Keep the cabinet covered with the original packaging until installation is complete and all plastering, painting, etc. is finished.
3. Verify refrigerant tubing is free of kinks or dents and that it does not touch other unit components.
4. Inspect all electrical connections. Connections must be clean and tight at the terminals.
5. Remove any blower support packaging (water-to-air units only).
6. Some airflow patterns are field convertible (horizontal units only). Locate the airflow conversion section of this IOM.
7. Locate and verify any hot water generator (HWG), hanger, or other accessory kit located in the compressor section or blower section.

CHECKS TO THE AREA

Prior to beginning work on systems containing FLAMMABLE REFRIGERANTS, safety checks are necessary to ensure that the risk of ignition is minimized. For repair to the REFRIGERATING SYSTEM, these steps shall be completed prior to conducting work on the system.

General Information

Work Procedure

Work shall be undertaken under a controlled procedure so as to minimise the risk of a flammable gas or vapor being present while the work is being performed.

General Work Area

All maintenance staff and others working in the local area shall be instructed on the nature of work being carried out. Work in confined spaces shall be avoided.

Checking for presence of refrigerant

The area shall be checked with an appropriate refrigerant detector prior to and during work, to ensure the technician is aware of potentially toxic or flammable atmospheres. Ensure that the leak detection equipment being used is suitable for use with all applicable refrigerants, i.e. non-sparking, adequately sealed or intrinsically safe.

Presence of fire Extinguisher

If any hot work is to be conducted on the refrigeration equipment or any associated parts, appropriate fire extinguishing equipment shall be available to hand. Have a dry powder or CO₂ fire extinguisher adjacent to the charging area.

No ignition sources

No person carrying out work in relation to a REFRIGERATION SYSTEM which involves exposing any pipe work shall use any sources of ignition in such a manner that it may lead to the risk of fire or explosion. All possible ignition sources, including cigarette smoking, should be kept sufficiently far away from the site of installation, repairing, removing and disposal, during which refrigerant can possibly be released to the surrounding space. Prior to work taking place, the area around the equipment is to be surveyed to make sure that there are no flammable hazards or ignition risks. "No Smoking" signs shall be displayed.

Ventilated area

Ensure that the area is in the open or that it is adequately ventilated before breaking into the system or conducting any hot work. A degree of ventilation shall continue during the period that the work is carried out. The ventilation should safely disperse any released refrigerant and preferably expel it externally into the atmosphere.

Checks to the Refrigeration Equipment

The following checks shall be applied to installations using FLAMMABLE REFRIGERANTS:

- The actual REFRIGERANT CHARGE is in accordance with the room size within which the refrigerant containing parts are installed;
- The ventilation machinery and outlets are operating adequately and are not obstructed;
- If an indirect refrigerating circuit is being used, the secondary circuit shall be checked for the presence of refrigerant;
- Marking to the equipment continues to be visible and legible. Markings and signs that are illegible shall be corrected;
- Refrigerant piping or components are installed in a position where they are unlikely to be exposed to any substance which may corrode refrigerant containing components, unless the components are constructed of materials which are inherently resistant to being corroded or are suitably protected against being so corroded.

Checks to Electrical Devices

Repair and maintenance to electrical components shall include initial safety checks and component inspection procedures. If a fault exists that could compromise safety, then no electrical supply shall be connected to the circuit until it is satisfactorily dealt with. If the fault cannot be corrected immediately but it is necessary to continue operation, an adequate temporary solution shall be used. This shall be reported to the owner of the equipment so all parties are advised.

Initial safety checks shall include:

- Capacitors are discharged: this shall be done in a safe manner to avoid possibility of sparking;
- That no live electrical components and wiring are exposed while charging, recovering, or purging the system;
- That there is continuity of earth bonding.

Models:
SR
006-060

General Information

REPAIR TO INTRINSICALLY SAFE COMPONENTS

Do not apply any permanent inductive or capacitance loads to the circuit without ensuring that this will not exceed the permissible voltage and current permitted for the equipment in use.

Intrinsically safe components are the only types that can be worked on while live in the presence of a flammable atmosphere. The test apparatus shall be at the correct rating.

Replace components only with parts specified by the manufacturer. Other parts may result in the ignition of refrigerant in the atmosphere from a leak.

NOTE: The use of silicon sealant can inhibit the effectiveness of some types of leak detection equipment. Intrinsically safe components do not have to be isolated prior to working on them.

CABLING

Check that cabling will not be subject to wear, corrosion, excessive pressure, vibration, sharp edges or any other adverse environmental effects. The check shall also take into account the effects of aging or continual vibration from sources such as compressors or fans.

REQUIRED AREA FOR INSTALLATION

The minimum room area of the space (A_{min}) or a minimum room area of conditioned space (T_{amin}) shall be corrected for unit's location altitude by multiplying A_{min} or T_{amin} by the applicable altitude adjustment factor (AF) for building ground-level altitude (H_{alt}) in feet or meters, as shown in Table 1.

Note: You can use Imperial or Metric measurements to calculate A_{min} or T_{amin} .

Table 1: Altitude Adjustment

H_{alt} ft (m)	AF
0 (0)	1.00
656 (200)	1.00
1,312 (400)	1.00
1,968 (600)	1.00
2,624 (800)	1.02
3,280 (1,000)	1.05
3,937 (1,200)	1.07
4,593 (1,400)	1.10
5,249 (1,600)	1.12
5,905 (1,800)	1.15
6,561 (2,000)	1.18
7,217 (2,200)	1.21
7,874 (2,400)	1.25
8,530 (2,600)	1.28
9,186 (2,800)	1.32
9,842 (3,000)	1.36
10,498 (3,200)	1.40

Minimum Installation Area

MINIMUM INSTALLATION AREA

Minimum area where a blower-equipped unit must be installed, and mechanical/natural ventilation is not required

Model	Charge (oz)	Configuration	Minimum Installation Area ft ² (m ²) [A _{min}]			
			Floor	Window	Wall	Ceiling
SR060	69	Vertical	261 (80)	92 (28)	61 (19)	52 (16)
		Horizontal	5,601 (1,707)	139 (42)	78 (24)	64 (20)

A_{min} = Minimum area where unit is installed where unit has incorporated airflow

h_{inst} (floor) = 0.0 ft (0.0 m)

h_{inst} (window) = 3.3 ft (1.0 m)

h_{inst} (wall) = 5.9 ft (1.8 m)

h_{inst} (ceiling) = 7.2 ft (2.2 m)

Minimum CFM of a unit that requires a blower for mitigation mode

Model	Charge (oz)	Configuration	Minimum CFM [Q _{min}]
SR060	69	Vertical	394
		Horizontal	339

Q_{min} = Minimum CFM provided by unit

Minimum area where the exhausted air is being sent if mechanical ventilation is used

Model	Charge (oz)	Configuration	Minimum Exhaust Area ft ² (m ²) [A _{min}]			
			Floor	Window	Wall	Ceiling
SR060	69	Vertical	127 (38)	122 (37)	118 (36)	116 (35)
		Horizontal	129 (39)	118 (36)	109 (33)	104 (31)

EA_{min} = Minimum area where the exhausted air is sent

h_{inst} (floor) = 0.0 ft (0.0 m)

h_{inst} (window) = 3.3 ft (1.0 m)

h_{inst} (wall) = 5.9 ft (1.8 m)

h_{inst} (ceiling) = 7.2 ft (2.2 m)

Minimum CFM for mechanical ventilation

Model	Charge (oz)	Configuration	Minimum CFM [Q _{min}]			
			Floor	Window	Wall	Ceiling
SR060	69	Vertical	114	110	106	104
		Horizontal	116	106	98	94

Q_{min} = Minimum area where the exhausted air is sent

h_{inst} (floor) = 0.0 ft (0.0 m)

h_{inst} (window) = 3.3 ft (1.0 m)

h_{inst} (wall) = 5.9 ft (1.8 m)

h_{inst} (ceiling) = 7.2 ft (2.2 m)

Minimum area and CFM requirements for the conditioned space

Model	Charge (oz)	Minimum CFM [Q _{min}]	
		TA _{min} (ft ²)	Q _{min} (ft ³ /min)
SR060	69	3.54	117

TA_{min} = Minimum conditioned area for venting leaked refrigerant

Q_{min} = Minimum ventilation flow rate for conditioned space if space is less than TA_{min}

Minimum area of opening for natural ventilation

Model	Charge (oz)	A _{nv} (in ²)
SR060	69	111.57

A_{nv} = Minimum natural ventilation area opening

Models:
SR
006-060

Minimum Installation Area

When the openings for connected rooms or natural ventilation are required, the following conditions shall be applied:

- The area of any openings above 11.8 inches (300 mm) from the floor shall not be considered in determining compliance with $An_{v_{min}}$.
- At least 50% of the required opening area $An_{v_{min}}$ shall be below 7.8 inches (200 mm) from the floor.
- The bottom of the lowest openings shall not be higher than the point of release when the unit is installed and not more than 3.9 inches (100 mm) from the floor.
- Openings are permanent openings which cannot be closed.
- For openings extending to the floor, the height shall not be less than 0.78 inch (20 mm) above the surface of the floor covering.
- A second higher opening shall be provided. The total size of the second opening shall not be less than 50% of minimum opening area for $An_{v_{min}}$ and shall be at least 3.3 ft (1.5 m) above the floor.

Refrigerant System Servicing

REFRIGERANT SYSTEM

To maintain sealed circuit integrity, do not install service gauges unless unit operation appears abnormal. Reference the operating charts for pressures and temperatures. Verify that air and water flow rates are at proper levels before servicing the refrigerant circuit.

Removal and Evacuation

When breaking into the refrigerant circuit to make repairs - or for any other purpose - conventional procedures shall be used. However, for flammable refrigerants it is important that best practice be followed, since flammability is a consideration. The following procedure shall be adhered to:

- Safely remove refrigerant following local and national regulations
- Evacuate
- Purge the circuit with Inert gas
- Evacuate
- Continuously flush or purge with Inert gas when using flame to open circuit
- Open the circuit.

The refrigerant charge shall be recovered into the correct recovery cylinders if venting is not allowed by local and national codes. For appliances containing flammable refrigerants, the system shall be purged with oxygen-free nitrogen to render the appliance safe for flammable refrigerants. This process might need to be repeated several times. Compressed air or oxygen shall not be used for purging refrigerant systems.

For appliances containing flammable refrigerants, refrigerant purging shall be achieved by breaking the vacuum in the system with oxygen-free nitrogen and continuing to fill until the working pressure is achieved, then venting to atmosphere, and finally pulling down to a vacuum (optional for FLAMMABLE REFRIGERANT). This process shall be repeated until no refrigerant is remains in the system (optional for FLAMMABLE REFRIGERANT). When the final oxygen-free nitrogen charge is used, the system shall be vented down to atmospheric pressure to enable work to take place.

The outlet for the vacuum pump shall not be close to any potential ignition sources, and ventilation shall be available.

Charging Procedures

In addition to conventional charging procedures, the following requirements shall be followed:

- Ensure that contamination of different refrigerants does not occur when using charging equipment.
- Hoses or lines shall be as short as possible to minimize the amount of refrigerant contained in them.
- Cylinders shall be kept in an appropriate position according to the instructions.
- Ensure that the REFRIGERATION SYSTEM is earthed prior to charging the system with refrigerant.
- Label the system when charging is complete (if not already).
- Extreme care shall be taken not to overfill the REFRIGERATION SYSTEM.

Prior to recharging the system, it shall be pressure-tested with the appropriate purging gas. The system shall be leak-tested on completion of charging but prior to commissioning. A follow up leak test shall be carried out prior to leaving the site.

Leak Detection

Under no circumstances shall potential sources of ignition be used in the searching for or detection of refrigerant leaks. A halide torch (or any other detector using a naked flame) shall not be used.

The following leak detection methods are deemed acceptable for all refrigerant systems.

Electronic leak detectors may be used to detect refrigerant leaks but, in the case of FLAMMABLE REFRIGERANTS, the sensitivity may not be adequate, or may need re-calibration. (Detection equipment shall be calibrated in a refrigerant-free area.) Ensure that the detector is not a potential source of Ignition and is suitable for the refrigerant used.

Models:
SR
006-060

Refrigerant System Servicing

Leak detection equipment shall be set at a percentage of the lower flammability limit of the refrigerant and shall be calibrated to the refrigerant employed, and the appropriate percentage of gas (25% maximum) is confirmed.

Leak detection fluids are also suitable for use with most refrigerants but the use of detergents containing chlorine shall be avoided as the chlorine may react with the refrigerant and corrode the copper pipe-work.

NOTE:

Examples of leak detection fluids are:

- Bubble method
- Fluorescent method agents

If a leak is suspected, all naked flames shall be removed/extinguished.

If a refrigerant leak that requires brazing is identified, all of the refrigerant shall be recovered from the system, or isolated (by means of shut off valves) in a part of the system remote from the leak. Removal of refrigerant shall be according to Removal and Evacuation section.

Physical Data

Models:
SR
006-060

Tranquility (SR) Series

SR Series	006	009	012	015	018	024	030	036	042	048	060
Number of refrigerant circuits	1	1	1	1	1	1	1	1	1	1	1
Factory Charge R-454B - (oz.)	17	18	21	28	34	40	39	46	56	56	69
Refrigerant Leak Detection System	O	O	O	O	O	O	O	O	O	O	R
Number of Sensors	2	2	2	2	2	2	2	2	2	2	2
Water Connection Size											
Source FPT	1/2"	1/2"	1/2"	1/2"	1/2"	3/4"	3/4"	3/4"	3/4"	1"	1"
System Water Volume (gallons)	0.123	0.143	0.167	0.286	0.45	0.323	0.323	0.738	0.89	0.89	0.939
Vertical											
Filter Standard - 1" Throwaway	10X18	10X18	10X18	20X20	20X20	20x20	20x20	24x24	24x24	28x28	28x28
Weight - Operating (lbs.)	110	112	121	163	168	216	224	245	260	315	330
Weight - Packaged (lbs.)	115	117	126	168	173	221	229	251	266	322	337
Horizontal											
Filter Standard - 1" Throwaway	10X18	10X18	10X18	16X25	16X25	18x24	18x24	2-14x20	2-14x20	1-20x24 1-14x20	1-20x24 1-14x20
Weight - Operating (lbs.)	110	112	121	163	168	208	208	233	244	299	314
Weight - Packaged (lbs.)	115	117	126	168	173	213	213	239	250	306	321

Notes:

All dimensions displayed above are in inches unless otherwise marked.
 All units have TXV and ½-inch and ¾-inch electrical knockouts.
 The standard Condensate Drain Connection is a rubber coupling that couples to ¾-inch schedule 40/80 PVC.
 The optional Stainless Steel Condensate Drain Connection is ¾-inch FPT.
 575V fan motors are two speed.
 FPT=Female Pipe Thread
 O = Optional, R = Required

Models:
SR
006-060

Horizontal Installation

HORIZONTAL UNIT LOCATION

Units are not designed for outdoor installation. Locate the unit in an INDOOR area that allows enough space for service personnel to perform typical maintenance or repairs without removing unit from the ceiling. Horizontal units are typically installed above a false ceiling or in a ceiling plenum. Never install units in areas subject to freezing or where humidity levels could cause cabinet condensation (such as unconditioned spaces subject to 100% outside air). Consideration should be given to access for easy removal of the filter and access panels. Provide sufficient room to make water, electrical, and duct connection(s).

If the unit is located in a confined space, such as a closet, provisions must be made for return air to freely enter the space by means of a louvered door, etc. Any access panel screws that would be difficult to remove after the unit is installed should be removed prior to setting the unit. Refer to Figure 3 for an illustration of a typical installation. Refer to unit submittal data or engineering design guide for dimensional data.

Conform to the following guidelines when selecting unit location:

1. Provide a hinged access door in concealed-spline or plaster ceilings. Provide removable ceiling tiles in T-bar or lay-in ceilings. Refer to horizontal unit dimensions for specific series and model in unit submittal data. Size the access opening to accommodate the service technician during the removal or replacement of the compressor, control, or blower assembly.
2. Provide access to hanger brackets, water valves and fittings. Provide screwdriver clearance to access panels, discharge collars and all electrical connections.
3. DO NOT obstruct the space beneath the unit with piping, electrical cables and other items that prohibit future removal of components or the unit itself.
4. Use a manual portable jack/lift to lift and support the weight of the unit during installation and servicing.

The installation of water source heat pump units and all associated components, parts and accessories which make up the installation shall be in accordance with the regulations of ALL authorities having jurisdiction and MUST conform to all applicable codes. It is the responsibility of the installing contractor to determine and comply with ALL applicable codes and regulations.


NOTE: Minimum clearances for installation are the same as the minimum required service clearances. Consult the service clearances or reference of installation clearances for more information.

MOUNTING HORIZONTAL UNITS

Horizontal units have four hanger brackets partially attached at the factory, one at each corner. Enclosed within the unit there is a hanger kit hardware bag containing vibration isolation grommets, washers, screws and a hanger installation instruction page. One additional screw from the hardware bag must be added to each hanger bracket before unit installation. Tighten each screw to 75 in-lbs (8.5 Nm). See the figure below for more information. Refer to the hanger installation instruction page contained in the hardware bag for details of final hanger bracket attachment and unit suspension.

Use four field-supplied threaded rods and factory provided vibration isolators to suspend the unit. Safely lift the unit into position supporting the bottom of the unit. Ensure the top of the unit is not in contact with any external objects. Connect the top end of the four all-thread rods, slide rods through the brackets and grommet then assemble washers and double nuts at each rod. Ensure that the unit is approximately level and that the threaded rod extends past the nuts.


Figure 1: Hanger Bracket

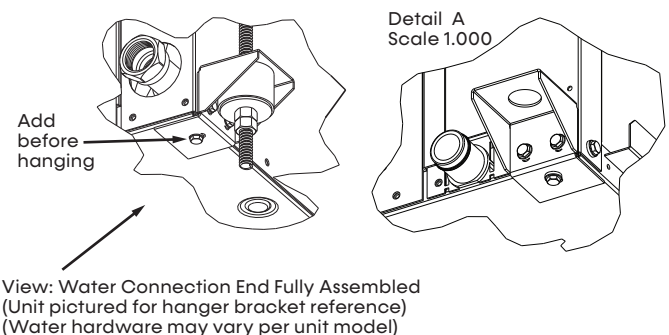


Horizontal Installation: Service Access

Models:
SR
006-060


Left Return Back Discharge

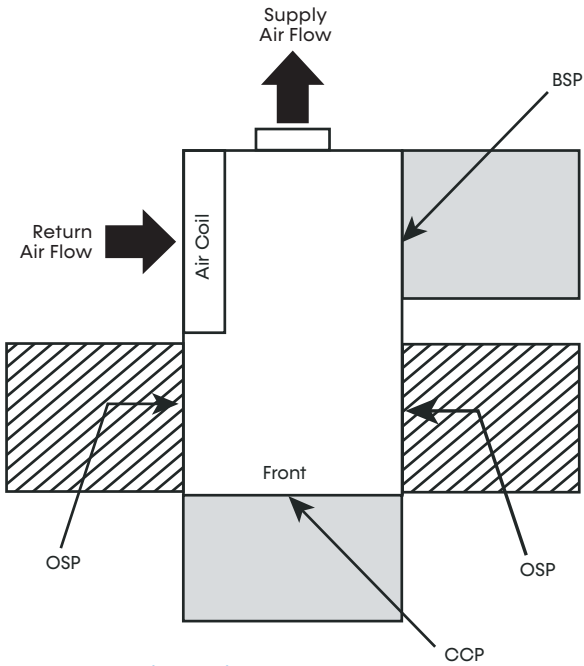


Right Return Back Discharge

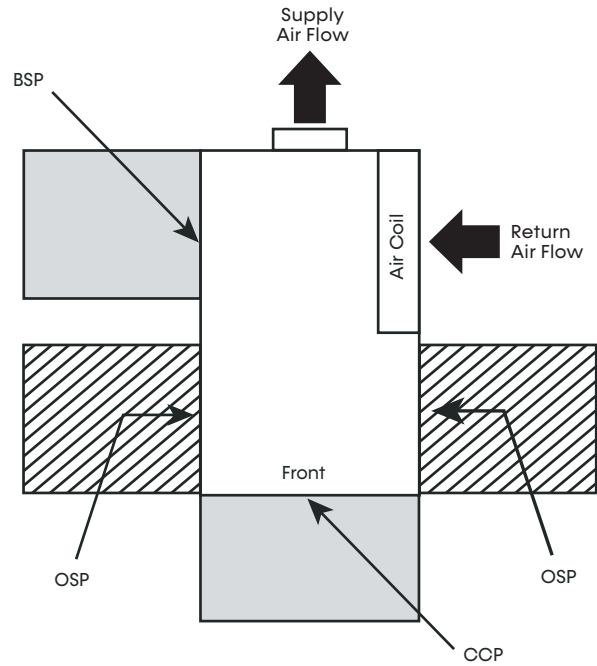

Left Return Straight Discharge

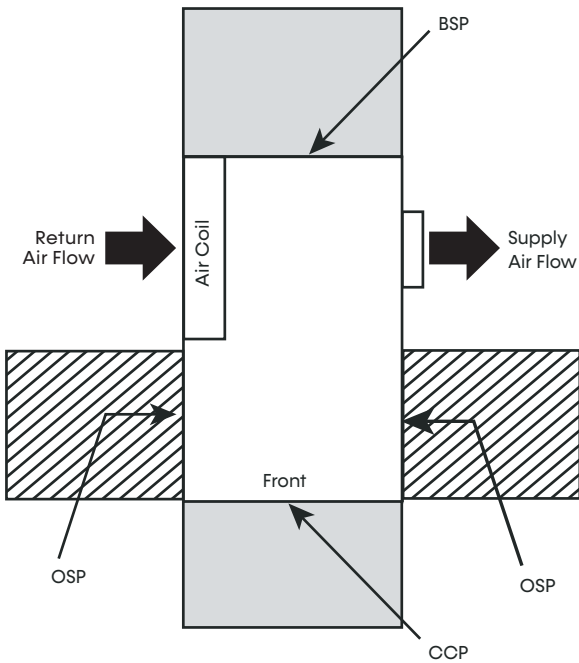

Right Return Straight Discharge

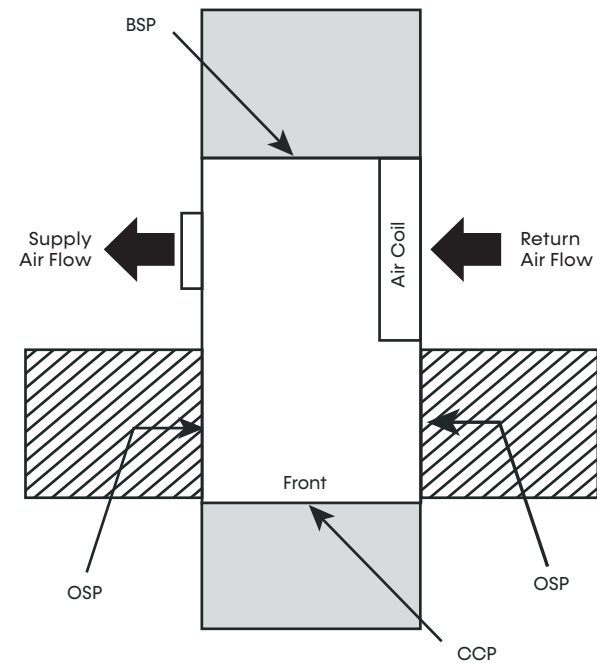

Notes:

1. While clear access to all removable panels is not required, installer should take care to comply with all building codes and allow adequate clearance for future field service.
2. CCP and BSP requires 2-feet of service access.
3. Blower service access is through back panel on straight discharge units or through panel opposite air coil on back discharge units.
4. OSP are removable panels that provide additional access to the units interior. Clear access to OSP panels is not required and they are not to be used in place of the mandatory CCP and BSP panels.

- = Mandatory Service Access 2-foot (61 cm)
- = Optional Service Access 2-foot (61 cm)

Legend:

- CCP = Control/Compressor Access
- BSP = Blower Service Panel
- OSP = Optional Service Panel (not required)

Models:
SR
006-060

Horizontal Installation

Figure 2: Horizontal Unit Pitch


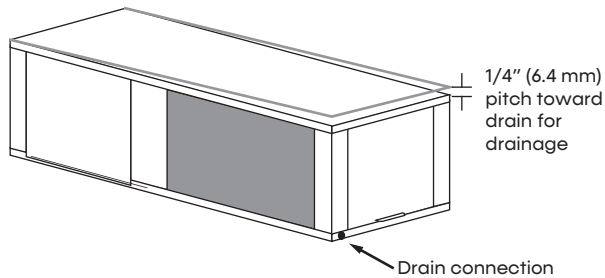


Figure 3: Typical Unit Installation

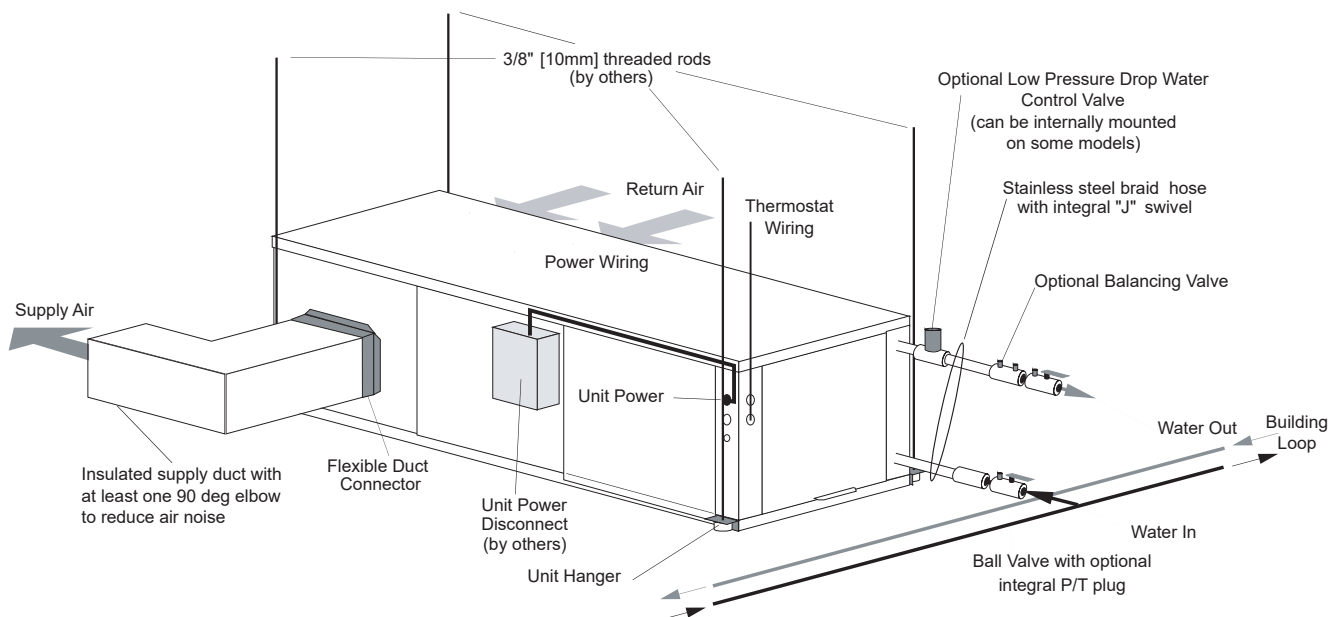

AIR COIL

To obtain maximum performance, the air coil should be cleaned before startup. A 10% solution of dishwasher detergent and water is recommended for both sides of the coil. A thorough water rinse should follow. **Do not use Ultraviolet-based anti-bacterial systems.**

NOTICE

Installation Note - Ducted Return: Many horizontal WSHPs are installed in a return air ceiling plenum application (above ceiling). Vertical WSHPs are commonly installed in a mechanical room with free return (e.g. louvered door). Filter rails are the industry standard and are included on commercial heat pumps only for holding the filter. For ducted return applications, the filter rail must be removed and replaced with a duct flange or filter frame. Canvas or flexible connectors should also be used to minimize vibration between the unit and ductwork.

Horizontal Installation

CONDENSATE PIPING

A condensate drain line must be installed and pitched away for the unit to allow for proper drainage. This connection must meet all local plumbing/building codes.

Pitch the unit toward the drain as shown in Figure 2 to improve the condensate drainage. On small units (less than 2.5 tons/8.8 kW), ensure that unit pitch does not cause condensate leaks inside the cabinet.

Install condensate trap at each unit with the top of the trap positioned below the unit condensate drain connection as shown in Figure 4. Design the depth of the trap (water-seal) based upon the amount of ESP capability of the blower (where 2-inches [51 mm] of ESP capability requires 2-inches [51 mm] of trap depth). As a general rule, 1½ inch [38 mm] trap depth is the minimum.

Each unit must be installed with its own individual trap and connection to the condensate line (main) or riser. Provide a means to flush or blow out the condensate line. **DO NOT** install units with a common trap and/or vent.

Always vent the condensate line when dirt or air can collect in the line or a long horizontal drain line is required. Also vent when large units are working against higher external static pressure than other units connected to the same condensate main since this may cause poor drainage for all units on the line. **WHEN A VENT IS INSTALLED IN THE DRAIN LINE, IT MUST BE LOCATED AFTER THE TRAP IN THE DIRECTION OF THE CONDENSATE FLOW.**

POLYMER DRAIN PANS


Condensate drain connection is a rubber coupling that connects to ¾-inch schedule 40/80 PVC. Use hose clamps to secure the pipe inside the coupling. If the connection is not secure, the connection may leak.

Instructions for coupling the condensate drain to the trap are included in the bag that includes the coupling and hose clamps.

STAINLESS STEEL DRAIN PANS

The condensate connection is female pipe thread. Field-provided male adapter required for condensate drain connection.

Figure 4: Horizontal Condensate Connection

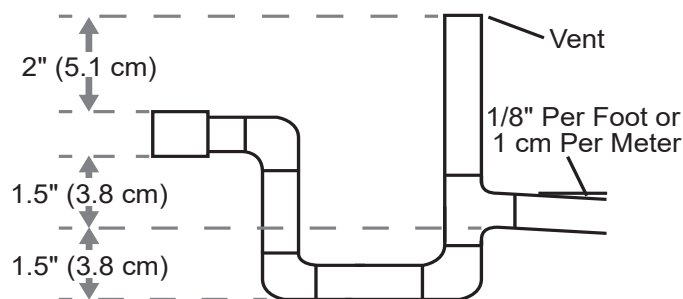

CAUTION

Ensure condensate line is pitched toward drain 1/8 inch per foot [11 mm per m] of run.

Models:
SR
006-060

Duct System Installation

DUCT SYSTEM INSTALLATION

Proper duct sizing and design is critical to the performance of the unit. The duct system should be designed to allow adequate and even airflow through the unit during operation. Air flow through the unit **MUST** be at or above the minimum rated airflow for a given unit size to avoid equipment damage. Duct systems should be designed for quiet operation. Refer to Figure 4 for horizontal duct system details or Figure 9 for vertical duct system details. A flexible connector is recommended for both discharge and return air duct connections on metal duct systems to eliminate the transfer of vibration to the duct system. To maximize sound attenuation of the unit blower, the supply and return plenums should include internal fiberglass duct liner or be constructed from ductboard for the first few feet. Application of the unit to uninsulated ductwork in an unconditioned space is not recommended, as the unit’s performance may be adversely affected.

At least one 90 degree elbow should be included in the supply duct to reduce air noise. If air noise or excessive air flow is a problem, the blower speed can be changed. For airflow charts, consult submittal data for the series and model of the specific unit.

If the unit is connected to existing ductwork, a previous check should have been made to ensure that the ductwork has the capacity to handle the airflow required for the unit. If ducting is too small, as in the replacement of a heating only system, a larger ductwork should be installed. All existing ductwork should be checked for leaks and repaired as necessary.

For water source heat humps connected via an air duct system to one of more rooms and containing R-454B, the supply and return air shall be directly ducted to the space. Open areas such as false ceilings shall not be used as a return air duct.

An unventilated area where water source heat pump is installed and surpasses a R-454B refrigerant charge of 62 oz (1.76 kg), shall be without continuously operating open flames (for example an operating gas appliance) or other **POTENTIAL IGNITION SOURCES** (for example an operating electric heater, hot surfaces).

Only auxiliary electric heaters approved by ClimateMaster shall be installed in connecting ductwork. The installation of any other auxiliary devices is beyond ClimateMaster’s responsibility.

For duct-connected units, false ceilings or drop ceilings may be used as a return air plenum as long as the ClimateMaster RDS is installed as shown in Figure 20.

⚠ WARNING

Ducts connected to an appliance shall not contain a **POTENTIAL IGNITION SOURCE**.

⚠ WARNING

Keep any required ventilation openings clear of obstruction.

⚠ WARNING

For mechanical ventilation, the lower edge of the air extraction opening where air is exhausted from the room shall not be more than 3.94 inches (100 mm) above the floor. The location where the mechanical ventilation air extracted from the space is discharged shall be separated by a sufficient distance, but not less than 9.84 feet (3 m), from mechanical ventilation air intake openings, to prevent recirculation to the space.

Field Conversion of Air Discharge

OVERVIEW

Horizontal unit blower assembly can be field converted between side (straight) and back (end) discharge using the instructions below.

NOTE: It is not possible to field convert return air between left or right return models due to the necessity of refrigeration copper piping changes.

PREPARATION

It is best to field convert the unit discharge configuration on the ground before hanging. If the unit is already hung it should be taken down for the field conversion.

SIDE-TO-BACK DISCHARGE CONVERSION

1. Place unit in well lit area. Remove the screws as shown in Figure 5 to free top panel and discharge panel.
2. Lift out the access panel and set aside. Lift and rotate the discharge panel to the other position as shown, being careful with the blower wiring.
3. Check blower wire routing and connections for tension or contact with sheet metal edges. Re-route if necessary.
4. Check refrigerant tubing for contact with other components.
5. Reinstall top panel and screws noting that the location for some screws will have changed.
6. Manually spin the fan wheel to ensure that the wheel is not rubbing or obstructed.
7. Replace access panels.

BACK-TO-SIDE DISCHARGE CONVERSION

If the discharge is changed from back to side, use above instruction noting that illustrations are reversed.

LEFT VERSUS RIGHT RETURN

It is not possible to field convert return air between left or right return models due to the necessity of refrigeration copper piping changes. However, the conversion process of side-to-back or back-to-side discharge for either right or left return configuration is the same. In some cases, it may be possible to rotate the entire unit 180 degrees if the return air connection needs to be on the opposite side. **NOTE: rotating the unit moves the piping to the other end of the unit.**

Figure 5: Left Return – Side-to-Back




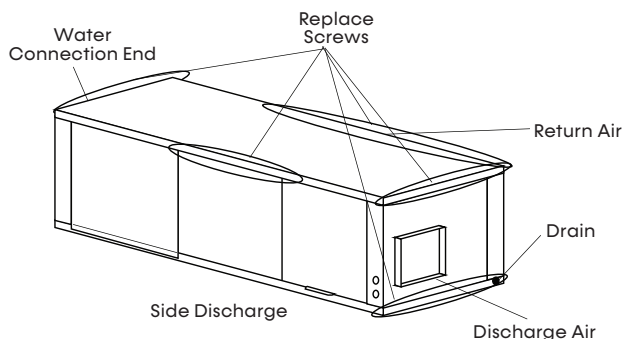


Figure 6: Right Return – Side-to-Back

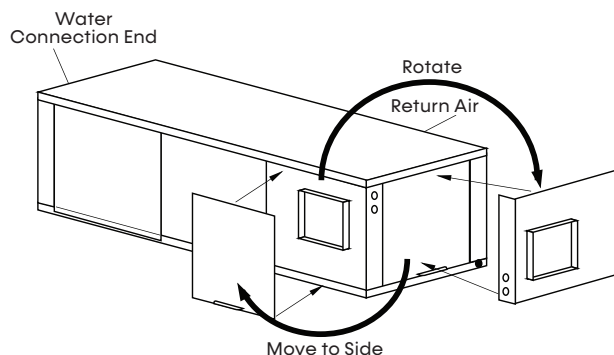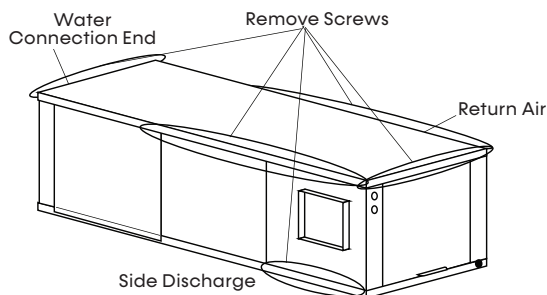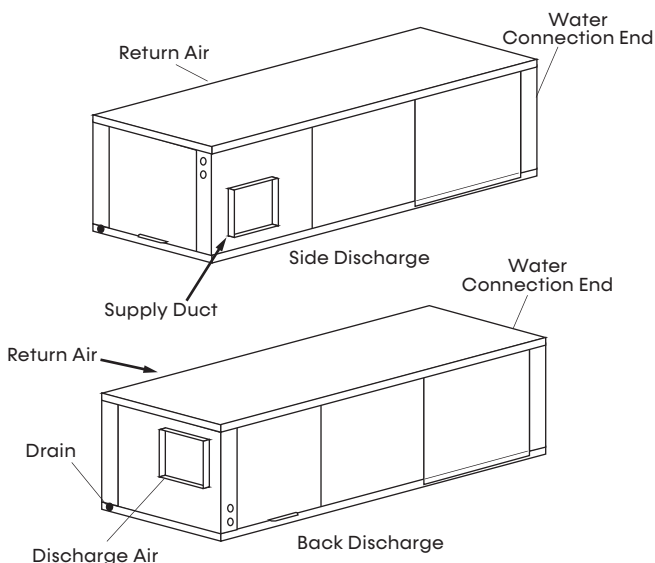

Models:
SR
006-060

Vertical Installation

VERTICAL UNIT LOCATION

Units are not designed for outdoor installation. Locate the unit in an INDOOR area that allows enough space for service personnel to perform typical maintenance or repairs without removing unit from the mechanical room/closet. Never install units in areas subject to freezing or where humidity levels could cause cabinet condensation (such as unconditioned spaces subject to 100% outside air). Consideration should be given to access for easy removal of the filter and access panels. Provide sufficient room to make water, electrical, and duct connection(s). **NOTE: Minimum clearances for installation are the same as the minimum required service clearances. Consult the service clearances on for reference of installation clearances.**

If the unit is located in a confined space, such as a closet, provisions must be made for return air to freely enter the space by means of a louvered door, etc. Any access panel screws that would be difficult to remove after the unit is installed should be removed prior to setting the unit. Refer to for typical installation illustrations. Refer to submittal data or the engineering design guide for dimensional data.

1. Install the unit on a piece of rubber, neoprene, or other mounting pad material for sound isolation. The pad should be at least 3/8-inch [10 mm] to 1/2-inch [13 mm] in thickness. The vibration isolation pad should cover the entire base of the unit and slightly extend past all four edges of the base.
2. Provide adequate clearance for filter replacement and drain pan cleaning. Do not block filter access with piping, conduit or other materials. Refer to unit submittal data or engineering design guide for dimensional data.
3. Provide access for fan and fan motor maintenance and for servicing the compressor and coils without removing the unit.
4. Provide an unobstructed path to the unit within the closet or mechanical room. Space should be sufficient to allow removal of the unit, if necessary.
5. In limited side access installations, pre-removal of the control box side mounting screws will allow control box removal for future servicing.
6. Provide access to water valves and fittings and screwdriver access to the unit side panels, discharge collar and all electrical connections.

Figure 7: Vertical Unit Mounting


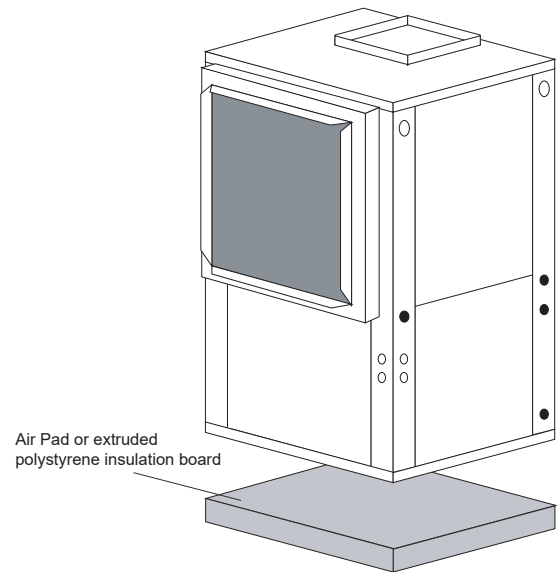


Figure 8: Typical Vertical Unit Installation Using Ducted Return Air

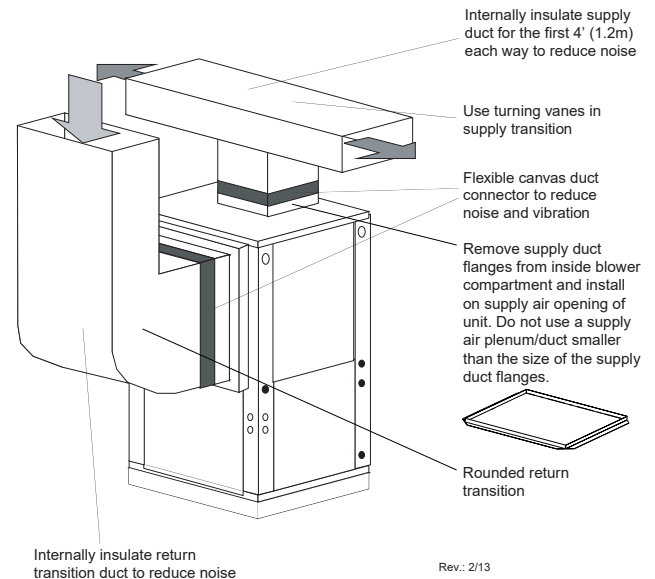

NOTICE

Installation Note - Ducted Return: Many horizontal WSHPs are installed in a return air ceiling plenum application (above ceiling). Vertical WSHPs are commonly installed in a mechanical room with free return (e.g. louvered door). Filter rails are the industry standard and are included on commercial heat pumps only for holding the filter. For ducted return applications, the filter rail must be removed and replaced with a duct flange or filter frame. Canvas or flexible connectors should also be used to minimize vibration between the unit and ductwork.


Vertical Installation

SOUND ATTENUATION FOR VERTICAL UNITS

Sound attenuation is achieved by enclosing the unit within a small mechanical room or a closet. Additional measures for sound control include the following:

1. Mount the unit so that the return air inlet is 90 degrees to the return air grille. Refer to . Install a sound baffle as illustrated to reduce line-of-sight sound transmitted through return air grilles.
2. Mount the unit on a rubber or neoprene isolation pad to minimize vibration transmission to the building structure.

Figure 9: Vertical Sound Attenuation

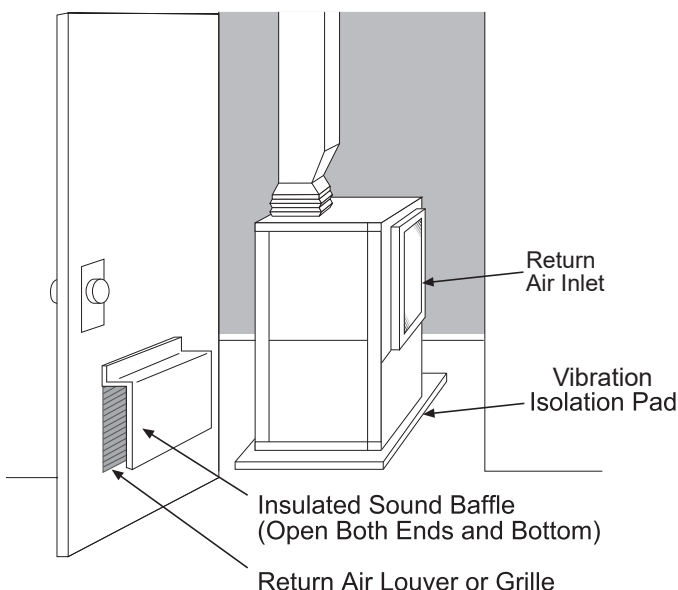

CONDENSATE PIPING FOR VERTICAL UNITS

A condensate line must be installed and pitched away from the unit to allow for proper drainage. This connection must meet all local plumbing and building codes.

Install condensate trap at each unit with the top of the trap positioned below the unit condensate drain connection. Design the depth of the trap (water-seal) based upon the amount of ESP capability of the blower (where 2-inches [51 mm] of ESP capability requires 2-inches [51 mm] of trap depth). As a general rule, 1-½ inches [38 mm] of trap depth is the minimum.


Always vent the condensate line when dirt or air can collect in the line or a long horizontal drain line is required. Also vent when large units are working against higher external static pressure than other units connected to the same condensate main since this may cause poor drainage for all units on the line. **WHEN A VENT IS INSTALLED IN THE DRAIN LINE, IT MUST BE LOCATED AFTER THE TRAP IN THE DIRECTION OF THE CONDENSATE FLOW.**

Each unit must be installed with its own individual vent (where necessary) and a means to flush or blow out the condensate drain line. Do not install units with a common trap and/or vent.

Condensate drain connection is a rubber coupling that couples to ¾-inch schedule 40/80 PVC. Use hose clamps to secure the pipe inside the coupling. If the connection is not secure, the connection may leak.

Instructions for coupling the condensate drain to the trap are included in the bag that includes the coupling and hose clamps.

Figure 10: Vertical Condensate Drain

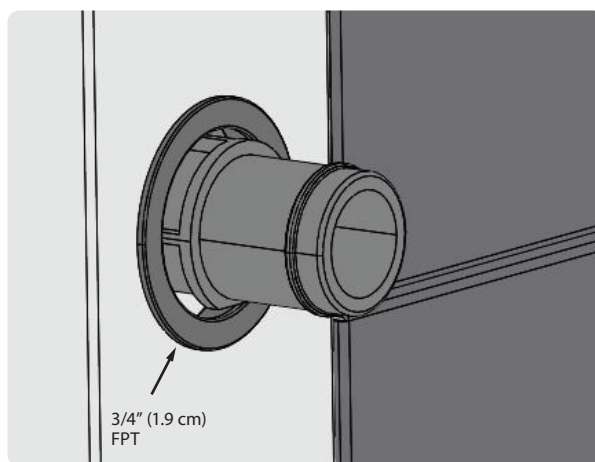


Models:
SR
006-060


Vertical Installation: Service Access

Vertical Units

Left Return

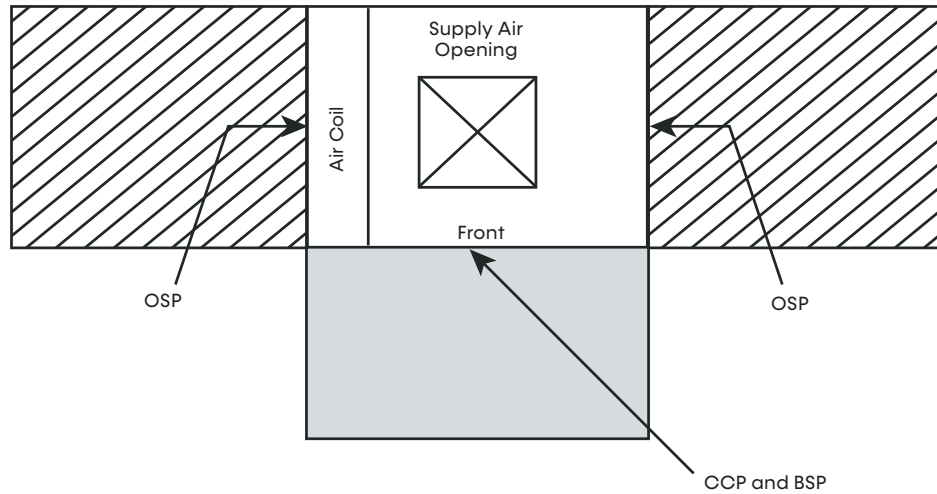

Right Return

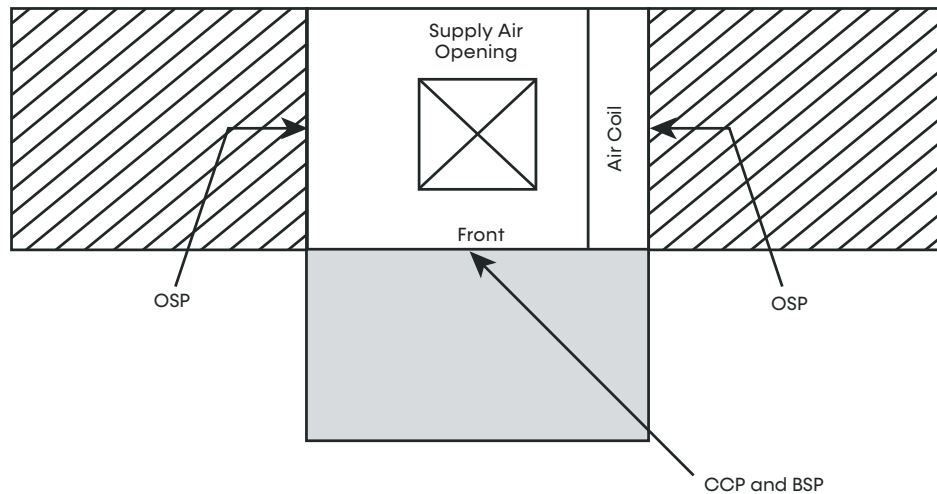

Notes:

1. While clear access to all removable panels is not required, installer should take care to comply with all building codes and allow adequate clearance for future field service.
2. Front and side access is preferred for service access. However, all components may be serviced from the front access panel if side access is not available.
3. OSP are removable panels that provide additional access to the units interior. Clear access to OSP panels is not required and they are not to be used in place of the mandatory CCP and BSP panels.
4. Top supply air is shown, the same clearances apply to bottom supply air units.

 = Mandatory Service Access 2-foot (61 cm)

 = Optional Service Access 2-foot (61 cm)

Legend:

CCP = Control/Compressor Access

BSP = Blower Service Panel

Piping Installation

INSTALLATION SUPPLY AND RETURN PIPING

Follow these piping guidelines:

1. Install a drain valve at the base of each supply and return riser to facilitate system flushing.
2. Install shut-off/balancing valves and unions at each unit to permit unit removal for servicing.
3. Place strainers at the inlet of each system circulating pump.
4. Select the proper hose length to allow slack between connection points. Hoses may vary in length by +2% to -4% under pressure.
5. Refer to Table 2. Do not exceed the minimum bend radius for the hose selected. Exceeding the minimum bend radius may cause the hose to collapse, which reduces water flow rate. Install an angle adapter to avoid sharp bends in the hose when the radius falls below the required minimum.

Insulation is not required on loop water piping except where the piping runs through unheated areas, outside the building or when the loop water temperature is below the minimum expected dew point of the pipe ambient conditions. Insulation is required if loop water temperature drops below the dew point (insulation is required for ground loop applications in most climates).

Pipe joint compound is not necessary when water thread sealant tape is pre-applied to hose assemblies or when flared-end connections are used. If pipe joint compound is preferred, use compound only in small amounts on the external pipe threads of the fitting adapters. Prevent sealant from reaching the flared surfaces of the joint.

NOTE: When antifreeze is used in the water loop, ensure that it is compatible with the thread-sealant tape or pipe-joint compound that is applied.

Maximum allowable torque for brass fittings is 30 ft-lbs [41 N-m]. If a torque wrench is not available, tighten finger-tight plus one quarter turn. Tighten steel fittings as necessary.

Optional pressure-rated hose assemblies designed specifically for use with ClimateMaster units are available. Similar hoses can be obtained from alternate suppliers. Supply and return hoses are fitted with swivel-joint fittings at one end to prevent kinking during installation.

The figure below illustrates a typical supply/return hose kit. Adapters secure hose assemblies to the unit and risers. Install hose assemblies properly and check regularly to avoid system failure and reduced service life.

⚠ WARNING

Polyolester Oil, commonly known as POE oil, is a synthetic oil used in many refrigeration systems including those with R-454B refrigerant. POE oil, if it ever comes in contact with PVC or CPVC piping, may cause failure of the PVC/CPVC. PVC/CPVC piping should never be used as supply or return water piping with water source heat pump products containing R-454B as system failures and property damage may result.

⚠ CAUTION

Corrosive system water requires corrosion resistant fittings and hoses, and may require water treatment.

⚠ CAUTION

Do not bend or kink supply lines or hoses.

⚠ CAUTION

Piping must comply with all applicable codes.


⚠ NOTICE

Do not allow hoses to rest against structural building components. Compressor vibration may be transmitted through the hoses to the structure, causing unnecessary noise complaints.

Table 2: Metal Hose Minimum Bend Radii

Hose Diameter	Minimum Bend Radii
1/2" [12.7 mm]	2-1/2" [6.4 cm]
3/4" [19.1 mm]	4" [10.2 cm]
1" [25.4 mm]	5-1/2" [14 cm]
1-1/4" [31.8 mm]	6-3/4" [17.1 cm]

Figure 11: Supply/Return Hose Kit

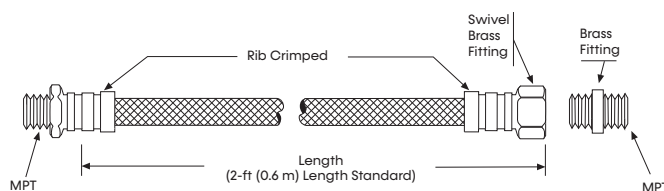

Water-Loop Heat Pump Applications

COMMERCIAL WATER LOOP APPLICATIONS

Commercial systems typically include a number of units connected to a common piping system. Any unit plumbing maintenance work can introduce air into the piping system; therefore air elimination equipment is a major portion of the mechanical room plumbing. Consideration should be given to insulating the piping surfaces to avoid condensation. ClimateMaster recommends piping insulation any time the water temperature is below 60°F (15.6°C). Metal to plastic threaded joints should never be used due to their tendency to leak over time.

Water thread sealant tape thread sealant is recommended to minimize internal fouling of the heat exchanger. Do not over tighten connections and route piping so as not to interfere with service or maintenance access. Hose kits are available from ClimateMaster in different configurations for connection between the unit and the piping system. Depending upon selection, hose kits may include shut off valves, P/T plugs for performance measurement, high pressure stainless steel braided hose, "Y" type strainer with blow down valve, and/or with blow down valve, auto-flow valve and swivel connections.

The piping system should be flushed to remove dirt, piping chips, and other foreign material prior to operation (see Piping System Cleaning and Flushing in this manual). The flow rate is usually set between 2.25 and 3.5 gpm per ton (2.9 and 4.5 l/m per kW) of cooling capacity. ClimateMaster recommends 3 gpm per ton (3.9 l/m per kW) for most water-loop heat pump applications. To ensure proper maintenance and servicing, P/T ports are imperative for temperature, flow verification, and performance checks.

Water-loop heat pump (cooling tower/boiler) systems typically utilize a common loop, maintained between 60 - 90°F (16 - 32°C). The use of a closed circuit evaporative cooling tower with a secondary heat exchanger between the tower and the water loop is recommended. If an open type cooling tower is used continuously, chemical treatment and filtering will be necessary.

Ground-Loop Heat Pump Application

CAUTION

The following instructions represent industry accepted installation practices for closed loop earth coupled heat pump systems. Instructions are provided to assist the contractor in installing trouble free ground loops. These instructions are recommendations only. State/provincial and local codes MUST be followed and installation MUST conform to ALL applicable codes. It is the responsibility of the installing contractor to determine and comply with ALL applicable codes and regulations.

CAUTION

Ground loop applications require extended range equipment and optional refrigerant/water circuit insulation.

Test individual horizontal loop circuits before backfilling. Test vertical U-bends and pond loop assemblies prior to installation. Pressures of at least 100 psi (689 kPa) should be used when testing. Do not exceed the pipe pressure rating. Test entire system when all loops are assembled.

PRE-INSTALLATION

Prior to installation, locate and mark all existing underground utilities, piping, etc. Install loops for new construction before sidewalks, patios, driveways, and other construction has begun. During construction, accurately mark all ground loop piping on the plot plan as an aid in avoiding potential future damage to the installation.

PIPING INSTALLATION

All earth loop piping materials should be limited to polyethylene fusion only for in-ground sections of the loop. Galvanized or steel fittings should not be used at any time due to their tendency to corrode. All plastic to metal threaded fittings should be avoided due to their potential to leak in earth coupled applications. A flanged fitting should be substituted. P/T plugs should be used so that flow can be measured using the pressure drop of the unit heat exchanger.

Earth loop temperatures can range between 25 and 110°F (-4 to 43°C). Flow rates between 2.25 and 3 gpm (2.41 to 3.23 l/m per kW) of cooling capacity is recommended in these applications.

FLUSHING THE EARTH LOOP

Upon completion of system installation and testing, flush the system to remove all foreign objects and purge to remove all air.

ANTIFREEZE

In areas where minimum entering loop temperatures drop below 40°F (5°C) or where piping will be routed through areas subject to freezing, antifreeze is required. Alcohols and glycols are commonly used as antifreeze; however your local sales office should be consulted to determine the antifreeze best suited to your area. Freeze protection should be maintained to 15°F (9°C) below the lowest expected entering loop temperature. For example, if 30°F (-1°C) is the minimum expected entering loop temperature, the leaving loop temperature would be 22 to 25°F (-6 to -4°C) and freeze protection should be at 15°F (-10°C).

Calculation is as follows:
30°F - 15°F = 15°F [-1°C - 9°C = -10°C].

All alcohols should be premixed and pumped from a reservoir outside of the building when possible or introduced under the water level to prevent fumes. Calculate the total volume of fluid in the piping system. Then use the percentage by volume shown in the table below for the amount of antifreeze needed. Antifreeze concentration should be checked from a well mixed sample using a hydrometer or refractometer to measure specific gravity.

Table 3: Antifreeze Percentages by Volume


Type	Minimum Antifreeze Concentration % for Low Temperature Protection			
	10°F [-12.2°C]	15°F [-9.4°C]	20°F [-6.7°C]	25°F [-3.9°C]
Methanol	25%	21%	16%	10%
100% USP food grade Propylene Glycol	38%	25%	22%	15%
Ethanol*	29%	25%	20%	14%

* Must not be denatured with any petroleum based product

Models:
SR
006-060

Ground-Loop Heat Pump Applications

Figure 12: Typical Ground-Loop Application

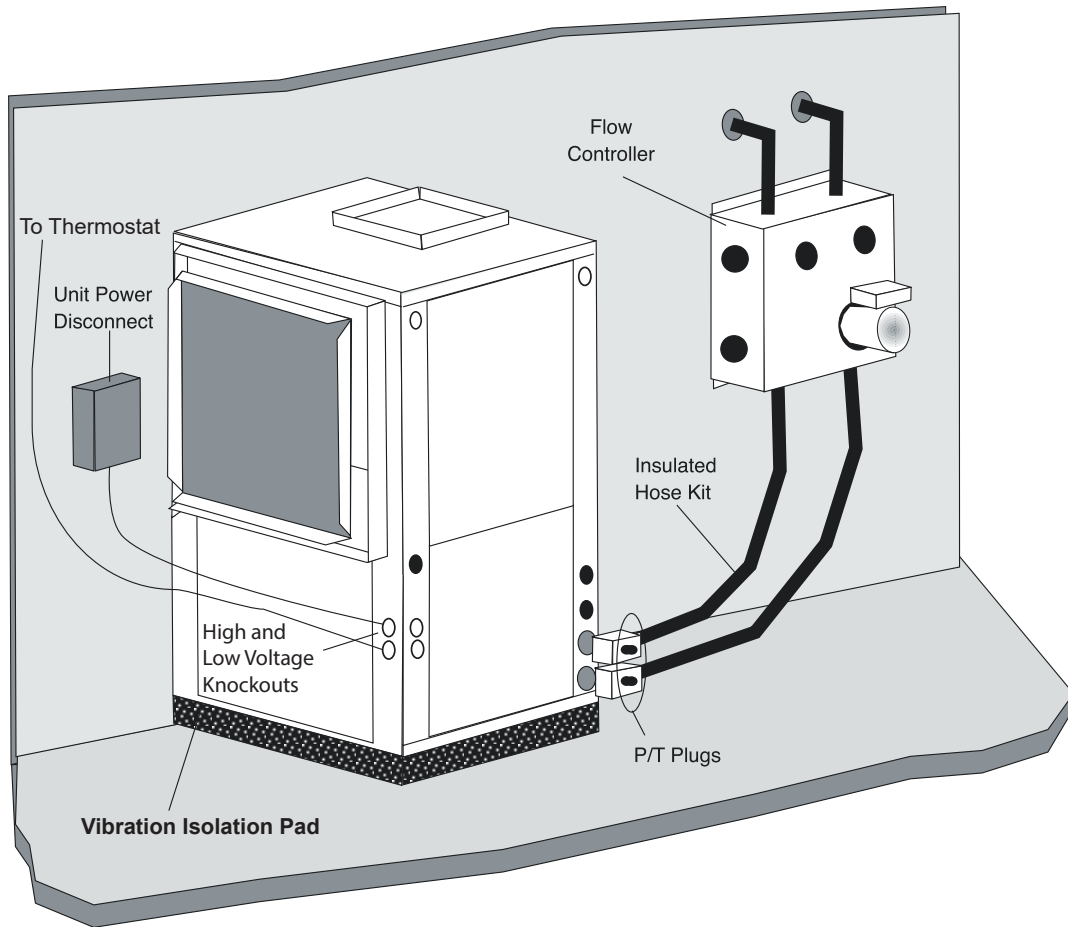

Water Quality Requirements

Table 4: Water Quality Requirements

Clean water is essential to the performance and life span of water source heat pumps. Contaminants, chemicals, and minerals all have the potential to cause damage to the water heat exchanger if not treated properly. All closed-loop water systems should undergo water quality testing and be maintained to the water quality standards listed in this table. All open-loop water systems shall be tested upon installation and periodically to ensure water quality standard in the table below are met.

Water Quality Requirements For Closed-Loop and Open-Loop Systems							
	Description	Symbol	Units	Heat Exchanger Type			
				Closed Loop Recirculating		Open Loop, Tower, Ground Source Well	
				All Heat Exchanger Types	Coaxial HX Copper Tube in Tube	Coaxial HX Cupronickel	Brazed- Plate HX 316 SS
Scaling Potential	pH - Chilled Water <85°F			7.0 to 9.0	7.0 to 9.0	7.0 to 9.0	7.0 to 9.0
	pH - Chilled Water >85°F			8.0 to 10.0	8.0 to 10.0	8.0 to 10.0	8.0 to 10.0
	Alkalinity	(HCO ₃ ⁻)	ppm - CaCO ₃ equivalent	50 to 500	50 to 500	50 to 500	50 to 500
	Calcium	(Ca)	ppm	<100	<100	<100	<100
	Magnesium	(Mg)	ppm	<100	<100	<100	<100
	Total Hardness	(CaCO ₃)	ppm - CaCO ₃ equivalent	30 to 150	150 to 450	150 to 450	150 to 450
	Langelier Saturation Index	LSI		-0.5 to +0.5	-0.5 to +0.5	-0.5 to +0.5	-0.5 to +0.5
Ryznar Stability Index	RSI		6.5 to 8.0	6.5 to 8.0	6.5 to 8.0	6.5 to 8.0	
Corrosion Prevention	Total Dissolved Solids	(TDS)	ppm - CaCO ₃ equivalent	<1000	<1000	<1000	<1000
	Sulfate	(SO ₄ ²⁻)	ppm	<200	<200	<200	<200
	Nitrate	(NO ₃ ⁻)	ppm	<100	<100	<100	<100
	Chlorine (free)	(Cl)	ppm	<0.5	<0.5	<0.5	<0.5
	Chloride (water < 80°F)	(Cl ⁻)	ppm	<20	<20	<150	<150
	Chloride (water > 120°F)	(Cl ⁻)	ppm	<20	<20	<125	<125
	Hydrogen Sulfide ^a	(H ₂ S)	ppb	<0.5	<0.5	<0.5	<0.5
	Carbon Dioxide	(CO ₂)	ppm	0	<50	10 to 50	10 to 50
	Iron Oxide	(Fe)	ppm	<1.0	<1.0	<1.0	<0.2
	Manganese	(Mn)	ppm	<0.4	<0.4	<0.4	<0.4
	Ammonia	(NH ₃)	ppm	<0.05	<0.1	<0.1	<0.1
	Chloramine	(NH ₂ CL)	ppm	0	0	0	0
Fouling & Biological	Iron bacteria		cells/mL	0	0	0	0
	Slime-forming bacteria		cells/mL	0	0	0	0
	Sulfate-reducing bacteria		cells/mL	0	0	0	0
	Suspended Solids ^b	(TSS)	ppm	<10	<10	<10	<10
Electrolysis All HX types	Earth Ground Resistance ^x		Ohms		Consult NEC and local electrical codes for grounding requirements		
	Electrolysis Voltage ^d		mV		Measure voltage and internal water loop to HP ground		
	Leakage Current ^e		mA		Measure current in water loop pipe		
	Building Primary Electrical Ground to unit, must meet local diameter and penetration length requirements. Do not connect heat pump to steel pipe unless dissimilar materials are separated by using Di-electric unions. Galvanic corrosion of heat pump water pipe will occur						

Models:
SR
006-060

Water Quality Requirements

1. The ClimateMaster Water Quality Table provides water quality requirements for coaxial and brazed plate heat exchangers.
2. The water must be evaluated by an independent testing facility comparing site samples against this table. When water properties are outside of these parameters, the water must either be treated by a professional water treatment specialist to bring the water quality within the boundaries of this specification, or an external secondary heat exchanger must be used to isolate the heat pump water system from the unsuitable water. Failure to do so will void the warranty of the heat pump system and will limit liability for damage caused by leaks or system failure.
3. Regular sampling, testing and treatment of the water is necessary to assure that the water quality remains within acceptable levels thereby allowing the heat pump to operate at optimum levels.
4. If closed-loop systems are turned off for extended periods, water samples must be tested prior to operating the system.
5. For optimal performance, it is recommended that the closed-loop piping systems are initially filled with de-ionized water.
6. Well water with chemistry outside of these boundaries, and salt water or brackish water requires an external secondary heat exchanger. Surface/Pond water should not be used.
7. If water temperature is expected to fall below 40°F (4.4°C), antifreeze is required. Refer to the heat pump IOM for the correct solution ratios to prevent freezing.
 - α Hydrogen Sulfide has an odor of rotten eggs. If one detects this smell, a test for H₂S must be performed. If H₂S is detected above the limit indicated, remediation is necessary (Consult with your Water Testing/Treatment Professional) or a secondary heat exchanger is required using appropriate materials as recommended by the heat exchanger supplier.
 - β Suspended solids and particulates must be filtered to prevent fouling and failure of heat exchangers. Strainers or particulate filters must be installed to provide a maximum particle size of 600 micron (0.60 mm, 0.023 inch) using a 20 to 30 mesh screen size. When a loop is installed in areas with fine material such as sand or clay, further filtration is required to a maximum of 100 micron. Refer to the Strainer / Filter Sizing Chart to capture the particle sizes encountered on the site.
 - χ The WSHP piping system or other plumbing pipes must not be used as the building ground. An electrical grounding system using a dedicated ground rod meeting NEC and local electrical codes must be installed.
 - δ Refer to Table 3: Antifreeze Percentages by Volume for instructions on measuring resistance and leakage currents within water loops.

Strainer / Filter Sizing


Mesh Size	Particle Size		
	Microns	MM	Inch
20	840	0.840	0.0340
30	533	0.533	0.0210
60	250	0.250	0.0100
100	149	0.149	0.0060
150	100	0.100	0.0040
200	74	0.074	0.0029

ppm = parts per million
ppb = parts per billion

Water Quality Requirements

Models:
SR
006-060

Measuring Earth Ground Resistance for Ground-Water Applications

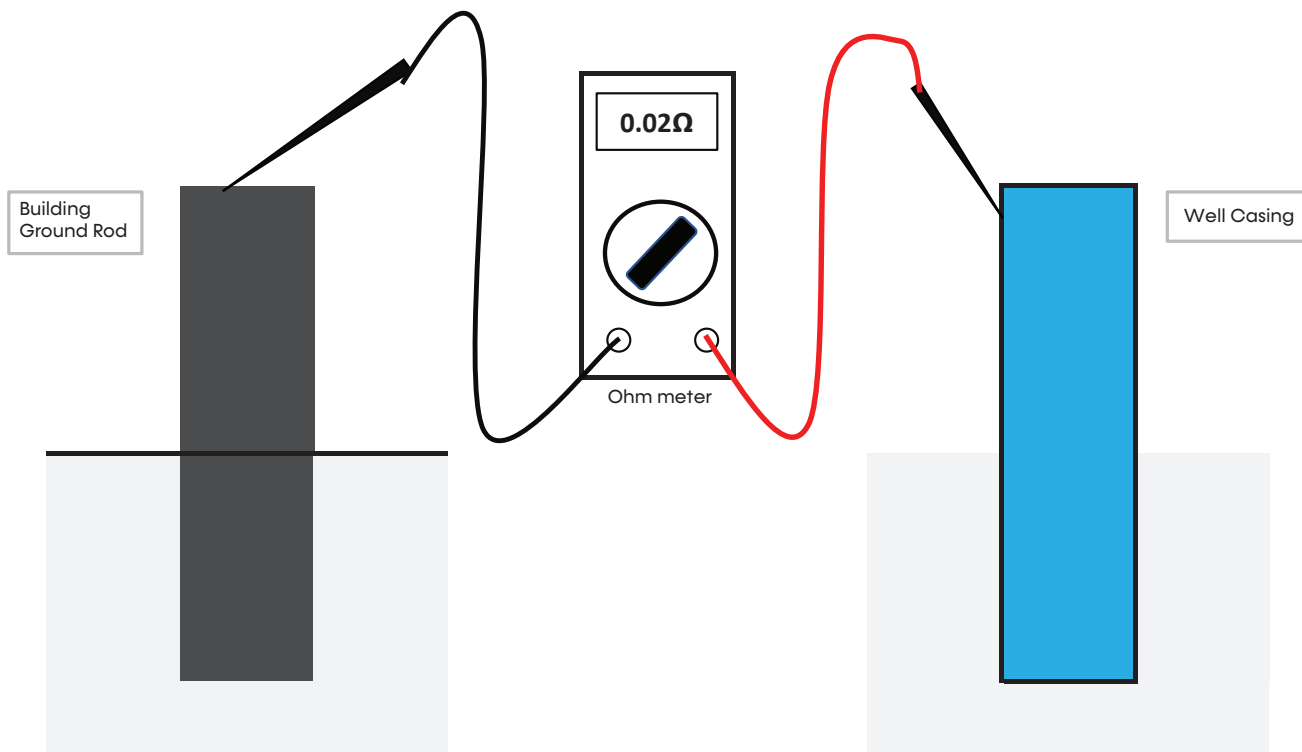


Measure the earth ground bond using an Ohm meter between the building's ground rod and the steel well casing.

The resistance measured should be zero Ohms. The NEC allows a resistance to ground up to 20 Ohms. Any resistance above zero indicates a poor earth ground, which may be the result of a hot neutral line or that conductive water is present. Both of these may lead to electrolysis and corrosion of the heat pump piping. A check for both should be performed and resolved.

NOTE: If the well casing is plastic, a conductive path can be achieved by inserting a #6 AWG bare copper wire into the well water. Remove the temporary conductor when finished.

Water Quality Requirements

Measuring Electrolysis, Voltage, and Current for Ground-Water Applications

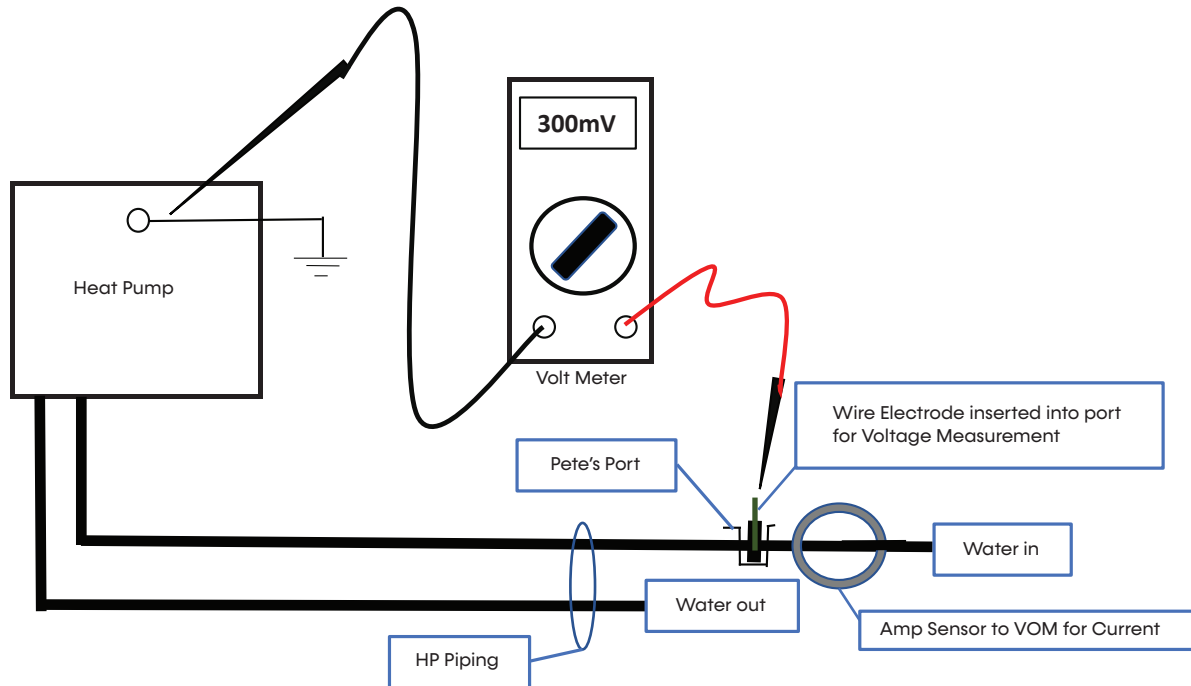

Measure the electrolysis voltage using a volt meter between the heat pump ground and a #14 AWG solid copper wire electrode inserted into the water using a Pete's style access port.

The heat pump must be operating and the water stream flowing.

The voltage measured should be less than 300mV (0.300V). If the voltage is higher than 500mV, electrolysis will occur and corrosion will result.

If voltage is measured, the cause is a high-resistance earth ground or current on the neutral conductor. Remedial measures should be performed.

Measure the current flowing through the piping system by using an amp clamp probe on the water-in line. The heat pump must be operating and the water stream flowing.

There should be zero amps measured. If current is present, there is leakage current to the plumbing system and it must be rectified to prevent pipe corrosion.

Electrical Data: PSC Blower Motor Standard Unit

Models:
SR
006-060

MODEL	VOLTAGE CODE	VOLTAGE	VOLTAGE MIN/MAX	COMPRESSOR			FAN MOTOR FLA	TOTAL UNIT FLA	MIN CIRCUIT AMP	FUSE/HACR AMP	
				QTY	RLA	LRA					
SR*006	G.J.	208/230-1-60	187/252	1	2.5	17.7	0.3	2.8	3.4	15	
	E.D.	265-1-60	249/291	1	2.2	10.5	0.4	2.6	3.2	15	
SR*009	G.J.	208/230-1-60	187/252	1	3.6	22.2	0.8	4.4	5.3	15	
	E.D.	265-1-60	249/291	1	3.1	13.5	0.8	3.9	4.7	15	
SR*012	G.J.	208/230-1-60	187/252	1	5.6	32.5	0.8	6.4	7.8	15	
	E.D.	265-1-60	249/291	1	4.0	23.0	0.8	4.8	5.8	15	
SR*015	G.J.	208/230-1-60	187/252	1	10.6	33.0	0.9	11.5	14.2	25	
	E.D.	265-1-60	249/291	1	5.5	37.0	0.7	6.2	7.6	15	
SR*018	G.J.	208/230-1-60	187/252	1	13.3	35.0	0.9	14.2	17.5	30	
	E.D.	265-1-60	249/291	1	6.5	40.0	0.7	7.2	8.8	15	
SR*024	G.J.	208/230-1-60	187/252	1	11.4	64.4	1.5	12.9	15.8	25	
	E.D.	265-1-60	249/291	1	10.3	60.5	1.2	11.5	14.1	20	
	H.K.	208/230-3-60	187/252	1	7.7	59.9	1.5	9.2	11.1	15	
	F.L.	460-3-60*	432/504	1	3.8	32.4	0.8	4.6	5.5	15	
SR*030	G.J.	208/230-1-60	187/252	1	12.7	75.6	2.7	15.4	18.6	30	
	H.K.	208/230-3-60	187/252	1	9.6	67.7	2.7	12.3	14.7	20	
SR*036	F.L.	460-3-60*	432/504	1	4.5	38.1	1.6	6.1	7.2	15	
	G.J.	208/230-1-60	187/252	1	14.4	86.0	2.6	17.0	20.6	30	
SR*042	H.K.	208/230-3-60	187/252	1	9.0	70.0	2.6	11.6	13.9	20	
	F.L.	460-3-60*	432/504	1	4.1	39.0	1.2	5.3	6.3	15	
	G.J.	208/230-1-60	187/252	1	17.3	123.0	2.7	20.0	24.3	40	
SR*048	H.K.	208/230-3-60	187/252	1	12.8	102.8	2.7	15.5	18.7	30	
	F.L.	460-3-60*	432/504	1	5.8	48.5	1.6	7.4	8.9	15	
	N.M.	575-3-60	540/630	1	5.1	41.0	1.4	6.5	7.8	15	
	G.J.	208/230-1-60	187/252	1	22.4	126.0	3.3	25.7	31.3	50	
SR*060	H.K.	208/230-3-60	187/252	1	12.8	120.4	3.3	16.1	19.3	30	
	F.L.	460-3-60*	432/504	1	6.0	49.4	1.7	7.7	9.2	15	
	N.M.	575-3-60	540/630	1	5.8	41.0	1.4	7.2	8.7	15	
	G.J.	208/230-1-60	187/252	1	23.7	157.0	4.8	28.5	34.4	50	
SR*060	H.K.	208/230-3-60	187/252	1	16.0	156.4	4.8	20.8	24.8	40	
	F.L.	460-3-60*	432/504	1	7.1	58.0	2.4	9.5	11.3	15	
	N.M.	575-3-60	540/630	1	6.4	48.0	1.8	8.2	9.8	15	

Notes:
• All fuses Class RK-5.

Models:
SR
006-060

Electrical Data: PSC Blower Motor with Internal Secondary Pump

MODEL	VOLTAGE CODE	VOLTAGE	VOLTAGE MIN/MAX	COMPRESSOR			PUMP FLA	FAN MOTOR FLA	TOTAL UNIT FLA	MIN CIRCUIT AMP	FUSE/HACR AMP
				QTY	RLA	LRA					
SR*006	G.J.	208/230-1-60	187/252	1	2.5	17.7	0.4	0.3	3.2	3.8	15
	E.D.	265-1-60	249/291	1	2.2	10.5	0.7	0.4	3.3	3.9	15
SR*009	G.J.	208/230-1-60	187/252	1	3.6	22.2	0.4	0.8	4.8	5.7	15
	E.D.	265-1-60	249/291	1	3.1	13.5	0.7	0.8	4.6	5.4	15
SR*012	G.J.	208/230-1-60	187/252	1	5.6	32.5	0.8	0.8	7.2	8.6	15
	E.D.	265-1-60	249/291	1	4.0	23.0	0.7	0.8	5.5	6.5	15
SR*015	G.J.	208/230-1-60	187/252	1	10.6	33.0	0.8	0.9	12.3	15.0	25
	E.D.	265-1-60	249/291	1	5.5	37.0	0.7	0.7	6.9	8.3	15
SR*018	G.J.	208/230-1-60	187/252	1	13.3	35.0	0.8	0.9	15.0	18.3	30
	E.D.	265-1-60	249/291	1	6.5	40.0	0.7	0.7	7.9	9.5	15
SR*024	G.J.	208/230-1-60	187/252	1	11.4	64.4	0.8	1.5	13.7	16.6	25
	E.D.	265-1-60	249/291	1	10.3	60.5	0.7	1.2	12.2	14.8	25
	H.K.	208/230-3-60	187/252	1	7.7	59.9	0.8	1.5	10.0	11.9	15
	F.L.	460-3-60*	432/504	1	3.8	32.4	0.7	0.8	5.3	6.2	15
SR*030	G.J.	208/230-1-60	187/252	1	12.7	75.6	0.8	2.7	16.2	19.4	30
	H.K.	208/230-3-60	187/252	1	9.6	67.7	0.8	2.7	13.1	15.5	25
	F.L.	460-3-60*	432/504	1	4.5	38.1	0.7	1.6	6.8	7.9	15
SR*036	G.J.	208/230-1-60	187/252	1	14.4	86.0	0.8	2.6	17.8	21.4	30
	H.K.	208/230-3-60	187/252	1	9.0	70.0	0.8	2.6	12.4	14.7	20
	F.L.	460-3-60*	432/504	1	4.1	39.0	0.7	1.2	6.0	7.0	15
SR*042	G.J.	208/230-1-60	187/252	1	17.3	123.0	0.8	2.7	20.8	25.1	40
	H.K.	208/230-3-60	187/252	1	12.8	102.8	0.8	2.7	16.3	19.5	30
	F.L.	460-3-60*	432/504	1	5.8	48.5	0.7	1.6	8.1	9.6	15
SR*048	G.J.	208/230-1-60	187/252	1	22.4	126.0	1.1	3.3	26.8	32.4	50
	H.K.	208/230-3-60	187/252	1	12.8	120.4	1.1	3.3	17.2	20.4	30
	F.L.	460-3-60*	432/504	1	6.0	49.4	1.3	1.7	9.0	10.5	15
SR060	G.J.	208/230-1-60	187/252	1	23.7	157.0	1.1	4.8	29.6	35.5	50
	H.K.	208/230-3-60	187/252	1	16.0	156.4	1.1	4.8	21.9	25.9	40
	F.L.	460-3-60*	432/504	1	7.1	58.0	1.3	2.4	10.8	12.6	15

Notes:
• All fuses Class RK-5.

Electrical Data: EC Blower Motor Standard Unit

Models:
SR
006-060

MODEL	SR Electrical Table						(CT) EC*				(CV) EC			
	VOLTAGE CODE	VOLTAGE	VOLTAGE MIN/MAX	COMPRESSOR			FAN MOTOR FLA	TOTAL UNIT FLA	MIN CIRCUIT AMP	FUSE/HACR AMP	FAN MOTOR FLA	TOTAL UNIT FLA	MIN CIRCUIT AMP	FUSE/HACR AMP
				QTY	RLA	LRA								
SR*006	G.J.	208/230-1-60	187/252	1	2.5	17.7	2.3	4.8	5.4	15	1.5	4.0	4.6	15
	E.D.	265-1-60	249/291	1	2.2	10.5	2.3	4.5	5.1	15	1.4	3.6	4.2	15
SR*009	G.J.	208/230-1-60	187/252	1	3.6	22.2	2.3	5.9	6.8	15	1.5	5.1	6.0	15
	E.D.	265-1-60	249/291	1	3.1	13.5	2.3	5.4	6.2	15	1.4	4.5	5.3	15
SR*012	G.J.	208/230-1-60	187/252	1	5.6	32.5	2.3	7.9	9.3	15	2.6	8.2	9.6	15
	E.D.	265-1-60	249/291	1	4.0	23.0	2.3	6.3	7.3	15	2.5	6.5	7.5	15
SR*015	G.J.	208/230-1-60	187/252	1	10.6	33.0	2.6	13.2	15.9	25	2.6	13.2	15.9	25
	E.D.	265-1-60	249/291	1	5.5	37.0	1.9	7.4	8.8	15	2.4	7.9	9.3	15
SR*018	G.J.	208/230-1-60	187/252	1	13.3	35.0	2.6	15.9	19.2	30	2.6	15.9	19.2	30
	E.D.	265-1-60	249/291	1	6.5	40.0	1.9	8.4	10.0	15	2.1	8.6	10.2	15
SR*024	G.J.	208/230-1-60	187/252	1	11.4	64.4	3.9	15.3	18.2	25	4.2	15.6	18.5	25
	E.D.	265-1-60	249/291	1	10.3	60.5	3.7	14.0	16.6	25	3.4	13.7	16.3	25
	H.K.	208/230-3-60	187/252	1	7.7	59.9	3.9	11.6	13.5	20	4.2	11.9	13.8	20
	F.L.	460-3-60*	432/504	1	3.8	32.4	1.2	5.0	6.0	15	3.4	7.2	8.2	15
SR*030	G.J.	208/230-1-60	187/252	1	12.7	75.6	3.9	16.6	19.8	30	4.2	16.9	20.1	30
	H.K.	208/230-3-60	187/252	1	9.6	67.7	3.9	13.5	15.9	25	4.2	13.8	16.2	25
	F.L.	460-3-60*	432/504	1	4.5	38.1	1.2	5.7	6.8	15	3.4	7.9	9.0	15
SR*036	G.J.	208/230-1-60	187/252	1	14.4	86.0	6.0	20.4	24.0	30	5.9	20.3	23.9	30
	H.K.	208/230-3-60	187/252	1	9.0	70.0	6.0	15.0	17.3	25	5.9	14.9	17.2	25
	F.L.	460-3-60*	432/504	1	4.1	39.0	1.7	5.8	6.8	15	4.8	8.9	9.9	15
SR*042	G.J.	208/230-1-60	187/252	1	17.3	123.0	6.0	23.3	27.6	40	5.9	23.2	27.5	40
	H.K.	208/230-3-60	187/252	1	12.8	102.8	6.0	18.8	22.0	30	5.9	18.7	21.9	30
	F.L.	460-3-60*	432/504	1	5.8	48.5	1.7	7.5	9.0	15	4.8	10.6	12.1	15
SR*048	G.J.	208/230-1-60	187/252	1	22.4	126.0	6.0	28.4	34.0	50	5.9	28.3	33.9	50
	H.K.	208/230-3-60	187/252	1	12.8	120.4	6.0	18.8	22.0	30	5.9	18.7	21.9	30
	F.L.	460-3-60*	432/504	1	6.0	49.4	1.7	7.7	9.2	15	4.8	10.8	12.3	15
SR*060	G.J.	208/230-1-60	187/252	1	23.7	157.0	7.4	31.1	37.0	60	7.5	31.2	37.1	60
	H.K.	208/230-3-60	187/252	1	16.0	156.4	7.4	23.4	27.4	40	7.5	23.5	27.5	40
	F.L.	460-3-60*	432/504	1	7.1	58.0	2.3	9.4	11.2	15	6.2	13.3	15.1	20

Notes:

- All fuses Class RK-5
- *Neutral connection required! All F and L voltage (460VAC) units with ECM motor require a four-wire power supply with neutral. EC motor is rated 265VAC and is wired between one hot leg and neutral.

Models:
SR
006-060

Electrical Data: EC Blower Motor with Internal Secondary Pump

SR Commercial Electrical Table W/ ISP								(CT) EC*				(CV) EC			
MODEL	VOLTAGE CODE	VOLTAGE	VOLTAGE MIN/MAX	COMPRESSOR			PUMP FLA	FAN MOTOR FLA	TOTAL UNIT FLA	MIN CIRCUIT AMP	FUSE/HACR AMP	FAN MOTOR FLA	TOTAL UNIT FLA	MIN CIRCUIT AMP	FUSE/HACR AMP
				QTY	RLA	LRA									
SR*006	G.J.	208/230-1-60	187/252	1	2.5	17.7	0.4	2.3	5.2	5.8	15	1.5	4.4	5.0	15
	E.D.	265-1-60	249/291	1	2.2	10.5	0.7	2.3	5.2	5.8	15	1.4	4.3	4.9	15
SR*009	G.J.	208/230-1-60	187/252	1	3.6	22.2	0.4	2.3	6.3	7.2	15	1.5	5.5	6.4	15
	E.D.	265-1-60	249/291	1	3.1	13.5	0.7	2.3	6.1	6.9	15	1.4	5.2	6.0	15
SR*012	G.J.	208/230-1-60	187/252	1	5.6	32.5	0.8	2.3	8.7	10.1	15	2.6	9.0	10.4	15
	E.D.	265-1-60	249/291	1	4.0	23.0	0.7	2.3	7.0	8.0	15	2.5	7.2	8.2	15
SR*015	G.J.	208/230-1-60	187/252	1	10.6	33.0	0.8	2.6	14.0	16.7	25	2.6	14.0	16.7	25
	E.D.	265-1-60	249/291	1	5.5	37.0	0.7	1.9	8.1	9.5	15	2.4	8.6	10.0	15
SR*018	G.J.	208/230-1-60	187/252	1	13.3	35.0	0.8	2.6	16.7	20.0	30	2.6	16.7	20.0	30
	E.D.	265-1-60	249/291	1	6.5	40.0	0.7	1.9	9.1	10.7	15	2.1	9.3	10.9	15
SR*024	G.J.	208/230-1-60	187/252	1	11.4	64.4	0.8	3.9	16.1	19.0	30	4.2	16.4	19.3	30
	E.D.	265-1-60	249/291		10.3	60.5		3.7	14.7	17.3	25	3.4	14.4	17.0	25
	H.K.	208/230-3-60	187/252	1	7.7	59.9	0.8	3.9	12.4	14.3	20	4.2	12.7	14.6	20
	F.L.	460-3-60*	432/504	1	3.8	32.4	0.7	1.2	5.7	6.7	15	3.4	7.9	8.9	15
SR*030	G.J.	208/230-1-60	187/252	1	12.7	75.6	0.8	3.9	17.4	20.6	30	4.2	17.7	20.9	30
	H.K.	208/230-3-60	187/252	1	9.6	67.7	0.8	3.9	14.3	16.7	25	4.2	14.6	17.0	25
	F.L.	460-3-60*	432/504	1	4.5	38.1	0.7	1.2	6.4	7.5	15	3.4	8.6	9.7	15
SR*036	G.J.	208/230-1-60	187/252	1	14.4	86.0	0.8	6.0	21.2	24.8	30	5.9	21.1	24.7	30
	H.K.	208/230-3-60	187/252	1	9.0	70.0	0.8	6.0	15.8	18.1	25	5.9	15.7	18.0	25
	F.L.	460-3-60*	432/504	1	4.1	39.0	0.7	1.7	6.5	7.5	15	4.8	9.6	10.6	15
SR*042	G.J.	208/230-1-60	187/252	1	17.3	123.0	0.8	6.0	24.1	28.4	40	5.9	24.0	28.3	40
	H.K.	208/230-3-60	187/252	1	12.8	102.8	0.8	6.0	19.6	22.8	30	5.9	19.5	22.7	30
	F.L.	460-3-60*	432/504	1	5.8	48.5	0.7	1.7	8.2	9.7	15	4.8	11.3	12.8	15
SR*048	G.J.	208/230-1-60	187/252	1	22.4	126.0	1.1	6.0	29.5	35.1	50	5.9	29.4	35.0	50
	H.K.	208/230-3-60	187/252	1	12.8	120.4	1.1	6.0	19.9	23.1	30	5.9	19.8	23.0	30
	F.L.	460-3-60*	432/504	1	6.0	49.4	1.3	1.7	9.0	10.5	15	4.8	12.1	13.6	15
SR*060	G.J.	208/230-1-60	187/252	1	23.7	157.0	1.1	7.4	32.2	38.1	60	7.5	32.3	38.2	60
	H.K.	208/230-3-60	187/252	1	16.0	156.4	1.1	7.4	24.5	28.5	40	7.5	24.6	28.6	40
	F.L.	460-3-60*	432/504	1	7.1	58.0	1.3	2.3	10.7	12.5	15	6.2	14.6	16.4	20

Notes:
• All fuses Class RK-5.

*Neutral connection required! All F and L voltage (460VAC) units with EC motor require a four-wire power supply with neutral. EC motor is rated 265VAC and is wired between one hot leg and neutral.

Electrical: Power Wiring

⚠ WARNING

Disconnect electrical power source to prevent injury or death from electrical shock.

⚠ CAUTION

Use only copper conductors for field installed electrical wiring. Unit terminals are not designed to accept other types of conductors.


ELECTRICAL

Line Voltage - All field installed wiring, including electrical ground, must comply with NFPA 70: National Electrical Code (NEC), CSA C22.1: Canadian Electrical Code (CE Code), as well as applicable local codes. Refer to the unit electrical data for fuse sizes. Consult wiring diagram for field connections that must be made by the installing (or electrical) contractor. All final electrical connections must be made with a length of flexible conduit to minimize vibration and sound transmission to the building.

GENERAL LINE VOLTAGE WIRING

Be sure the available power is the same voltage and phase shown on the unit serial plate. Line and low voltage wiring must be done in accordance with local codes or the National Electric Code, whichever is applicable.

Figure 13: Single Phase Line Voltage Field Wiring

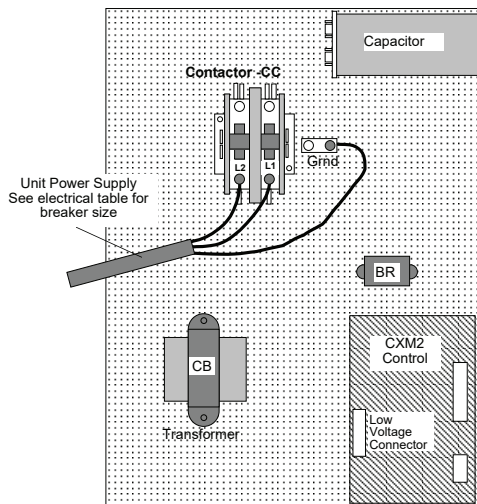

NOTE: 460V units with an EC motor or Internal Secondary Pump require a neutral wire. Three-phase wiring is similar except that all three power wires are directly connected to the contactor.

POWER CONNECTION

Line voltage connection is made by connecting the incoming line voltage wires to the “L” side of the contactor as shown in Figure 13 Consult electrical data tables for maximum fuse size.


TRANSFORMER

All 208/230V units are factory wired for 208V. If supply voltage is 230V, installer must rewire transformer. See wire diagram for connections.

BLOWER SPEED SELECTION


Units with PSC Motor - PSC (Permanent Split Capacitor) blower motor speed can be changed by moving the blue wire on the motor terminal block to the desired speed as shown in the figure below. Most units are shipped on the medium speed tap. Consult submittal data or engineering design guide for specific unit airflow tables. Typical unit design delivers rated airflow at nominal static (0.15 inch w.g. [37 Pa]) on medium speed and rated airflow at a higher static (0.4 to 0.5 in. w.g. [100 to 125 Pa]) on high speed for applications where higher static is required. Low speed will deliver approximately 85% of rated airflow at 0.10 in. w.g. [25 Pa].

Figure 14: PSC Motor Speed Selection

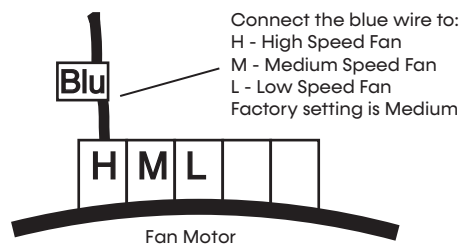

Models:
SR
006-060

Electrical: CXM2 Example Wiring Diagram

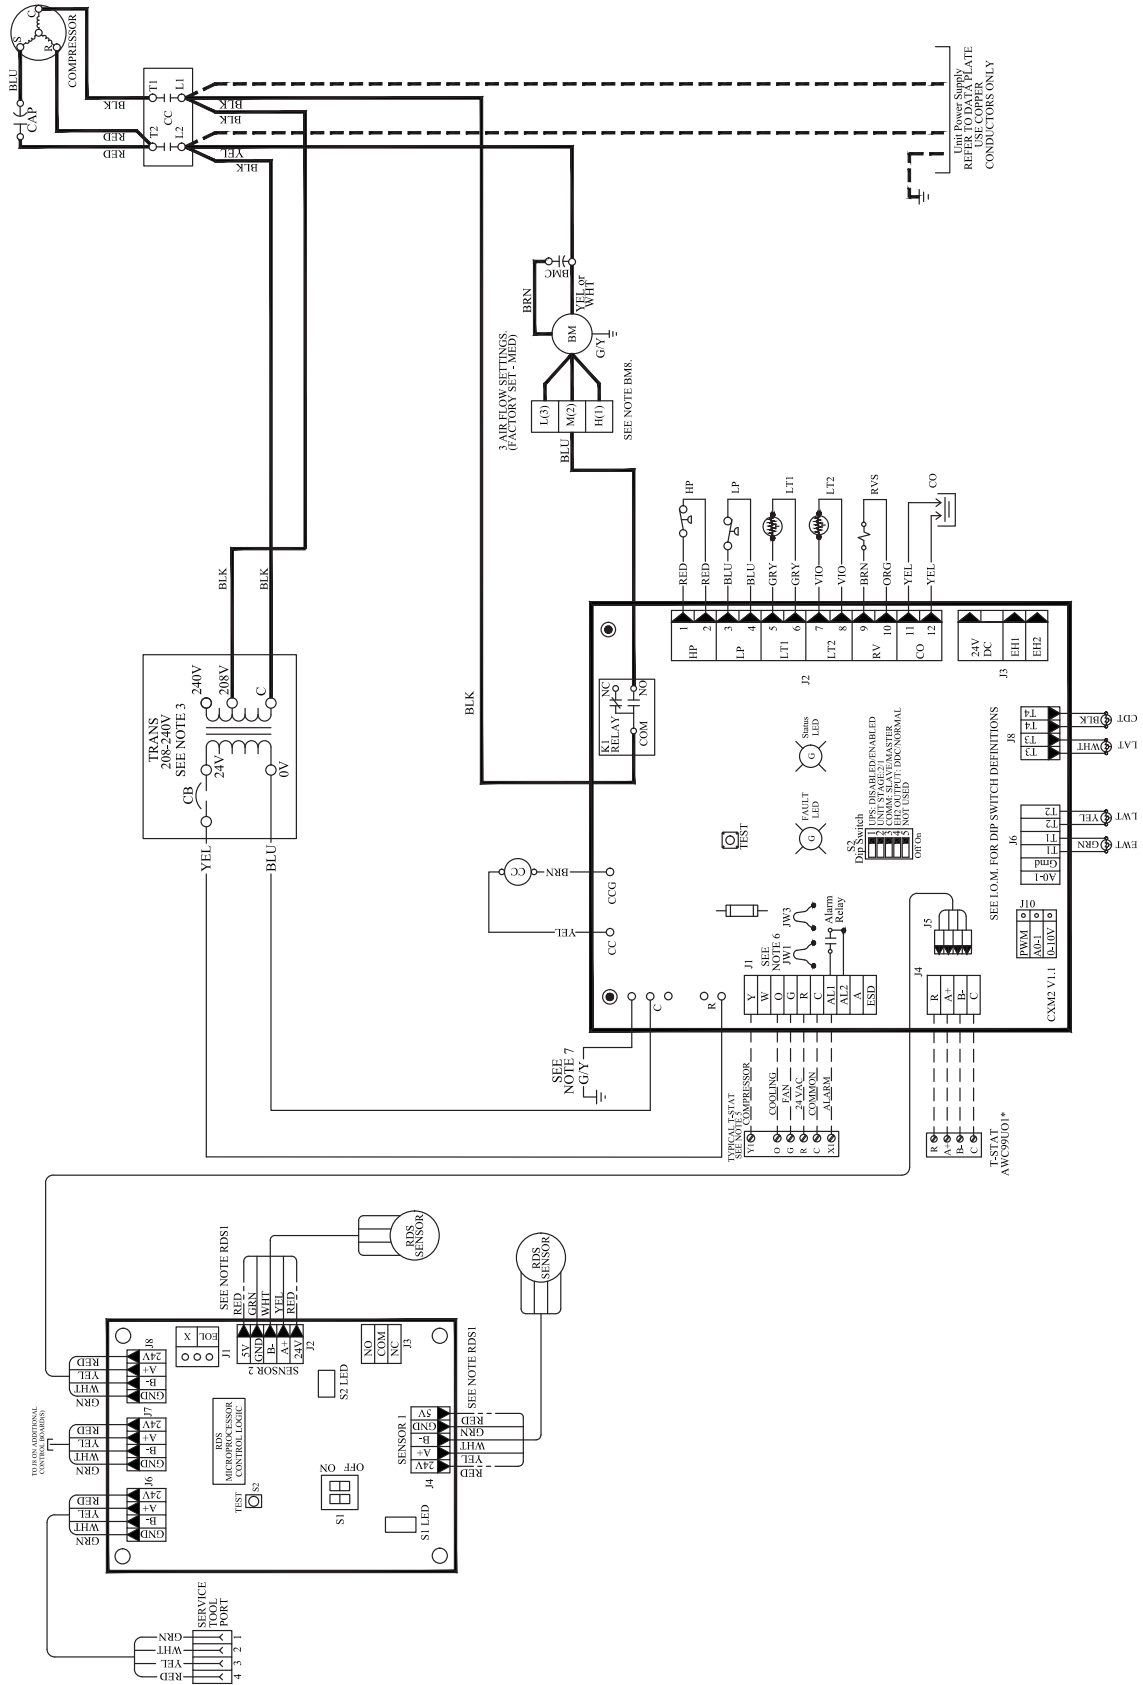

Electrical: Low Voltage Wiring

THERMOSTAT CONNECTIONS


The thermostat should be wired directly to the CXM2 or DXM2.5 board. See Electrical: Thermostat Wiring for specific terminal connections. Review the appropriate AOM (Application, Operation and Maintenance) manual for units with DDC controls.

LOW WATER TEMPERATURE CUTOUT SELECTION

The CXM2/DXM2.5 control allows the field selection of low water (or water-antifreeze solution) temperature limit by clipping jumper JW3 (see the figure below), which changes the sensing temperature associated with thermistor LT1. Note that the LT1 thermistor is located on the refrigerant line between the coaxial heat exchanger and expansion device (TXV).

Therefore, LT1 is sensing refrigerant temperature, not water temperature, which is a better indication of how water flow rate/temperature is affecting the refrigeration circuit. The factory setting for LT1 is for systems using water (30°F [-1.1°C] refrigerant temperature). In low water temperature (extended range) applications with antifreeze (most ground loops), jumper JW3 should be clipped as shown in the figure below to change the setting to 10°F [-12.2°C] refrigerant temperature, a more suitable temperature when using an antifreeze solution. All ClimateMaster units operating with entering water temperatures below 60°F [15.6°C] must include the optional water/refrigerant circuit insulation package to prevent internal condensation.

Figure 15: LT1 Limit Setting

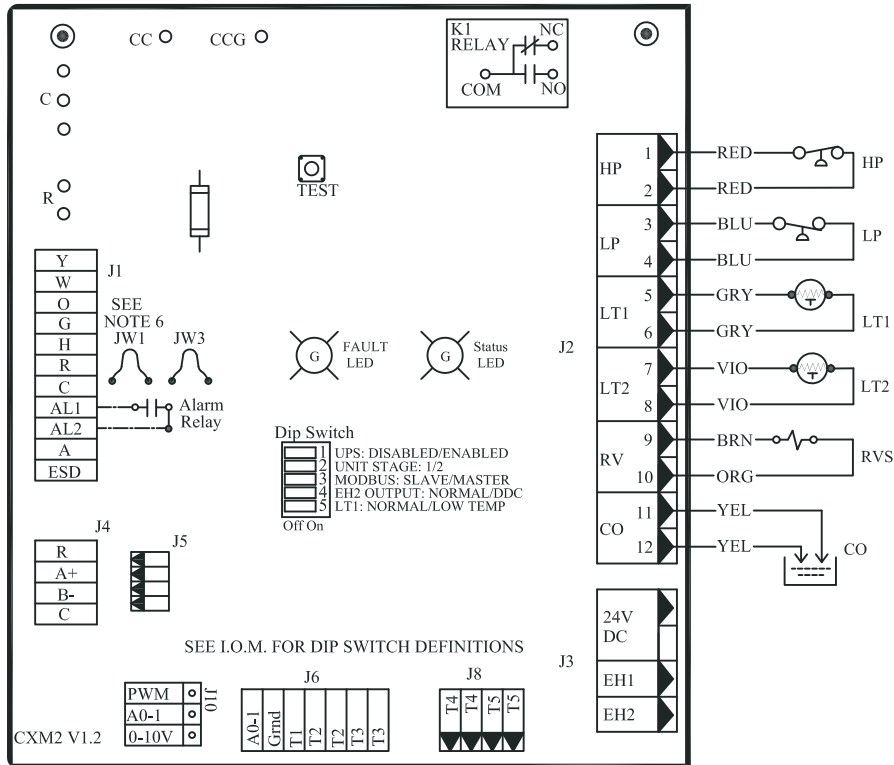

Models:
SR
006-060

Electrical: Low Voltage Wiring

ACCESSORY CONNECTIONS


A terminal paralleling the compressor contactor coil has been provided on the CXM2/DXM2.5 control. Terminal “A” is designed to control accessory devices, such as water valves. **Note: This terminal should be used only with 24V signals and not line voltage.** Terminal “A” is energized with the compressor contactor. See Figure 16 or the specific unit wiring diagram for details.

Table 5: Low Voltage VA Ratings

Component	VA
Typical Blower Relay	6 - 7
Typical Reversing Valve Solenoid	4 - 6
30 A Compressor Contactor	6 - 9
Subtotal	16 - 22
+ CXM2 board (5 - 9VA)*	21 - 31
Remaining VA for Accessories	19 - 29
+ DXM2.5 board (8 - 12VA)*	24 - 34
Remaining VA for Accessories	41 - 51

*Standard transformer for CXM2 board is 50VA. Optional DXM2.5 board and/or DDC controls include 75VA transformer.

Figure 16: Accessory Wiring

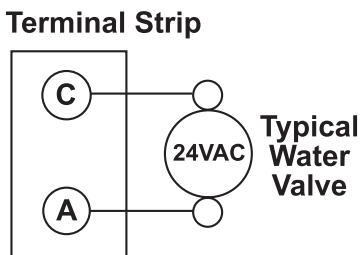

WATER SOLENOID VALVES

An external solenoid valve(s) should be used on ground water installations to shut off flow to the unit when the compressor is not operating. A slow closing valve may be required to help reduce water hammer. Figure 16 shows typical wiring for a 24VAC external solenoid valve. Figure 17 and Figure 18 illustrate a slow-closing water control valve wiring for two styles of typical accessory water valves. Slow closing valves take approximately 60 seconds to open (very little water will flow before 45 seconds).

Once fully open, an end switch allows the compressor to be energized. Only relay or triac based electronic thermostats should be used with slow closing valves. When wired as shown, the slow closing valve will operate properly with the following notations:

1. The valve will remain open during a unit lockout.
2. The valve will draw approximately 25-35VA through the “Y” signal of the thermostat.

NOTE: This valve can overheat the anticipator of an electromechanical thermostat. Therefore, only relay or triac based thermostats should be used.

Figure 17: Accessory Motorized Water Valve – Typical Wiring Example #1


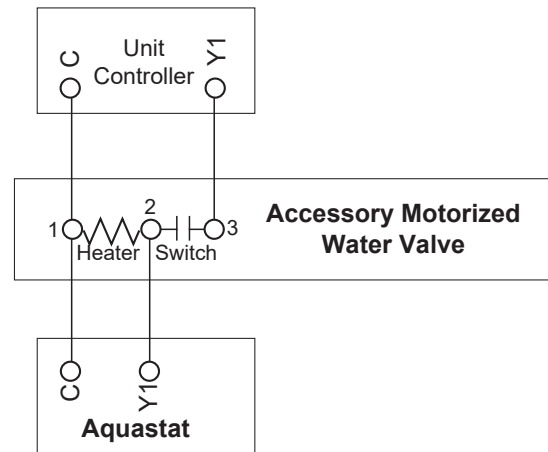


Figure 18: Accessory Motorized Water Valve - Typical Wiring Example #2

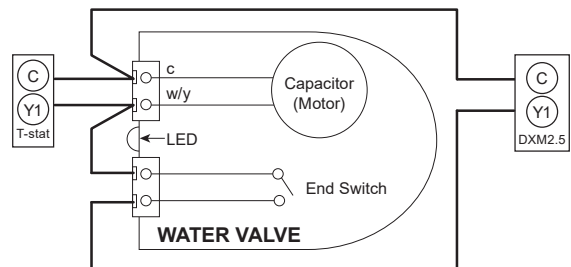


Electrical: Low Voltage Wiring

REFRIGERANT DETECTION SYSTEM (RDS)

The function, operation, and required servicing measures for the Refrigerant Detection System (RDS) include the following:

- The RDS monitors the status of the refrigerant sensor(s) in the unit. If refrigerant is detected above the maximum threshold, the control enables the unit blower, disables the compressor(s), and enables the pilot relay on the RDS control board. You can use this relay to open external zoning dampers and/or activate external mechanical ventilation. The relay is normally closed (NC) and can control a signal with a maximum of 28VA @ 24VAC.
- A fault is enabled if the RDS control board loses communication with a refrigerant sensor or if the main control board loses communication with the RDS board. See Functional Troubleshooting for steps to troubleshoot the RDS.

Figure 19: RDS Board

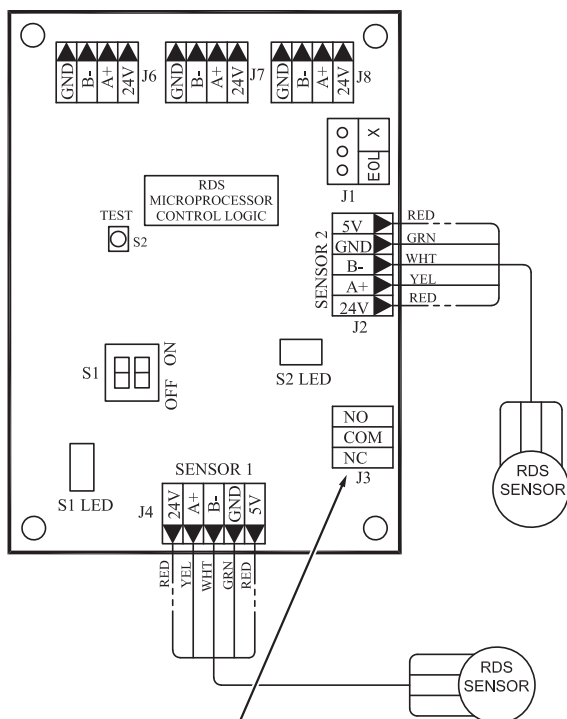

NOTE: Connect mitigation measures to the J3 jumper.

FIELD-INSTALLED RDS SYSTEM


For horizontal systems installed on ceiling plenum for non-ducted applications, use the following guidelines to install a refrigerant detection sensor upstream of the return of the unit:

1. The sensor must be located within 3 inches of the unit
2. The sensor must be on the same plane or lower than the unit
3. The sensor must be on the same side of the coil as the feeder tubes (feeder tubes are located near the electrical components)

NOTICE

The sensor cannot be installed in a way that exposes it to water and must be installed using the orientation displayed in the figure below.

Figure 20: RDS Installation

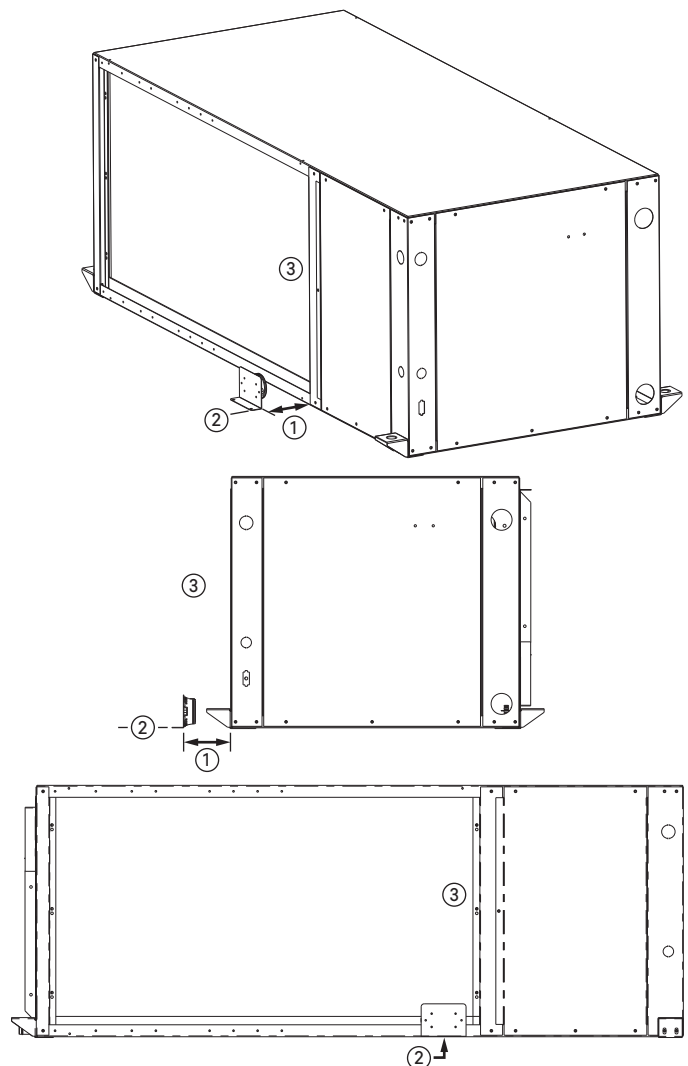

Models:
SR
006-060

Electrical: Thermostat Wiring




THERMOSTAT INSTALLATION

The thermostat should be located on an interior wall in a larger room, away from supply duct drafts. DO NOT locate the thermostat in areas subject to sunlight, drafts or on external walls. The wire access hole behind the thermostat may in certain cases need to be sealed to prevent erroneous temperature measurement.

Position the thermostat back plate against the wall so that it appears level and so the thermostat wires protrude through the middle of the back plate. Mark the position of the back plate mounting holes and drill holes with a 3/16-inch (5 mm) bit. Install supplied anchors and secure plate to the wall. Thermostat wire must be 18 AWG wire.

Representative thermostat wiring is shown in Figure 21 however, actual wiring connections should be determined from the thermostat IOM and or unit wiring diagram. Practically any heat pump thermostat will work with heat pump units, provided it has the correct number of heating and cooling stages.

Figure 21: Units with PSC, (CT) EC, and (CV) EC Blower Motors

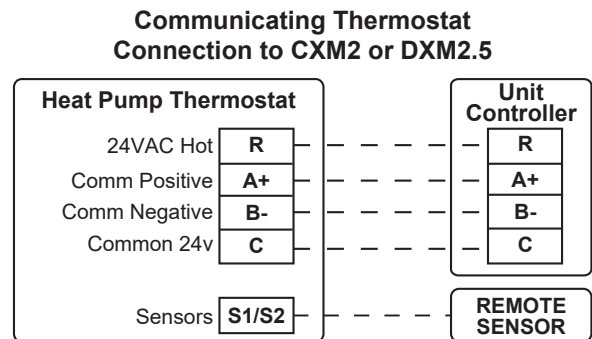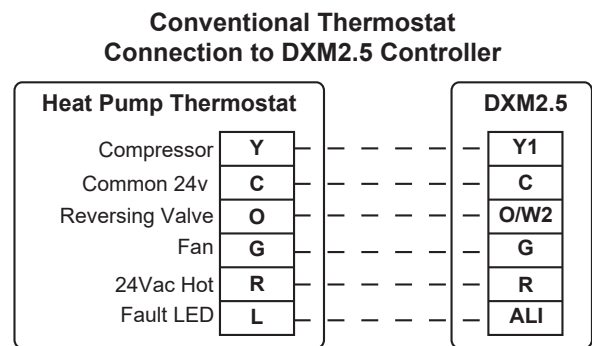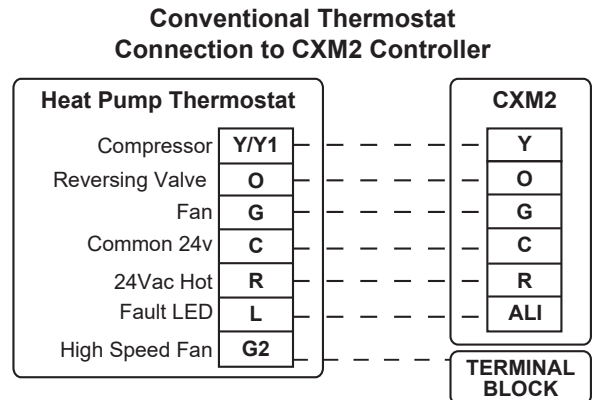

Blower Performance Standard Unit SR*006

Models:
SR
006-060

Size	Rated CFM	Min CFM	Motor Type	Speed Tap		External Static Pressure (in. wg)																																															
						0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8	0.9	1.0																																						
SR*006	225	150	PSC	Low	Power (W)																																																
					CFM											210	190	160																																			
				Medium	Power (W)																																																
					CFM																					260	240	210	190																								
				High	Power (W)																																																
					CFM																															310	290	270	230	180													
	225	150	(CT) EC	1	Power (W)																															22	24	25	28	30													
					CFM																															225	207	187	169	150													
				2	Power (W)																																		34	37						39	42	44	48	51			
					CFM																																		233	217						201	185	173	164	150			
				3	Power (W)																																			43						45	48	51	54	58	61		
					CFM																																			241						227	212	200	188	179	168		
				4	Power (W)																																									55	58	61	65	67			
					CFM																																									240	227	216	205	193			
				225	150																															(CV) EC	Minimum CFM	Power (W)	16	21						27	40	36	41	46	52	59	
																																						CFM	150	150						150	150	150	150	150	150		
																																					Default CFM	Power (W)	29	35						41	47	53	60	67	76	81	77
																																						CFM	225	225						225	225	225	225	225	225	225	255
Maximum CFM	Power (W)	35	41			47	53	60	67	76	84	88	78																																								
	CFM	250	250			250	250	250	250	250	250	250	250																																								

Blower performance data is based on the lowest nameplate voltage setting.
 Blower performance is based on a wet coil with clean 1-inch filter.
 Blower performance is based on operating conditions of 80°F DB and 67°F WB.
 CFM Tolerance is ±7%
 Cells in grey - option not available

Models:
SR
006-060

Blower Performance Standard Unit SR*009

Size	Rated CFM	Min CFM	Motor Type	Speed Tap		External Static Pressure (in. wg)																																													
						0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8	0.9	1.0																																				
SR*009	325	225	PSC	Low	Power (W)																																														
					CFM											340	322	300	260																																
				Medium	Power (W)																																														
					CFM																					390	360	320	290	260																					
				High	Power (W)																																														
					CFM																															410	380	350	320	280											
	325	225	(CT) EC	1	Power (W)																															40	42	44	47	49											
					CFM																															294	278	259	245	230											
				2	Power (W)																															67	70	73	74	79						82	85	88	90	85	
					CFM																															370	357	343	326	318						302	291	278	265	235	
				3	Power (W)																																		86	88						91	95	98	101	96	90
					CFM																																									370	358	346	334	322	307
				4	Power (W)																																									120	113	107	102		
					CFM																																														
	325	225	(CV) EC	Minimum CFM	Power (W)																															25	32	39	45	53											
					CFM																															225	225	225	225	225						225	225	225	225		
				Default CFM	Power (W)																															49	58	67	77	88						100	105	95	88		
					CFM																															325	325	325	325	325						325	325	325	325		
Maximum CFM				Power (W)	126	134	131	125	119	118	105	98	90																																						
				CFM	375	375	375	375	375	375	375	375	375																																						

Blower performance data is based on the lowest nameplate voltage setting.
 Blower performance is based on a wet coil with clean 1-inch filter.
 Blower performance is based on operating conditions of 80°F DB and 67°F WB.
 CFM Tolerance is ±7%
 Cells in grey - option not available

Blower Performance Standard Unit SR*012

Models:
SR
006-060

Size	Rated CFM	Min CFM	Motor Type	Speed Tap		External Static Pressure (in. wg)												
						0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8	0.9	1.0			
SR*012	380	300	PSC	Low	Power (W)													
					CFM													
				Medium	Power (W)													
					CFM													
				High	Power (W)													
					CFM													
	380	300	(CT) EC	1	Power (W)	64	66	69	71	75	78	82	85	87	83			
					CFM	358	345	332	319	305	291	275	261	247	218			
				2	Power (W)	86	88	91	94	97	100	103	104	97	91			
					CFM	400	388	377	365	354	342	328	309	269	237			
				3	Power (W)	116	119	122	124	126	126	121	114	99	91			
					CFM	449	437	427	414	401	385	359	327	274	238			
				4	Power (W)	131	133	135	137	135	130	123	110	99	92			
					CFM	467	456	444	433	414	390	361	318	273	239			
				380	300	(CV) EC	Minimum CFM	Power (W)	55	64	73	81	90	99	107	106		
								CFM	300	300	300	300	300	300	300	300		
							Default CFM	Power (W)	105	115	125	135	132	127	123	118		
								CFM	380	380	380	380	380	380	380	380		
Maximum CFM	Power (W)	147	149				146	143	139	134	130	126	120					
	CFM	415	415				415	415	415	415	415	415	415					

Blower performance data is based on the lowest nameplate voltage setting.
 Blower performance is based on a wet coil with clean 1-inch filter.
 Blower performance is based on operating conditions of 80°F DB and 67°F WB.
 CFM Tolerance is ±7%
 Cells in grey - option not available

Models:
SR
006-060

Blower Performance Standard Unit SR*015

Size	Rated CFM	Min CFM	Motor Type	Speed Tap		External Static Pressure (in. wg)																		
						0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8	0.9	1.0									
SR*015	525	375	PSC	Low	Power (W)	161	158	146	138															
					CFM	503	490	479	439															
				Medium	Power (W)	184	181	174	153	143														
					CFM	595	575	562	510	451														
				High	Power (W)				174	159	141													
					CFM				581	510	386													
	525	375	(CT) EC	1	Power (W)	67	55	62	68	75	82													
					CFM	648	588	542	493	441	378													
				2	Power (W)	67	74	81	87	95	102	108												
					CFM	648	608	557	514	460	402	354												
				3	Power (W)	79	86	94	101	107	117	124	130											
					CFM	695	659	611	570	526	475	422	377											
				4	Power (W)	92	98	107	114	121	129	138	145	151										
					CFM	737	705	661	622	582	534	482	438	396										
				5	Power (W)	106	110	117	126	133	141	151	159	165	172									
					CFM	745	745	708	662	626	585	535	488	444	402									
	525	375	(CV) EC	Minimum CFM	Power (W)		36	52	68	84	99	114	129											
					CFM		375	375	375	375	375	375	375	375										
				Default CFM	Power (W)		55	74	90	108	127	147	166	186										
					CFM		525	525	525	525	525	525	525	525	525									
Maximum CFM				Power (W)	54	73	93	112	132	152	173	194	216	238										
				CFM	625	625	625	625	625	625	625	625	625	625	625	625	625	625	625	625	625			

Blower performance data is based on the lowest nameplate voltage setting.
 Blower performance is based on a wet coil with clean 1-inch filter.
 Blower performance is based on operating conditions of 80°F DB and 67°F WB.
 CFM Tolerance is ±7%
 Cells in grey - option not available

Blower Performance Standard Unit SR*018

Models:
SR
006-060

Size	Rated CFM	Min CFM	Motor Type	Speed Tap		External Static Pressure (in. wg)																					
						0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8	0.9	1.0												
SR*018	600	450	PSC	Low	Power (W)	147	145	135	127																		
					CFM	524	509	493	451																		
				Medium	Power (W)	170	167	161	143																		
					CFM	611	588	564	514																		
				High	Power (W)	195	189	184	177											149							
					CFM	704	668	643	617											504							
	600	450	ECM - Constant Torque	1	Power (W)	73	78	85	90																		
					CFM	600	558	518	491																		
				2	Power (W)	92	99	107	109											116	123	131					
					CFM	676	641	599	570											536	498	452					
				3	Power (W)	112	118	126	135											140	147	155	163	170			
					CFM	741	713	677	640											619	586	554	512	471			
				4	Power (W)	138	144	152	161											170	174	181	190	199	207		
					CFM	802	780	751	714											680	662	633	603	567	529		
				5	Power (W)	170	175	182	190											201	210	214	222	231	240		
					CFM	854	848	820	791											754	724	711	683	655	625		
				600	450	ECM - Constant Volume	Minimum CFM	Power (W)												93	111	132	157	180			
								CFM												450	450	450	450	450			
	Default CFM	Power (W)	85				101	113	145											178	206	228	248	266			
		CFM	600				600	600	600											600	600	600	600	600			
Maximum CFM	Power (W)	157	171				186	200	214	251	286	323															
	CFM	750	750				750	750	750	750	750	750															

Blower performance data is based on the lowest nameplate voltage setting.
 Blower performance is based on a wet coil with clean 1-inch filter.
 Blower performance is based on operating conditions of 80°F DB and 67°F WB.
 CFM Tolerance is ±7%
 Cells in grey - option not available

Models:
SR
006-060

Blower Performance: Standard Unit

SR*024

Size	Rated CFM	Min CFM	Motor Type	Speed Tap		External Static Pressure (in. wg)																						
						0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8	0.9	1.0													
SR*024	800	600	PSC	Low	Power (W)	224	215	204	191	176																		
					CFM	777	768	737	684	608																		
				Medium	Power (W)	257	246	233	219	204						187												
					CFM	888	868	830	774	701						610												
				High	Power (W)	294	281	268	253	237						219												
					CFM	997	964	916	854	777						686												
	800	600	(CT) EC	1	Power (W)	116	122	128	135																			
					CFM	755	728	695	653																			
				2	Power (W)	146	152	159	166							174	185	193										
					CFM	836	810	782	750							708	657	616										
				3	Power (W)	181	187	194	201							209	218	230	239	246	252							
					CFM	910	887	861	834							804	762	714	674	642	619							
				4	Power (W)	232	240	247	254							262	270	278	291	303	312							
					CFM	996	975	952	929							904	876	845	798	755	725							
				5	Power (W)											323	331	340	348	361	374							
					CFM											999	975	951	923	884	840							
				800	600	(CV) EC	Minimum CFM	Power (W)	71							89	107	124	141	159	177	195	213	230				
								CFM	600							600	600	600	600	600	600	600	600	600				
	Default CFM	Power (W)	145				165	185	205							225	245	266	285	306	326							
		CFM	800				800	800	800							800	800	800	800	800	800							
Maximum CFM	Power (W)	284	300				315	332	351						364	379	396	412	428									
	CFM	1000	1000				1000	1000	1000						1000	1000	1000	1000	1000									

Blower performance data is based on the lowest nameplate voltage setting.
 Blower performance is based on a wet coil with clean 1-inch filter.
 Blower performance is based on operating conditions of 80°F DB and 67°F WB.
 CFM Tolerance is ±7%
 Cells in grey - option not available

Blower Performance Standard Unit SR*030

Models:
SR
006-060

Size	Rated CFM	Min CFM	Motor Type	Speed Tap		External Static Pressure (in. wg)												
						0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8	0.9	1.0			
SR*030	1000	750	PSC	Low	Power (W)	305	290	274	256	236								
					CFM	916	911	883	833	761								
				Medium	Power (W)	338	323	306	288	268	246							
					CFM	1021	1014	983	929	850	747							
				High	Power (W)	384	372	357	340	322	301							
					CFM	1084	1076	1044	988	906	800							
	1000	750	(CT) EC	1	Power (W)	158	165	176	184	192								
					CFM	904	873	832	796	763								
				2	Power (W)	211	219	227	240	250	258	267	276	285				
					CFM	1020	992	965	927	894	864	835	805	771				
				3	Power (W)	280	289	298	306	321	330	342	351	361	368			
					CFM	1139	1113	1089	1064	1027	999	966	937	910	879			
				4	Power (W)	336	346	355	364	374	389	399	413	423	430			
					CFM	1216	1193	1168	1146	1123	1086	1062	1028	1002	975			
				5	Power (W)				452	462	471	490	499	508	478			
					CFM				1250	1229	1208	1173	1151	1112	1036			
				1000	750	(CV) EC	Minimum CFM	Power (W)	71	89	108	127	145	162	181	199	217	235
								CFM	750	750	750	750	750	750	750	750	750	750
	Default CFM	Power (W)	251				274	296	315	337	362	387	407					
		CFM	1000				1000	1000	1000	1000	1000	1000	1000					
Maximum CFM	Power (W)	388	410				431	453	471									
	CFM	1150	1150				1150	1150	1150									

Blower performance data is based on the lowest nameplate voltage setting.
 Blower performance is based on a wet coil with clean 1-inch filter.
 Blower performance is based on operating conditions of 80°F DB and 67°F WB.
 CFM Tolerance is ±7%
 Cells in grey - option not available

Models:
SR
006-060

Blower Performance Standard Unit SR*036

Size	Rated CFM	Min CFM	Motor Type	Speed Tap		External Static Pressure (in. wg)																																																	
						0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8	0.9	1.0																																								
SR*036	1150	900	PSC	Low	Power (W)																																																		
					CFM											970	960	951	941	902																																			
				Medium	Power (W)																																																		
					CFM																					1106	1096	1086	1067	1009	912																								
				High	Power (W)																																																		
					CFM																															1436	1387	1329	1280	1174	1077	931													
	(CT) EC	1150	900	(CT) EC	1																															Power (W)	166	175	184																
																																				CFM	974	941	904																
					2																															Power (W)	241	251	261								272	282	292	299	307				
																																				CFM	1132	1103	1074								1041	1005	973	944	916				
					3																															Power (W)	294	304	316								326	337	349	359	367			375	385
																																				CFM	1271	1242	1214								1185	1153	1118	1083	1056			1029	999
					4																															Power (W)	376	387	399								409	421	433	446	457			468	478
																																				CFM	1403	1377	1351								1324	1295	1268	1233	1201			1169	1143
					5																															Power (W)			499								510	523	524	521	519			516	514
																																				CFM											1485	1460	1434	1396	1347			1295	1240
	(CV) EC	1150	900	(CV) EC	Minimum CFM																															Power (W)	105	132									164	188	211	233	257			280	307
																																				CFM	900	900	900								900	900	900	900	900			900	900
					Default CFM																															Power (W)	205	232	261								303	349	382	415	446			475	505
																																				CFM	1150	1150	1150								1150	1150	1150	1150	1150			1150	1150
Maximum CFM					Power (W)	406	403	438	474	511	564	629	680	692	691																																								
					CFM	1500	1500	1500	1500	1500	1500	1500	1500	1500	1500																					1500																			

Blower performance data is based on the lowest nameplate voltage setting.
 Blower performance is based on a wet coil with clean 1-inch filter.
 Blower performance is based on operating conditions of 80°F DB and 67°F WB.
 CFM Tolerance is ±7%
 Cells in grey - option not available

Blower Performance Standard Unit SR*042

Models:
SR
006-060

Size	Rated CFM	Min CFM	Motor Type	Speed Tap		External Static Pressure (in. wg)																																						
						0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8	0.9	1.0																													
SR*042	1400	1050	PSC	Low	Power (W)	388																																						
					CFM	918																																						
				Medium	Power (W)	517											509	496	477	452	422																							
					CFM	1201											1223	1218	1185	1125	1038																							
				High	Power (W)	665											654	636	611	580	542						498																	
					CFM	1584											1592	1571	1518	1436	1323						1180																	
	1400	1050	(CT) EC	1	Power (W)	238											248	259	272																									
					CFM	1186											1152	1113	1056																									
				2	Power (W)	331											369	352	365								381						396	411	423	437	446							
					CFM	1345											1317	1283	1251								1215						1181	1150	1124	1094	1050							
				3	Power (W)	448											461	474	486								501						518	534	551	568	581							
					CFM	1507											1482	1455	1427								1396						1365	1331	1296	1276	1246							
				4	Power (W)	582											595	609	622								635						651	669	688	706	681							
					CFM	1641											1623	1601	1577								1548						1519	1488	1455	1423	1355							
				5	Power (W)												756	775	776								774						772	768	765	679								
					CFM												1743	1717	1688								1645						1596	1541	1490	1352								
				1400	1050	(CV) EC											Minimum CFM	Power (W)	154								177						200	224	252	280	306	331	355	383				
																		CFM	1050								1050						1050	1050	1050	1050	1050	1050	1050	1050				
Default CFM	Power (W)	334	359				390	421	453	484	517	555	595	636																														
	CFM	1400	1400				1400	1400	1400	1400	1400	1400	1400	1400																														
Maximum CFM	Power (W)	658	674				703	700	697																																			
	CFM	1750	1750				1750	1750	1750																																			

Blower performance data is based on the lowest nameplate voltage setting.
 Blower performance is based on a wet coil with clean 1-inch filter.
 Blower performance is based on operating conditions of 80°F DB and 67°F WB.
 CFM Tolerance is ±7%
 Cells in grey - option not available

Models:
SR
006-060

Blower Performance Standard Unit SR*048

Size	Rated CFM	Min CFM	Motor Type	Speed Tap		External Static Pressure (in. wg)																	
						0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8	0.9	1.0								
SR*048	1550	1200	PSC	Low	Power (W)	608	585	559	531	499													
					CFM	1512	1487	1440	1371	1280													
				Medium	Power (W)	680	652	622	588	552						513							
					CFM	1670	1639	1584	1507	1406						1281							
				High	Power (W)	780	746	709	669	625						579	529						
					CFM	1885	1841	1772	1678	1560						1416	1248						
	1550	1200	(CT) EC	1	Power (W)	286	303	320	336	351													
					CFM	1482	1411	1342	1276	1211													
				2	Power (W)	360	379	397	415	433						450	467						
					CFM	1604	1553	1500	1444	1385						1323	1258						
				3	Power (W)	457	472	488	505	525						546	569						
					CFM	1753	1707	1659	1607	1553						1495	1435						
				4	Power (W)	626	642	658	673	687						701							
					CFM	1984	1937	1890	1843	1795						1747							
				5	Power (W)				805	829													
					CFM				1980	1938													
				1550	1200	(CV) EC	Minimum CFM	Power (W)	240	132						163	293	342	309	280	395	401	453
								CFM	1200	1200						1200	1200	1200	1200	1200	1200	1200	1200
	Default CFM	Power (W)	445				251	294	500	570						498	438	617	602	672			
		CFM	1550				1550	1550	1550	1550						1550	1550	1550	1550	1550			
Maximum CFM	Power (W)	723	418				474	780	873	761	644	912	853	939									
	CFM	1900	1900				1900	1900	1900	1900	1900	1900	1900	1900									

Blower performance data is based on the lowest nameplate voltage setting.
 Blower performance is based on a wet coil with clean 1-inch filter.
 Blower performance is based on operating conditions of 80°F DB and 67°F WB.
 CFM Tolerance is ±7%
 Cells in grey - option not available

Blower Performance Standard Unit SR*060

Models:
SR
006-060

Size	Rated CFM	Min CFM	Motor Type	Speed Tap		External Static Pressure (in. wg)																																																				
						0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8	0.9	1.0																																											
SR*060	2000	1500	PSC	Low	Power (W)	779	766	750	731	710	686	659																																														
					CFM	1771	1756	1732	1700	1658	1608	1549																																														
				Medium	Power (W)	877	856	833	806	777	744	708					669																																									
					CFM	1979	1968	1940	1894	1831	1751	1653					1539																																									
				High	Power (W)	996	969	938	904	867	826	783					736					687																																				
					CFM	2208	2178	2132	2069	1990	1893	1780					1649					1502																																				
	2000	1500	(CT) EC	1	Power (W)	342	354	366	380																																																	
					CFM	1685	1640	1593	1545																																																	
				2	Power (W)	460	476	489	501								518					533					548	561	577																													
					CFM	1879	1833	1795	1754								1705					1657					1608	1563	1514																													
				3	Power (W)	648	666	678	694								708					724					740	757	773																													
					CFM	2113	2069	2039	1998								1963					1925					1885	1840	1795																													
				4	Power (W)	771	785	803	817								832					848					864	883	900																													
					CFM	2235	2198	2163	2130								2094					2061					2019	1977	1939																													
				5	Power (W)	866	881	899	916								934					951					970	977	973													969																
					CFM	2322	2290	2253	2219								2188					2152					2120	2083	2013													1940																
				2000	1500	(CV) EC	Minimum CFM	Power (W)	246								301					354					405	453	500													544					587	627	665									
								CFM	1500								1500					1500					1500	1500	1500													1500					1500	1500	1500									
	Default CFM	Power (W)	503				564	631	686								734					808					875	929	990													1051																
		CFM	2000				2000	2000	2000								2000					2000					2000	2000	2000													2000																
Maximum CFM	Power (W)	885	896				901	916	937																																																	
	CFM	2200	2200				2200	2200	2200																																																	

Blower performance data is based on the lowest nameplate voltage setting.
 Blower performance is based on a wet coil with clean 1-inch filter.
 Blower performance is based on operating conditions of 80°F DB and 67°F WB.
 CFM Tolerance is ±7%
 Cells in grey - option not available

Models:
SR
006-060

Constant Volume (CV) EC Motor Limits

(CV) EC ADVANTAGE

A major benefit of the (CV) EC motor over other blower motor types is its ability to adjust airflow remotely through the iGate 2 web portal/mobile app or directly at the unit with a communicating diagnostic service tool. Airflow levels can be adjusted in increments of 25 CFM from the unit’s minimum and maximum CFM range (see the (CV) EC motor configuration table for details).

Table 6: (CV) Motor EC Limits

Size	Max ESP (in. wg)	Fan Motor (hp)	Airflow Range	Cooling Mode	Heating Mode	Dehumid Mode	Fan Only
6	0.9	1/8	Minimum	150	150	150	150
	1.0		Default	225	225	150	225
	1.0		Maximum	250	250	225	250
9	0.9	1/8	Minimum	225	225	225	225
	0.9		Default	325	325	225	325
	0.9		Maximum	375	375	325	375
12	0.8	1/4	Minimum	300	300	300	300
	0.8		Default	380	380	300	380
	0.9		Maximum	415	415	380	415
15	0.8	1/3	Minimum	375	375	375	375
	1.0		Default	525	525	375	525
	1.0		Maximum	625	625	600	625
18	0.8	1/3	Minimum	450	450	450	450
	0.9		Default	600	600	450	600
	0.9		Maximum	750	750	600	750
24	0.75	1/2	Minimum	600	600	600	300
			Default	750	750	650	350
			Maximum	850	850	800	850
30	0.5	1/2	Minimum	750	750	750	375
			Default	925	925	800	425
			Maximum	1050	1050	1000	1050
36	0.6	3/4	Minimum	900	900	900	450
			Default	1125	1125	975	525
			Maximum	1275	1275	1200	1275
42	0.6	3/4	Minimum	1050	1050	1050	525
			Default	1300	1300	1125	600
			Maximum	1475	1475	1400	1475
48	0.6	3/4	Minimum	1200	1200	1200	600
			Default	1500	1500	1300	700
			Maximum	1700	1700	1600	1700
60	0.75	1	Minimum	1500	1500	1500	750
			Default	1875	1875	1625	875
			Maximum	2125	2125	2000	2125


- Airflow is controlled within ±5% up to Max ESP shown with wet coil and standard 1-inch fiberglass air filter.
- Performance shown is with wet coil and factory air filters.

Controls: CXM2 and DXM2.5



CXM2 Controls

For detailed controller information, see the CXM2 Application, Operation, and Maintenance (AOM) manual (part # 97B0137N01). To confirm the controller type of your particular unit, refer to digit 9 on the unit model number and the unit nomenclature diagram found on page 3 of this manual.

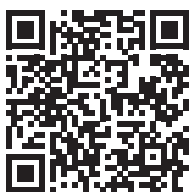

DXM2.5 Controls

For detailed controller information, see the DXM2.5 Application, Operation, and Maintenance (AOM) manual (part # 97B0142N01). To confirm the controller type of your particular unit, refer to digit 9 on the unit model number and the unit nomenclature diagram found on page 3 of this manual.

Models:
SR
006-060

Operating Limits and Commissioning Conditions

OPERATING LIMITS

Environment – Units are designed for indoor installation only. Never install units in areas subject to freezing or where humidity levels could cause cabinet condensation (such as unconditioned spaces subject to 100% outside air).

Power Supply – Voltage utilization shall comply with AHRI Standard 110 or values provided in the electrical data tables.

Determination of operating limits is dependent primarily upon three factors: 1) return air temperature. 2) water temperature, and 3) ambient temperature. When any one of these factors is at minimum or maximum levels, the other two factors should be at normal levels to ensure proper unit operation. Extreme variations in temperature and humidity and/or corrosive water or air will adversely affect unit performance, reliability, and service life.

Table 8: Operating Limits

Operating Limits	Cooling	Heating
Air Limits		
Min. ambient air, DB	*10°F [-12°C]	*10°F [-12°C]
Max. ambient air, DB	130°F [54.4°C]	130°F [54.4°C]
Min. entering air, DB/WB	65/45°F [18/7°C]	50°F [10°C]
Max. entering air, DB/WB	90/72°F [32/22°C]	80°F [27°C]
Min/Max Airflow (CFM/Ton)	**300 to 500 CFM/Ton	
Water Limits		
Min. entering water	***30°F [-1°C]	20°F [-6.7°C]
Max. entering water	120°F [49°C]	90°F [32°C]
Water Flow Range	1.5 to 3.0 gpm/ton [1.6 to 3.2 l/m per kW]****	

Notes:

*To prevent unit damage, the water loop should contain antifreeze to prevent freezing when not in operation.

** Refer to specific blower tables for each model size

***With unit flow-control automation.

**** Unless specified different on performance table for any model size

Unit Maximum Water Working Pressure

Options	Max Pressure PSIG [kPa]
Base Unit	500 [3,447]
Internal Secondary Pump (ISP)	145 [999]
Internal Motorized Water Valve (MWV)	300 [2,068]
Internal Auto Flow Valve	300 [2,068]

Use the lowest maximum pressure rating when multiple options are combined.

COMMISSIONING CONDITIONS

Starting conditions vary depending upon model and are based upon the following notes:

NOTES:

1. Commissioning Conditions are not normal or continuous operating conditions. Minimum/maximum limits are startup conditions to bring the building space up to occupancy temperatures. Units are not designed to operate under these conditions on a regular basis.
2. Voltage utilization range complies with AHRI Standard 110.

Table 9: Commissioning Conditions

Commissioning Conditions	Cooling	Heating
Air Limits		
Min. ambient air, DB	*10°F [-12°C]	*10°F [-12°C]
Max. ambient air, DB	130°F [54.4°C]	130°F [54.4°C]
Min. entering air, DB/WB	65/45°F [18/7°C]	² 40°F [4.4°C]
Max. entering air, DB/WB	¹ 100/75°F [38/24°C]	80°F [27°C]
Min/Max Airflow (CFM/Ton)	**300 to 500 CFM/Ton	
Water Limits		
Min. entering water	***20°F [-6.7°C]	20°F [-6.7°C]
Max. entering water	120°F [49°C]	90°F [32°C]
Water Flow Range	1.5 to 3.0 gpm/ton [1.6 to 3.2 l/m per kW]****	

Notes:

*To prevent unit damage, the water loop should contain antifreeze to prevent freezing when not in operation.

** Refer to specific blower tables for each model size

***With unit flow-control automation.

**** Unless specified different on performance table for any model size

1. Commission units for cooling at entering air temperatures of 100/75°F [38/24°C] only at rated water flow or 3 gpm/ton.
2. Commission units for heating at entering air temperature of 40°F [4.4°C] only at rated water flow or 3 gpm/ton.

Piping System: Cleaning and Flushing

PIPING SYSTEM CLEANING AND FLUSHING

Cleaning and flushing the WLHP piping system is the single most important step to ensure proper start-up and continued efficient operation of the system.

Follow the instructions below to properly clean and flush the system:

1. Ensure that electrical power to the unit is disconnected.
2. Install the system with the supply hose connected directly to the return riser valve. Use a single length of flexible hose.
3. Open all air vents. Fill the system with water. DO NOT allow system to overflow. Bleed all air from the system. Pressurize and check the system for leaks and repair as appropriate.
4. Verify that all strainers are in place ((ClimateMaster recommends a strainer with a #20 stainless steel wire mesh). Start the pumps, and systematically check each vent to ensure that all air is bled from the system.
5. Verify that make-up water is available. Adjust make-up water as required to replace the air which was bled from the system. Check and adjust the water/air level in the expansion tank.
6. Set the boiler to raise the loop temperature to approximately 85°F [29°C]. Open a drain at the lowest point in the system. Adjust the make-up water replacement rate to equal the rate of bleed.
7. Refill the system and add trisodium phosphate in a proportion of approximately one pound per 150 gallons (0.8 kg per 1000 l) of water (or other equivalent approved cleaning agent). Reset the boiler to raise the loop temperature to 100°F [38°C]. Circulate the solution for a minimum of 8 to 24 hours. At the end of this period, shut off the circulating pump and drain the solution. Repeat system cleaning if desired.

8. When the cleaning process is complete, remove the short-circuited hoses. Reconnect the hoses to the proper supply, and return the connections to each of the units. Refill the system and bleed off all air.
9. Test the system pH with litmus paper. The system water should be in the range of pH 6.0 - 8.5 (see the Water Quality Requirements Table). Add chemicals, as appropriate to maintain neutral pH levels.
10. When the system is successfully cleaned, flushed, refilled and bled, check the main system panels, safety cutouts and alarms. Set the controls to properly maintain loop temperatures.

CAUTION

DO NOT use "Stop Leak" or similar chemical agent in this system. Addition of chemicals of this type to the loop water will foul the heat exchanger and inhibit unit operation.

NOTE: The manufacturer strongly recommends all piping connections, both internal and external to the unit, be pressure tested by an appropriate method prior to any finishing of the interior space or before access to all connections is limited. Test pressure may not exceed the maximum allowable pressure for the unit and all components within the water system. The manufacturer will not be responsible or liable for damages from water leaks due to inadequate or lack of a pressurized leak test, or damages caused by exceeding the maximum pressure rating during installation.

Models:
SR
006-060

Unit and System Checkout

UNIT AND SYSTEM CHECKOUT

BEFORE POWERING SYSTEM, please check the following:

UNIT FEATURES

- ❑ **Balancing/shutoff valves:** Ensure that all isolation valves are open and water control valves are wired.
- ❑ **Line voltage and wiring:** Verify that voltage is within an acceptable range for the unit and wiring and fuses/breakers are properly sized. Verify that low voltage wiring is complete.
- ❑ **Unit control transformer:** Ensure that transformer has the properly selected voltage tap.
- ❑ **Entering water and air:** Ensure that entering water and air temperatures are within operating limits of Table 8 and Table 9.
- ❑ **Low water temperature cutout:** Verify that low water temperature cut-out on the CXM2/DXM2.5 control is properly set.
- ❑ **Unit fan:** Manually rotate fan to verify free rotation and ensure that blower wheel is secured to the motor shaft. Be sure to remove any shipping supports if needed. DO NOT oil motors upon startup. Fan motors are pre-oiled at the factory. Check unit fan speed selection and compare to design requirements.
- ❑ **Condensate line:** Verify that condensate line is open and properly pitched toward drain.
- ❑ **Water flow balancing:** Record inlet and outlet water temperatures for each heat pump upon startup. This check can eliminate nuisance trip outs and high velocity water flow that could erode heat exchangers.
- ❑ **Unit air coil and filters:** Ensure that filter is clean and accessible. Clean air coil of all manufacturing oils.
- ❑ **Unit controls:** Verify that CXM2 or DXM2.5 field selection options are properly set.

SYSTEM CHECKOUT

- ❑ **System water temperature:** Check water temperature for proper range and also verify heating and cooling set points for proper operation.
- ❑ **System pH:** Check and adjust water pH if necessary to maintain a level between 6 and 8.5. Proper pH promotes longevity of hoses and fittings (see Table 4).
- ❑ **System flushing:** Verify that all hoses are connected end to end when flushing to ensure that debris bypasses the unit heat exchanger, water valves and other components. Water used in the system must be potable quality initially and clean of dirt, piping slag, and strong chemical cleaning agents. Verify that all air is purged from the system. Air in the system can cause poor operation or system corrosion.
- ❑ **Cooling tower/boiler:** Check equipment for proper setpoints and operation.
- ❑ **Standby pumps:** Verify that the standby pump is properly installed and in operating condition.
- ❑ **System controls:** Verify that system controls function and operate in the proper sequence.
- ❑ **Low water temperature cutout:** Verify that low water temperature cut-out controls are provided for the outdoor portion of the loop. Otherwise, operating problems may occur.
- ❑ **System control center:** Verify that the control center and alarm panel have appropriate setpoints and are operating as designed.
- ❑ **Miscellaneous:** Note any questionable aspects of the installation.

CAUTION

Verify that ALL water control valves are open and allow water flow prior to engaging the compressor. Freezing of the coax or water lines can permanently damage the heat pump.

CAUTION

To avoid equipment damage, DO NOT leave system filled in a building without heat during the winter unless antifreeze is added to the water loop. Heat exchangers never fully drain by themselves and will freeze unless winterized with antifreeze.

Unit Startup Procedure

UNIT STARTUP PROCEDURE

1. Turn the thermostat fan position to "ON". The blower should start.
2. Balance air flow at diffusers.
3. Adjust all valves to their full open positions. Turn on the line power to all heat pumps.
4. Room temperature should be within the minimum-maximum ranges of Table 8 and Table 9. During startup checks, loop water temperature entering the heat pump should be between 60°F [16°C] and 95°F [35°C].
5. Two factors determine the operating limits of ClimateMaster heat pumps, (a) return air temperature, and (b) water temperature. When any one of these factors is at a minimum or maximum level, the other factor must be at normal level to ensure proper unit operation.
 - a. Adjust the unit thermostat to the warmest setting. Place the thermostat mode switch in the "COOL" position. Slowly reduce thermostat setting until the compressor activates.
 - b. Check for cool air delivery at the unit grille within a few minutes after the unit has begun to operate.

NOTE: Units have a five minute time delay in the control circuit that can be eliminated on the CXM2/DXM2.5 control board as shown in Figure 22. See controls description for details.

- c. Verify that the compressor is on and that the water flow rate is correct by measuring pressure drop through the heat exchanger using the P/T plugs and comparing to Table 10.
- d. Check the elevation and cleanliness of the condensate lines. Dripping may be a sign of a blocked line. Check that the condensate trap is filled to provide a water seal.
- e. Refer to Table 13. Check the temperature of both entering and leaving water. If temperature is within range, proceed with the test. Verify correct water flow by comparing unit pressure drop across the heat exchanger versus the data in Table 8.

Heat of rejection (HR) can be calculated and compared to submittal data capacity pages. The formula for HR for systems with water is as follows: $HR \text{ (Btuh)} = TD \times GPM \times 500$, where TD is the temperature difference between the entering and leaving water, and GPM is the flow rate in U.S. GPM, determined by comparing the pressure drop across the heat exchanger to Table 10. In S-I units, the formula is as follows: $HR \text{ (kW)} = TD \times l/s \times 4.18$.

- f. Check air temperature drop across the air coil when compressor is operating. Air temperature drop should be between 15°F and 25°F [8°C and 14°C].
 - g. Turn thermostat to "OFF" position. A hissing noise indicates proper functioning of the reversing valve.
6. Allow five (5) minutes between tests for pressure to equalize before beginning heating test.
 - a. Adjust the thermostat to the lowest setting. Place the thermostat mode switch in the "HEAT" position.
 - b. Slowly raise the thermostat to a higher temperature until the compressor activates.
 - c. Check for warm air delivery within a few minutes after the unit has begun to operate.
 - d. Refer to Table 13. Check the temperature of both entering and leaving water. If temperature is within range, proceed with the test. If temperature is outside of the operating range, check refrigerant pressures. Verify correct water flow by comparing unit pressure drop across the heat exchanger versus the data in Table 9. If the unit came with a factory-installed motorized water valve, verify the valve is in the on position. Units with factory-installed auto flow regulator limit water flow to a prescribed GPM. Verify measured GPM flow rate matches the auto flow regulator set point. Refer to the model number decoder for details on factory-installed options. Heat of extraction (HE) can be calculated and compared to submittal data capacity pages.

Models:
SR
006-060

Unit Startup Procedure

The formula for HE for systems with water is as follows:


HE (kW) = TD x GPM x 500, where TD is the temperature difference between the entering and leaving water, and l/s is the flow rate in U.S. GPM, determined by comparing the pressure drop across the heat exchanger to Table 10. In S-I units, the formula is as follows:

$$HE (kW) = TD \times l/s \times 4.18$$

- e. Check air temperature rise across the air coil when compressor is operating. Air temperature rise should be between 20°F and 30°F [11°C and 17°C].
 - f. Check for vibration, noise, and water leaks.
7. If unit fails to operate, perform troubleshooting analysis (see Functional Troubleshooting). If the check procedure described fails to reveal the problem, and the unit still does not operate, contact a trained service technician to ensure proper diagnosis and repair of the equipment.
 8. When testing is complete, set system to maintain desired comfort level.

NOTE: If performance during any mode appears abnormal, refer to the CXM2/DXM2.5 section or troubleshooting section of this manual. To obtain maximum performance, the air coil should be cleaned before startup. A 10% solution of dishwasher detergent and water is recommended.

Figure 22: Test Mode Button

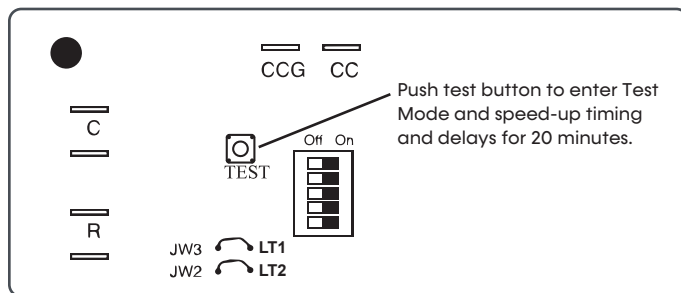

⚠ WARNING

When the disconnect switch is closed, high voltage is present in some areas of the electrical panel. Exercise caution when working with energized equipment.

⚠ CAUTION

Verify that ALL water control valves are open and allow water flow prior to engaging the compressor. Freezing of the coax or water lines can permanently damage the heat pump.

⚠ CAUTION

Many units are installed with a factory or field supplied manual or electric shut-off valve. DAMAGE WILL OCCUR if shut-off valve is closed during unit operation. A high pressure switch must be installed on the heat pump side of any field provided shut-off valves and connected to the heat pump controls in series with the built-in refrigerant circuit high pressure switch to disable compressor operation if water pressure exceeds pressure switch setting. The field installed high pressure switch shall have a cut-out pressure of 300 psig and a cut-in pressure of 250 psig.

Unit Startup Procedure

Table 11: Motorized Water Valve Option Corrections

Model	GPM	MWV Pressure Drop (Adders)				
		CV	Close Off	MOPD	PSI	FT
SR*006	1.75	4.9	125	300	0.1	0.3
	1.31				0.1	0.2
	0.88				0.0	0.1
SR*009	2.5	4.9	125	300	0.3	0.6
	1.88				0.1	0.3
	1.25				0.1	0.2
SR*012	3	4.9	125	300	0.4	0.9
	2.25				0.2	0.5
	1.50				0.1	0.2
SR*015	4	4.9	125	300	0.7	1.5
	3.00				0.4	0.9
	2.00				0.2	0.4
SR*018	4.5	4.9	125	300	0.8	1.9
	3.38				0.5	1.1
	2.25				0.2	0.5
SR*024	6	4.9	125	300	1.5	3.5
	4.5				0.8	1.9
	3				0.4	0.9
SR*030	7.5	10.3	125	300	0.5	1.2
	5.6				0.3	0.7
	3.8				0.1	0.3
SR*036	9	10.3	125	300	0.8	1.8
	6.8				0.4	1.0
	4.5				0.2	0.4
SR*042	10.5	10.3	125	300	1.0	2.4
	7.9				0.6	1.4
	5.2				0.3	0.6
SR*048	12	10.3	125	300	1.4	3.1
	9				0.8	1.8
	6				0.3	0.8
SR*060	15	8.9	125	300	2.8	6.6
	11.3				1.6	3.7
	7.5				0.7	1.6

Table 10: SR Coax Water Pressure Drop

Model	U.S. GPM	l/s	Pressure Drop, psi [kPa]				
			30°F [-1°C]	50°F [10°C]	70°F [21°C]	90°F [32°C]	110°F [43°F]
SR*006	0.75	0.05	0.5	0.3	0.3	0.2	0.2
	1.13	0.07	1.0	0.8	0.7	0.6	0.5
	1.50	0.09	1.6	1.3	1.1	1.0	0.9
SR*009	1.13	0.07	1.3	1.0	0.8	0.7	0.6
	1.69	0.11	2.5	2.0	1.7	1.4	1.3
	2.25	0.14	3.8	3.1	2.7	2.4	2.1
SR*012	1.50	0.09	1.9	1.1	0.8	0.6	0.5
	2.25	0.14	3.6	2.6	2.1	1.8	1.6
	3.00	0.19	6.7	5.0	4.1	3.6	3.2
SR*015	1.88	0.12	0.5	0.5	0.4	0.4	0.3
	2.81	0.18	1.3	1.2	1.0	0.9	0.8
	3.75	0.24	2.3	2.0	1.7	1.5	1.3
SR*018	2.25	0.14	2.7	1.8	1.4	1.3	1.2
	3.38	0.21	5.0	3.4	2.8	2.6	2.5
	4.50	0.28	7.3	5.5	4.5	4.2	3.8
SR*024	2.20	0.14	0.8	0.5	0.4	0.3	0.3
	3.00	0.19	1.3	0.8	0.6	0.6	0.5
	4.50	0.28	2.4	1.6	1.3	1.2	1.1
SR*030	6.00	0.38	3.5	2.5	2.1	2.0	1.8
	2.80	0.18	1.1	0.6	0.4	0.4	0.3
	3.80	0.24	1.8	1.0	0.8	0.7	0.7
SR*036	5.60	0.35	3.3	2.1	1.7	1.6	1.4
	7.50	0.47	4.8	3.3	2.8	2.7	2.5
	3.40	0.21	1.0	0.7	0.6	0.6	0.6
SR*042	4.50	0.28	1.6	1.1	1.0	0.9	0.9
	6.80	0.43	3.0	2.0	1.7	1.7	1.6
	9.00	0.57	4.4	3.3	2.8	2.7	2.6
SR*048	4.25	0.27	0.9	0.8	0.8	0.8	0.7
	5.25	0.33	1.4	1.2	1.1	1.1	1.0
	7.90	0.50	2.7	2.3	2.1	2.1	1.9
SR*060	10.50	0.66	4.3	3.7	3.5	3.3	3.1
	4.20	0.26	0.6	0.6	0.7	0.7	0.5
	6.00	0.38	1.4	1.2	1.1	1.0	1.0
SR*060	9.00	0.57	3.0	2.6	2.3	2.1	2.0
	12.00	0.76	4.9	4.4	4.0	3.6	3.3
	5.25	0.33	1.6	1.3	1.1	1.0	1.0
SR*060	7.50	0.47	2.6	2.3	2.0	1.9	1.7
	11.25	0.71	5.1	4.4	4.0	3.7	3.4
	15.00	0.95	8.2	7.2	6.5	6.1	5.6

*Based on 20% methanol antifreeze solution.

Models:
SR
006-060

Unit Operating Conditions

Operating Pressure/Temperature tables include the following notes:

- Airflow is at nominal (rated) conditions
- Entering air is based upon 70°F [21°C] DB in heating and 80/67°F [27/19°C] in cooling
- Subcooling is based upon head pressure at compressor service port
- Cooling air and water values can vary greatly with changes in humidity level

Table 12: SR Series Typical Unit Operating Pressures and Temperatures

SR*006		Full Load Cooling - without HWG active						Full Load Heating - without HWG active					
Entering Water Temp °F	Water Flow GPM	Discharge Pressure PSIG	Suction Pressure PSIG	Superheat °F	Subcooling °F	Water Temp Rise °F	Air Temp Drop °F DB	Discharge Pressure PSIG	Suction Pressure PSIG	Superheat °F	Subcooling °F	Water Temp Rise °F	Air Temp Drop °F DB
30*	3	126-146	108-118	14-18	14-18	10-12	17-23	289-309	70-80	4-8	12-16	4-6	19-25
	2.25	137-157	109-119	12-16	16-20	16-18	17-23	285-305	67-77	3-7	12-16	5-7	18-24
	1.5	148-168	110-120	11-15	18-22	21-23	17-23	282-302	64-74	3-7	12-16	7-9	18-24
50	3	176-196	114-124	9-13	14-18	10-12	16-22	329-349	103-113	5-9	14-18	5-7	25-31
	2.25	189-209	114-124	9-13	16-20	15-17	16-22	324-344	98-108	5-9	14-18	8-10	25-31
	1.5	202-222	115-125	8-12	19-23	20-22	16-22	318-338	94-104	4-8	14-18	11-13	24-30
70	3	240-260	119-129	7-11	13-17	9-11	15-21	370-390	139-149	7-11	14-18	7-9	32-38
	2.25	254-274	119-129	6-10	16-20	14-16	14-20	362-382	133-143	6-10	14-18	11-13	31-37
	1.5	268-288	120-130	6-10	18-22	19-21	14-20	355-375	126-136	6-10	14-18	14-16	30-36
90	3	317-337	124-134	5-9	12-16	8-10	13-19	411-431	178-188	10-14	11-15	9-11	38-44
	2.25	332-352	124-134	5-9	15-19	13-15	13-19	402-422	169-179	9-13	12-16	13-15	37-43
	1.5	347-367	124-134	5-9	17-21	18-20	13-19	393-413	161-171	8-12	12-16	18-20	35-41
120	3	457-477	130-140	5-9	10-14	7-9	11-17						
	2.25	472-492	131-141	5-9	12-16	12-14	11-17						
	1.5	488-508	131-141	5-9	13-17	16-18	10-16						

*Based on 20% Methanol antifreeze solution

SR*009		Full Load Cooling - without HWG active						Full Load Heating - without HWG active					
Entering Water Temp °F	Water Flow GPM	Discharge Pressure PSIG	Suction Pressure PSIG	Superheat °F	Subcooling °F	Water Temp Rise °F	Air Temp Drop °F DB	Discharge Pressure PSIG	Suction Pressure PSIG	Superheat °F	Subcooling °F	Water Temp Rise °F	Air Temp Drop °F DB
30*	3	126-146	108-118	14-18	14-18	10-12	17-23	289-309	70-80	4-8	12-16	4-6	19-25
	2.25	137-157	109-119	12-16	16-20	16-18	17-23	285-305	67-77	3-7	12-16	5-7	18-24
	1.5	148-168	110-120	11-15	18-22	21-23	17-23	282-302	64-74	3-7	12-16	7-9	18-24
50	3	176-196	114-124	9-13	14-18	10-12	16-22	329-349	103-113	5-9	14-18	5-7	25-31
	2.25	189-209	114-124	9-13	16-20	15-17	16-22	324-344	98-108	5-9	14-18	8-10	25-31
	1.5	202-222	115-125	8-12	19-23	20-22	16-22	318-338	94-104	4-8	14-18	11-13	24-30
70	3	240-260	119-129	7-11	13-17	9-11	15-21	370-390	139-149	7-11	14-18	7-9	32-38
	2.25	254-274	119-129	6-10	16-20	14-16	14-20	362-382	133-143	6-10	14-18	11-13	31-37
	1.5	268-288	120-130	6-10	18-22	19-21	14-20	355-375	126-136	6-10	14-18	14-16	30-36
90	3	317-337	124-134	5-9	12-16	8-10	13-19	411-431	178-188	10-14	11-15	9-11	38-44
	2.25	332-352	124-134	5-9	15-19	13-15	13-19	402-422	169-179	9-13	12-16	13-15	37-43
	1.5	347-367	124-134	5-9	17-21	18-20	13-19	393-413	161-171	8-12	12-16	18-20	35-41
120	3	457-477	130-140	5-9	10-14	7-9	11-17						
	2.25	472-492	131-141	5-9	12-16	12-14	11-17						
	1.5	488-508	131-141	5-9	13-17	16-18	10-16						

*Based on 20% Methanol antifreeze solution

Models:
SR
006-060

Unit Operating Conditions

SR*012		Full Load Cooling - without HWG active						Full Load Heating - without HWG active					
Entering Water Temp °F	Water Flow GPM	Discharge Pressure PSIG	Suction Pressure PSIG	Superheat °F	Subcooling °F	Water Temp Rise °F	Air Temp Drop °F DB	Discharge Pressure PSIG	Suction Pressure PSIG	Superheat °F	Subcooling °F	Water Temp Rise °F	Air Temp Drop °F DB
30*	3	126-146	108-118	14-18	14-18	10-12	17-23	289-309	70-80	4-8	12-16	4-6	19-25
	2.25	137-157	109-119	12-16	16-20	16-18	17-23	285-305	67-77	3-7	12-16	5-7	18-24
	1.5	148-168	110-120	11-15	18-22	21-23	17-23	282-302	64-74	3-7	12-16	7-9	18-24
50	3	176-196	114-124	9-13	14-18	10-12	16-22	329-349	103-113	5-9	14-18	5-7	25-31
	2.25	189-209	114-124	9-13	16-20	15-17	16-22	324-344	98-108	5-9	14-18	8-10	25-31
	1.5	202-222	115-125	8-12	19-23	20-22	16-22	318-338	94-104	4-8	14-18	11-13	24-30
70	3	240-260	119-129	7-11	13-17	9-11	15-21	370-390	139-149	7-11	14-18	7-9	32-38
	2.25	254-274	119-129	6-10	16-20	14-16	14-20	362-382	133-143	6-10	14-18	11-13	31-37
	1.5	268-288	120-130	6-10	18-22	19-21	14-20	355-375	126-136	6-10	14-18	14-16	30-36
90	3	317-337	124-134	5-9	12-16	8-10	13-19	411-431	178-188	10-14	11-15	9-11	38-44
	2.25	332-352	124-134	5-9	15-19	13-15	13-19	402-422	169-179	9-13	12-16	13-15	37-43
	1.5	347-367	124-134	5-9	17-21	18-20	13-19	393-413	161-171	8-12	12-16	18-20	35-41
120	3	457-477	130-140	5-9	10-14	7-9	11-17						
	2.25	472-492	131-141	5-9	12-16	12-14	11-17						
	1.5	488-508	131-141	5-9	13-17	16-18	10-16						

*Based on 20% Methanol antifreeze solution

SR*015		Full Load Cooling - without HWG active						Full Load Heating - without HWG active					
Entering Water Temp °F	Water Flow GPM	Discharge Pressure PSIG	Suction Pressure PSIG	Superheat °F	Subcooling °F	Water Temp Rise °F	Air Temp Drop °F DB	Discharge Pressure PSIG	Suction Pressure PSIG	Superheat °F	Subcooling °F	Water Temp Rise °F	Air Temp Drop °F DB
30*	3	126-146	108-118	14-18	14-18	10-12	17-23	289-309	70-80	4-8	12-16	4-6	19-25
	2.25	137-157	109-119	12-16	16-20	16-18	17-23	285-305	67-77	3-7	12-16	5-7	18-24
	1.5	148-168	110-120	11-15	18-22	21-23	17-23	282-302	64-74	3-7	12-16	7-9	18-24
50	3	176-196	114-124	9-13	14-18	10-12	16-22	329-349	103-113	5-9	14-18	5-7	25-31
	2.25	189-209	114-124	9-13	16-20	15-17	16-22	324-344	98-108	5-9	14-18	8-10	25-31
	1.5	202-222	115-125	8-12	19-23	20-22	16-22	318-338	94-104	4-8	14-18	11-13	24-30
70	3	240-260	119-129	7-11	13-17	9-11	15-21	370-390	139-149	7-11	14-18	7-9	32-38
	2.25	254-274	119-129	6-10	16-20	14-16	14-20	362-382	133-143	6-10	14-18	11-13	31-37
	1.5	268-288	120-130	6-10	18-22	19-21	14-20	355-375	126-136	6-10	14-18	14-16	30-36
90	3	317-337	124-134	5-9	12-16	8-10	13-19	411-431	178-188	10-14	11-15	9-11	38-44
	2.25	332-352	124-134	5-9	15-19	13-15	13-19	402-422	169-179	9-13	12-16	13-15	37-43
	1.5	347-367	124-134	5-9	17-21	18-20	13-19	393-413	161-171	8-12	12-16	18-20	35-41
120	3	457-477	130-140	5-9	10-14	7-9	11-17						
	2.25	472-492	131-141	5-9	12-16	12-14	11-17						
	1.5	488-508	131-141	5-9	13-17	16-18	10-16						

*Based on 20% Methanol antifreeze solution

Models:
SR
006-060

Unit Operating Conditions

SR*018		Full Load Cooling - without HWG active						Full Load Heating - without HWG active					
Entering Water Temp °F	Water Flow GPM	Discharge Pressure PSIG	Suction Pressure PSIG	Superheat °F	Subcooling °F	Water Temp Rise °F	Air Temp Drop °F DB	Discharge Pressure PSIG	Suction Pressure PSIG	Superheat °F	Subcooling °F	Water Temp Rise °F	Air Temp Drop °F DB
30*	3	126-146	108-118	14-18	14-18	10-12	17-23	289-309	70-80	4-8	12-16	4-6	19-25
	2.25	137-157	109-119	12-16	16-20	16-18	17-23	285-305	67-77	3-7	12-16	5-7	18-24
	1.5	148-168	110-120	11-15	18-22	21-23	17-23	282-302	64-74	3-7	12-16	7-9	18-24
50	3	176-196	114-124	9-13	14-18	10-12	16-22	329-349	103-113	5-9	14-18	5-7	25-31
	2.25	189-209	114-124	9-13	16-20	15-17	16-22	324-344	98-108	5-9	14-18	8-10	25-31
	1.5	202-222	115-125	8-12	19-23	20-22	16-22	318-338	94-104	4-8	14-18	11-13	24-30
70	3	240-260	119-129	7-11	13-17	9-11	15-21	370-390	139-149	7-11	14-18	7-9	32-38
	2.25	254-274	119-129	6-10	16-20	14-16	14-20	362-382	133-143	6-10	14-18	11-13	31-37
	1.5	268-288	120-130	6-10	18-22	19-21	14-20	355-375	126-136	6-10	14-18	14-16	30-36
90	3	317-337	124-134	5-9	12-16	8-10	13-19	411-431	178-188	10-14	11-15	9-11	38-44
	2.25	332-352	124-134	5-9	15-19	13-15	13-19	402-422	169-179	9-13	12-16	13-15	37-43
	1.5	347-367	124-134	5-9	17-21	18-20	13-19	393-413	161-171	8-12	12-16	18-20	35-41
120	3	457-477	130-140	5-9	10-14	7-9	11-17						
	2.25	472-492	131-141	5-9	12-16	12-14	11-17						
	1.5	488-508	131-141	5-9	13-17	16-18	10-16						

*Based on 20% Methanol antifreeze solution

SR*024		Full Load Cooling - without HWG active						Full Load Heating - without HWG active					
Entering Water Temp °F	Water Flow GPM	Discharge Pressure PSIG	Suction Pressure PSIG	Superheat °F	Subcooling °F	Water Temp Rise °F	Air Temp Drop °F DB	Discharge Pressure PSIG	Suction Pressure PSIG	Superheat °F	Subcooling °F	Water Temp Rise °F	Air Temp Drop °F DB
30*	6	136-156	100-110	31-35	17-21	9-11	18-24	292-312	67-77	8-12	8-12	4-6	19-25
	4.5	144-164	108-118	22-26	17-21	14-16	19-25	288-308	64-74	8-12	8-12	-1-1	19-25
	3	157-177	110-120	18-22	19-23	21-23	20-26	283-303	60-70	8-12	7-11	8-10	18-24
50	6	190-210	112-122	19-23	15-19	9-11	18-24	328-348	96-106	9-13	10-14	6-8	26-32
	4.5	200-220	115-125	15-19	16-20	13-15	19-25	325-345	93-103	9-13	10-14	1-3	26-32
	3	219-239	116-126	13-17	18-22	20-22	19-25	319-339	87-97	8-12	9-13	11-13	24-30
70	6	259-279	121-131	11-15	14-18	9-11	18-24	366-386	128-138	11-15	10-14	7-9	32-38
	4.5	271-291	121-131	10-14	16-20	13-15	18-24	362-382	124-134	11-15	10-14	3-5	32-38
	3	294-314	122-132	10-14	18-22	20-22	18-24	353-373	116-126	9-13	10-14	14-16	30-36
90	6	343-363	127-137	7-11	13-17	9-11	18-24	404-424	162-172	14-18	8-12	9-11	39-45
	4.5	356-376	126-136	7-11	16-20	13-15	17-23	398-418	156-166	13-17	8-12	6-8	38-44
	3	383-403	127-137	8-12	19-23	19-21	17-23	386-406	145-155	12-16	8-12	18-20	36-42
120	6	497-517	132-142	8-12	15-19	8-10	16-22						
	4.5	512-532	133-143	6-10	17-21	12-14	16-22						
	3	540-560	135-145	7-11	19-23	18-20	15-21						

*Based on 20% Methanol antifreeze solution

Models:
SR
006-060

Unit Operating Conditions

SR*030		Full Load Cooling - without HWG active						Full Load Heating - without HWG active					
Entering Water Temp °F	Water Flow GPM	Discharge Pressure PSIG	Suction Pressure PSIG	Superheat °F	Subcooling °F	Water Temp Rise °F	Air Temp Drop °F DB	Discharge Pressure PSIG	Suction Pressure PSIG	Superheat °F	Subcooling °F	Water Temp Rise °F	Air Temp Drop °F DB
30*	7.5	133-153	107-117	20-24	12-16	9-11	18-24	288-308	66-76	7-11	7-11	3-5	18-24
	5.6	144-164	112-122	14-18	10-14	13-15	19-25	284-304	63-73	7-11	7-11	5-7	18-24
	3.8	156-176	113-123	12-16	12-16	19-21	19-25	281-301	59-69	6-10	7-11	7-9	17-23
50	7.5	174-194	115-125	13-17	10-14	9-11	18-24	321-341	94-104	8-12	7-11	5-7	24-30
	5.6	201-221	117-127	11-15	11-15	13-15	18-24	317-337	92-102	8-12	7-11	7-9	24-30
	3.8	218-238	118-128	9-13	13-17	19-21	18-24	312-332	87-97	7-11	8-12	10-12	23-29
70	7.5	223-243	121-131	8-12	10-14	9-11	17-23	356-376	126-136	11-15	6-10	6-8	30-36
	5.6	272-292	122-132	8-12	11-15	12-14	17-23	351-371	123-133	10-14	6-10	9-11	29-35
	3.8	293-313	123-133	7-11	13-17	18-20	17-23	343-363	115-125	9-13	6-10	13-15	28-34
90	7.5	280-300	127-137	5-9	10-14	9-11	16-22	392-412	161-171	15-19	4-8	8-10	36-42
	5.6	357-377	127-137	6-10	12-16	12-14	16-22	385-405	156-166	13-17	4-8	11-13	35-41
	3.8	379-399	128-138	6-10	14-18	18-20	16-22	375-395	146-156	12-16	4-8	16-18	33-39
120	7.5	383-403	134-144	5-9	11-15	8-10	14-20						
	5.6	508-528	135-145	4-8	12-16	11-13	14-20						
	3.8	531-551	137-147	4-8	15-19	17-19	14-20						

*Based on 20% Methanol antifreeze solution

SR*036		Full Load Cooling - without HWG active						Full Load Heating - without HWG active					
Entering Water Temp °F	Water Flow GPM	Discharge Pressure PSIG	Suction Pressure PSIG	Superheat °F	Subcooling °F	Water Temp Rise °F	Air Temp Drop °F DB	Discharge Pressure PSIG	Suction Pressure PSIG	Superheat °F	Subcooling °F	Water Temp Rise °F	Air Temp Drop °F DB
30*	9	133-153	104-114	22-26	10-14	9-11	19-25	310-330	66-76	9-13	12-16	4-6	20-26
	6	142-162	106-116	17-21	10-14	14-16	20-26	304-324	62-72	8-12	12-16	6-8	19-25
	3	175-195	109-119	10-14	16-20	29-31	21-27	293-313	54-64	10-14	12-16	11-13	17-23
50	9	187-207	111-121	14-18	8-12	9-11	19-25	350-370	96-106	8-12	14-18	5-7	27-33
	6	200-220	112-122	11-15	10-14	14-16	19-25	344-364	91-101	8-12	14-18	8-10	26-32
	3	242-262	114-124	7-11	15-19	29-31	19-25	331-351	80-90	7-11	14-18	15-17	24-30
70	9	255-275	117-127	8-12	8-12	9-11	18-24	392-412	128-138	10-14	14-18	7-9	33-39
	6	271-291	117-127	7-11	10-14	14-16	18-24	385-405	122-132	9-13	14-18	10-12	32-38
	3	320-340	120-130	5-9	15-19	28-30	18-24	366-386	107-117	8-12	15-19	19-21	30-36
90	9	336-356	123-133	5-9	8-12	9-11	18-24	435-455	163-173	15-19	12-16	9-11	40-46
	6	355-375	123-133	5-9	10-14	13-15	18-24	425-445	153-163	14-18	12-16	13-15	38-44
	3	408-428	125-135	4-8	15-19	27-29	17-23	400-420	133-143	11-15	13-17	24-26	34-40
120	9	485-505	130-140	4-8	9-13	9-11	16-22						
	6	505-525	130-140	4-8	10-14	12-14	16-22						
	3	560-580	133-143	3-7	16-20	26-28	15-21						

*Based on 20% Methanol antifreeze solution

Models:
SR
006-060

Unit Operating Conditions

SR*042		Full Load Cooling - without HWG active						Full Load Heating - without HWG active					
Entering Water Temp °F	Water Flow GPM	Discharge Pressure PSIG	Suction Pressure PSIG	Superheat °F	Subcooling °F	Water Temp Rise °F	Air Temp Drop °F DB	Discharge Pressure PSIG	Suction Pressure PSIG	Superheat °F	Subcooling °F	Water Temp Rise °F	Air Temp Drop °F DB
30*	10.5	139-159	100-110	27-31	16-20	9-11	19-25	284-304	63-73	5-9	6-10	4-6	18-24
	7.8	148-168	104-114	21-25	16-20	12-14	19-25	280-300	59-69	4-8	6-10	5-7	17-23
	5.25	163-183	107-117	18-22	18-22	19-21	19-25	275-295	55-65	5-9	6-10	4-6	16-22
50	10.5	189-209	108-118	18-22	15-19	9-11	19-25	319-339	91-101	8-12	5-9	5-7	26-32
	7.8	199-219	110-120	15-19	16-20	13-15	19-25	316-336	88-98	7-11	5-9	7-9	25-31
	5.25	219-239	112-122	13-17	18-22	19-21	19-25	310-330	83-93	7-11	6-10	4-6	24-30
70	10.5	256-276	115-125	11-15	15-19	9-11	18-24	354-374	122-132	12-16	4-8	6-8	32-38
	7.8	268-288	116-126	10-14	16-20	13-15	19-25	351-371	118-128	11-15	4-8	9-11	31-37
	5.25	292-312	117-127	9-13	19-23	19-21	18-24	343-363	112-122	10-14	5-9	5-7	30-36
90	10.5	340-360	121-131	7-11	16-20	8-10	18-24	389-409	155-165	17-21	2-6	8-10	38-44
	7.8	354-374	122-132	6-10	17-21	14-16	18-24	383-403	150-160	16-20	2-6	11-13	37-43
	5.25	381-401	122-132	6-10	21-25	18-20	17-23	374-394	142-152	15-19	3-7	5-7	36-42
120	10.5	498-518	128-138	6-10	19-23	8-10	15-21						
	7.8	515-535	129-139	4-8	20-24	15-17	16-22						
	5.25	544-564	130-140	4-8	24-28	17-19	15-21						

*Based on 20% Methanol antifreeze solution

SR*048		Full Load Cooling - without HWG active						Full Load Heating - without HWG active					
Entering Water Temp °F	Water Flow GPM	Discharge Pressure PSIG	Suction Pressure PSIG	Superheat °F	Subcooling °F	Water Temp Rise °F	Air Temp Drop °F DB	Discharge Pressure PSIG	Suction Pressure PSIG	Superheat °F	Subcooling °F	Water Temp Rise °F	Air Temp Drop °F DB
30*	12	140-160	106-116	21-25	6-10	10-12	18-24	300-320	60-70	0-4	14-18	4-6	20-26
	9	146-166	109-119	16-20	4-8	13-15	19-25	295-315	56-66	2-6	15-19	5-7	20-26
	6	162-182	111-121	12-16	7-11	20-22	19-25	290-310	52-62	-3-1	15-19	7-9	19-25
50	12	189-209	111-121	14-18	7-11	10-12	18-24	335-355	90-100	3-7	10-14	5-7	27-33
	9	198-218	112-122	12-16	7-11	13-15	18-24	331-351	87-97	2-6	10-14	7-9	26-32
	6	219-239	114-124	11-15	10-14	20-22	18-24	324-344	80-90	1-5	11-15	10-12	25-31
70	12	255-275	116-126	10-14	8-12	9-11	18-24	374-394	124-134	7-11	6-10	7-9	33-39
	9	268-288	116-126	10-14	10-14	13-15	18-24	370-390	120-130	6-10	6-10	9-11	32-38
	6	292-312	117-127	10-14	13-17	20-22	17-23	359-379	111-121	5-9	7-11	14-16	31-37
90	12	340-360	121-131	8-12	10-14	9-11	17-23	416-436	162-172	12-16	2-6	8-10	39-45
	9	354-374	121-131	9-13	12-16	12-14	16-22	410-430	156-166	12-16	2-6	12-14	39-45
	6	382-402	121-131	10-14	16-20	19-21	16-22	397-417	145-155	9-13	3-7	17-19	37-43
120	12	499-519	127-137	10-14	14-18	9-11	15-21						
	9	515-535	128-138	10-14	16-20	12-14	14-20						
	6	546-566	129-139	10-14	19-23	18-20	14-20						

*Based on 20% Methanol antifreeze solution

Models:
SR
006-060

Unit Operating Conditions

SR*060		Full Load Cooling - without HWG active						Full Load Heating - without HWG active					
Entering Water Temp °F	Water Flow GPM	Discharge Pressure PSIG	Suction Pressure PSIG	Superheat °F	Subcooling °F	Water Temp Rise °F	Air Temp Drop °F DB	Discharge Pressure PSIG	Suction Pressure PSIG	Superheat °F	Subcooling °F	Water Temp Rise °F	Air Temp Drop °F DB
30*	15	142-162	108-118	36-40	10-14	10-12	18-24	281-301	64-74	7-11	3-7	3-5	18-24
	11.25	151-171	115-125	20-24	3-7	13-15	19-25	276-296	60-70	7-11	3-7	4-6	18-24
	7.5	164-184	118-128	17-21	3-7	20-22	19-25	274-294	57-67	7-11	3-7	7-9	17-23
50	15	191-211	115-125	22-26	9-13	9-11	18-24	315-335	93-103	6-10	3-7	5-7	25-31
	11.25	201-221	118-128	15-19	7-11	13-15	18-24	313-333	90-100	6-10	3-7	7-9	24-30
	7.5	220-240	120-130	13-17	9-13	20-22	18-24	308-328	85-95	6-10	3-7	10-12	23-29
70	15	256-276	121-131	12-16	9-13	9-11	17-23	352-372	126-136	8-12	2-6	7-9	31-37
	11.25	268-288	122-132	11-15	10-14	13-15	17-23	350-370	122-132	8-12	2-6	9-11	31-37
	7.5	292-312	123-133	10-14	14-18	20-22	17-23	342-362	115-125	7-11	2-6	13-15	29-35
90	15	338-358	126-136	8-12	10-14	9-11	16-22	392-412	161-171	14-18	1-5	8-10	37-43
	11.25	350-370	126-136	8-12	13-17	12-14	16-22	387-407	157-167	13-17	1-5	11-13	36-42
	7.5	378-398	127-137	8-12	17-21	19-21	16-22	376-396	147-157	12-16	2-6	16-18	35-41
120	15	491-511	132-142	11-15	15-19	8-10	14-20						
	11.25	505-525	133-143	8-12	15-19	12-14	14-20						
	7.5	537-557	134-144	8-12	18-22	19-21	15-21						

*Based on 20% Methanol antifreeze solution

Preventative Maintenance

WATER COIL MAINTENANCE (WATER LOOP APPLICATIONS)

Generally water coil maintenance is not needed for closed loop systems. However, if the piping is known to have high dirt or debris content, it is best to establish a periodic maintenance schedule with the owner so the water coil can be checked regularly. Dirty installations are typically the result of deterioration of iron or galvanized piping or components in the system. Open cooling towers requiring heavy chemical treatment and mineral buildup through water use can also contribute to higher maintenance. Should periodic coil cleaning be necessary, use standard coil cleaning procedures, which are compatible with both the heat exchanger material and copper water lines. Generally, the more water flowing through the unit, the less chance for scaling. However, flow rates over 3 gpm per ton (3.9 l/m per kW) can produce water (or debris) velocities that can erode the heat exchanger wall and ultimately produce leaks.

HOT WATER GENERATOR COILS

See water coil maintenance for ground water units. If the potable water is hard or not chemically softened, the high temperatures of the desuperheater will tend to scale even quicker than the water coil and may need more frequent inspections. In areas with extremely hard water, a HWG is not recommended.

FILTERS

Filters must be clean to obtain maximum performance. Filters should be inspected every month under normal operating conditions and be replaced when necessary. Units should never be operated without a filter.

CONDENSATE DRAIN

In areas where airborne bacteria may produce a “slimy” substance in the drain pan, it may be necessary to treat the drain pan chemically with an algacide approximately every three months to minimize the problem. The condensate pan may also need to be cleaned periodically to ensure indoor air quality. The condensate drain can pick up lint and dirt, especially with dirty filters. Inspect the drain twice a year to avoid the possibility of plugging and eventual overflow.

COMPRESSOR

Conduct annual amperage checks to ensure that amp draw is no more than 10% greater than indicated on the serial dataplate.

AIR COIL

The air coil must be cleaned to obtain maximum performance. Check once a year under normal operating conditions and, if dirty, brush or vacuum clean. Care must be taken not to damage the aluminum fins while cleaning. **CAUTION: Fin edges are sharp and may cause injury.**

CABINET

Do not allow water to stay in contact with the cabinet for long periods of time to prevent corrosion of the cabinet sheet metal. Generally, vertical cabinets are set up from the floor a few inches (7 - 8 cm) to prevent water from entering the cabinet. The cabinet can be cleaned using a mild detergent.

REPAIRS TO SEALED COMPONENTS

During repairs to sealed components, all electrical supplies shall be disconnected from the equipment being worked upon prior to any removal of sealed covers, etc. If it is absolutely necessary to have an electrical supply to equipment during servicing, then a permanently operating form of leak detection shall be located at the most critical point to warn of a potentially hazardous situation.

Particular attention shall be paid to the following to ensure that by working on electrical components, the casing is not altered in such a way that the level of protection is affected. This shall include damage to cables, excessive number of connections, terminals not made to original specification, damage to seals, incorrect fitting of glands, etc.

Ensure the apparatus is mounted securely.

Ensure that seals or sealing materials have not degraded to the point that they no longer serve the purpose of preventing the ingress of flammable atmospheres. Replacement parts shall be in accordance with the manufacturer’s specifications.

Functional Troubleshooting

Fault	Htg	Clg	Possible Cause	Solution
Main power problems	X	X	Green Status LED Off	Check line voltage circuit breaker and disconnect.
				Check for line voltage between L1 and L2 on the contactor.
				Check for 24VAC between R and C on CXM2/DXM2.5.
				Check primary/secondary voltage on transformer.
HP Fault Code 2 High Pressure		X	Reduced or no water flow in cooling	Check pump operation or valve operation/setting. Check water flow adjust to proper flow rate.
		X	Water Temperature out of range in cooling	Bring water temp within design parameters.
	X		Reduced or no airflow in heating	Check for dirty air filter and clean or replace.
				Check fan motor operation and airflow restrictions.
				Dirty Air Coil - construction dust etc.
				Too high of external static? Check static vs blower table.
	X		Air temperature out of range in heating	Bring return air temp within design parameters.
	X	X	Overcharged with refrigerant	Check superheat/subcooling vs typical operating condition table.
X	X	Bad HP Switch	Check switch continuity and operation. Replace.	
LP/LOC Fault Code 3	X	X	Insufficient charge	Check for refrigerant leaks.
Low Pressure / Loss of Charge	X		Compressor pump down at startup	Check charge and startup water flow.
LT1 Fault Code 4 Water coil low temperature limit	X		Reduced or no water flow in heating	Check pump operation or water valve operation/setting.
				Plugged strainer or filter? Clean or replace.
				Check water flow. Adjust to proper flow rate.
	X		Inadequate antifreeze level	Check antifreeze density with hydrometer.
	X		Improper temperature limit setting (30°F vs 10°F [-1°C vs -2°C])	Clip JW3 jumper for antifreeze (10°F [-12°C]) use.
	X		Water Temperature out of range	Bring water temp within design parameters.
X	X	Bad thermistor	Check temp and impedance correlation per chart.	
LT2 Fault Code 5 Air coil low temperature limit		X	Reduced or no airflow in cooling	Check for dirty air filter and clean or replace. Check fan motor operation and airflow restrictions. Too high of external static? Check static vs blower table.
		X	Air Temperature out of range	Too much cold vent air? Bring entering air temp within design parameters.
		X	Improper temperature limit setting (30°F vs 10°F [-1°C vs -12°C])	Normal airside applications will require 30°F [-1°C] only.
	X	X	Bad thermistor	Check temp and impedance correlation per chart.
	X	X	Blocked drain	Check for blockage and clean drain.
Condensate Fault Code 6	X	X	Improper trap	Check trap dimensions and location ahead of vent.
		X	Poor drainage	Check for piping slope away from unit.
				Check slope of unit toward outlet.
				Poor venting? Check vent location.
		X	Moisture on sensor	Check for moisture shorting to air coil.
	X	X	Plugged air filter	Replace air filter.
	X	X	Restricted Return Airflow	Find and eliminate restriction. Increase return duct and/or grille size.

Table continued on next page.

Models:
SR
006-060

Functional Troubleshooting

Table continued from previous page.

Fault	Htg	Clg	Possible Cause	Solution
Over/Under Voltage Code 7 (Auto resetting)	X	X	Under Voltage	Check power supply and 24VAC voltage before and during operation.
				Check power supply wire size.
	X	X	Over Voltage	Check compressor starting. Need hard start kit?
				Check 24VAC and unit transformer. Tap for correct power supply voltage.
Unit Performance Sentinel Code 8	X	X	Heating mode LT2>125°F [52°C]	Check power supply voltage and 24VAC before and during operation.
			Cooling Mode LT1>125°F [52°C] OR LT2< 40°F [4°C]	Check 24VAC and unit transformer. Tap for correct power supply voltage.
Swapped Thermistor Code 9	X	X	LT1 and LT2 swapped	Check for poor airflow or overcharged unit.
Refrigerant and RDS Code 15	X	X	Refrigerant Leak	Check for poor water flow or airflow.
			Faulty RDS sensor	Check refrigerant charge. If the charge is low, identify and repair the leak.
No Fault Code Shown	X	X	No compressor operation	Check refrigerant charge. If the charge is not low, replace the RDS sensor.
	X	X	Compressor overload	See "Only Fan Operates".
	X	X	Control board	Check and replace, if necessary.
Unit Short Cycles	X	X	Dirty air filter	Reset power and check operation.
	X	X	Unit in "test mode"	Check and clean air filter.
	X	X	Unit selection	Reset power or wait 20 minutes for auto exit.
	X	X	Compressor overload	Unit may be oversized for space. Check sizing for actual load of space.
Only Fan Runs	X	X	Thermostat position	Check and replace, if necessary.
	X	X	Unit locked out	Ensure thermostat set for heating or cooling operation.
	X	X	Compressor Overload	Check for lockout codes. Reset power.
	X	X	Thermostat wiring	Check compressor overload. Replace if necessary.
Only Compressor Runs	X	X	Thermostat wiring	Check thermostat wiring at heat pump. Jumper Y and R for compressor operation in test mode.
	X	X		Check G wiring at heat pump. Jumper G and R for fan operation.
	X	X	Fan motor relay	Check thermostat wiring at heat pump. Jumper Y and R for compressor operation in test mode.
	X	X		Jumper G and R for fan operation. Check for line voltage across BR contacts.
	X	X	Fan motor	Check fan power enable relay operation (if present).
Unit Doesn't Operate in Cooling		X	Reversing valve	Check for line voltage at motor. Check capacitor.
		X		Set for cooling demand and check 24VAC on RV coil and at CXM2/DXM2.5 board.
		X	Thermostat setup	If RV is stuck, run high pressure up by reducing water flow and while operating engage and disengage RV coil voltage to push valve.
		X	Thermostat wiring	Check for 'O' RV setup not 'B'.
		X		Check O wiring at heat pump. Jumper O and R for RV coil 'click'.
		X		Put thermostat in cooling mode. Check 24VAC on O (check between C and O); check for 24VAC on W (check between W and C). There should be voltage on O, but not on W. If voltage is present on W, thermostat may be bad or wired incorrectly.

Performance Troubleshooting

Symptom	Htg	Clg	Possible Cause	Solution
Insufficient capacity/ Not cooling or heating	X	X	Dirty filter	Replace or clean.
	X		Reduced or no airflow in heating	Check for dirty air filter and clean or replace.
				Check fan motor operation and airflow restrictions.
				Too high of external static? Check static vs. blower table.
		X	Reduced or no airflow in cooling	Check for dirty air filter and clean or replace.
				Check fan motor operation and airflow restrictions.
				Too high of external static? Check static vs. blower table.
	X	X	Leaky duct work	Check supply and return air temperatures at the unit and at distant duct registers. If significantly different, duct leaks are present.
	X	X	Low refrigerant charge	Check superheat and subcooling per chart.
	X	X	Restricted metering device	Check superheat and subcooling per chart. Replace.
		X	Defective reversing valve	Perform RV touch test.
X	X	Thermostat improperly located	Check location and for air drafts behind stat.	
X	X	Unit undersized	Recheck loads & sizing. Check sensible cooling load and heat pump capacity.	
X	X	Scaling in water heat exchanger	Perform scaling check and clean if necessary.	
X	X	Inlet water too hot or cold	Check load, loop sizing, loop backfill, ground moisture.	
High Head Pressure	X		Reduced or no airflow in heating	Check for dirty air filter and clean or replace.
				Check fan motor operation and airflow restrictions.
				Too high of external static? Check static vs. blower table.
		X	Reduced or no water flow in cooling	Check pump operation or valve operation/setting.
				Check water flow. Adjust to proper flow rate.
		X	Inlet water too hot	Check load, loop sizing, loop backfill, ground moisture.
	X		Air temperature out of range in heating	Bring return air temperature within design parameters.
		X	Scaling in water heat exchanger	Perform scaling check and clean if necessary.
X	X	Unit overcharged	Check superheat and subcooling. Re-weigh in charge.	
X	X	Non-condensables in system	Vacuum system and re-weigh in charge.	
X	X	Restricted metering device	Check superheat and subcooling per chart. Replace.	
Low Suction Pressure	X		Reduced water flow in heating	Check pump operation or water valve operation/setting.
				Plugged strainer or filter? Clean or replace.
				Check water flow. Adjust to proper flow rate.
	X		Water temperature out of range	Bring water temperature within design parameters.
		X	Reduced airflow in cooling	Check for dirty air filter and clean or replace.
				Check fan motor operation and airflow restrictions.
			Too high of external static? Check static vs. blower table.	
	X	Air temperature out of range	Too much cold vent air? Bring entering air temperature within design parameters.	
X	X	Insufficient charge	Check for refrigerant leaks.	
Low Discharge Air Temperature in Heating	X		Too high of airflow	Check fan motor speed selection and airflow chart.
	X		Poor performance	See 'Insufficient Capacity'

Table continued on next page.

Models:
SR
006-060

Performance Troubleshooting

Table continued from previous page.

Symptom	Htg	Clg	Possible Cause	Solution
High humidity		X	Too high of airflow	Check fan motor speed selection and airflow chart.
		X	Unit oversized	Recheck loads & sizing. Check sensible cooling load and heat pump capacity.
Only Compressor Runs	X	X	Thermostat wiring	Check G wiring at heat pump. Jumper G and R for fan operation.
	X	X	Fan motor relay	Jumper G and R for fan operation. Check for line voltage across blower relay contacts. Check fan power. Enable relay operation (if present).
	X	X	Fan motor	Check for line voltage at motor. Check capacitor.
	X	X	Thermostat wiring	Check thermostat wiring at CXM2. Put in Test Mode and then jumper Y1 and W1 to R to give call for fan, compressor and electric heat.
Unit Doesn't Operate in Cooling		X	Reversing valve	Set for cooling demand and check 24VAC on RV coil. If RV is stuck, run high pressure up by reducing water flow and, while operating, engage and disengage RV coil voltage to push valve.
		X	Thermostat setup	For DXM2.5, check for "O" RV setup, not "B".
		X	Thermostat wiring	Check O wiring at heat pump. CXM2 requires call for compressor. To get RV coil, "Click".
Modulating Valve Troubleshooting	X	X	Improper output setting	Verify the AO-2 jumper is in the 0-10V position.
	X	X	No valve output signal	Check DC voltage between AO2 and GND. Should be 0 when valve is off and between 3.3V and 10V when valve is on.
	X	X	No valve operation	Check voltage to the valve. Replace valve if voltage and control signals are present at the valve and it does not operate.

Models:
SR
006-060

Startup Log Sheet

7300 S.W. 44th Street, Oklahoma City, OK 73179 • Phone: 1-800-299-9747

Installer: Complete *Unit and System Checkout* and follow *Unit Startup Procedures* in the IOM. Use this form to record unit information, temperatures, and pressures during startup. Keep this form for reference.

Job Name: _____

Street Address: _____

Model Number: _____

Serial Number: _____

Unit Location in Building: _____

Date: _____

Sales Order Number: _____

In order to minimize troubleshooting and costly system failures, complete the following checks and data entries before the system is put into full operation.

Fan Motor	Description	Value
PSC	Speed Tap	
CT EC	Speed Tap	
CV EC	CFM Setting	

Temperatures (check one): °F °C Antifreeze: _____ %

Pressures (check one): PSIG kPa Type: _____

	Cooling Mode		Heating Mode
Entering Fluid Temperature			
Leaving Fluid Temperature			
Fluid Temperature Differential			
Return-Air Temperature	DB	WB	DB
Supply-Air Temperature	DB	WB	DB
Air Temperature Differential			
Water Coil Heat Exchanger (Water Pressure IN)			
Water Coil Heat Exchanger (Water Pressure OUT)			
Pressure Differential			
Flow Rate GPM (l/s)			
Compressor			
Amps			
Volts			
Discharge Line Temperature			
Motor			
Amps			
Volts			


NOTES:

1. Allow unit to run 15 minutes in each mode before taking data.
2. Never connect refrigerant gauges during startup procedures.
3. Conduct water-side analysis using P/T ports to determine water flow and temperature difference.
4. If water-side analysis shows poor performance, refrigerant troubleshooting may be required.
5. Connect refrigerant gauges as a last resort.

Models:
SR
006-060

Functional Troubleshooting Form

HEATING CYCLE ANALYSIS -

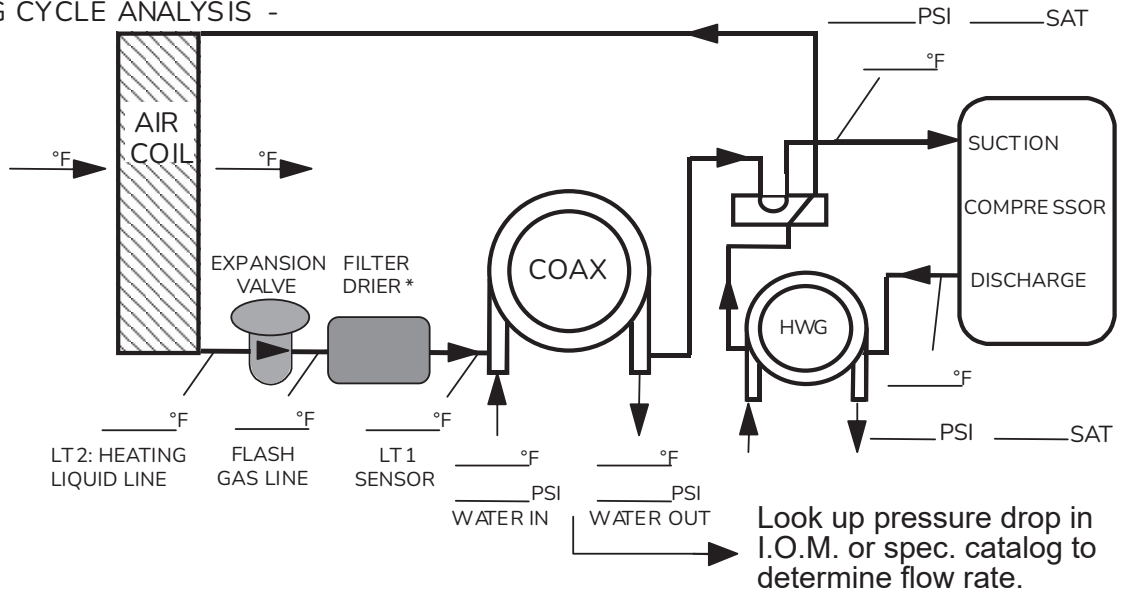

COOLING CYCLE ANALYSIS -


Refrigerant Type:

R-454B

Voltage: _____

Comp Amps: _____

Total Amps: _____

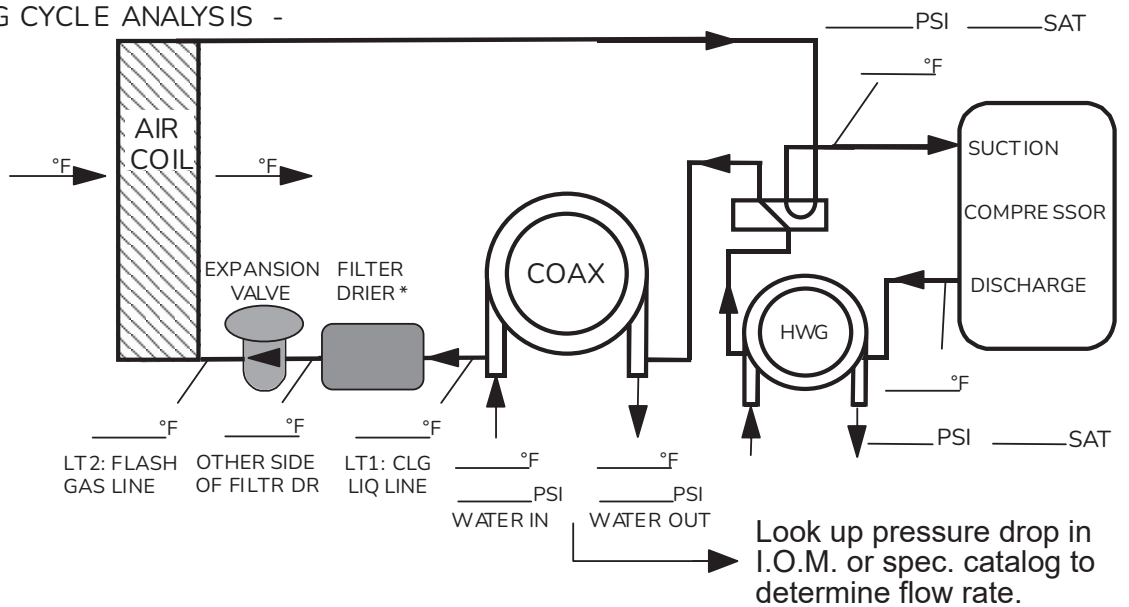

Heat of Extraction (Absorption) or Heat of Rejection =

$$\text{_____ flow rate (gpm)} \times \text{_____ t emp.diff. (deg. F)} \times \text{_____ fluid factor}^\dagger = \text{_____ (Btu/hr)}$$

Superheat = Suction temperature - suction saturation temp. = _____ (deg F)

Subcooling = Discharge saturation temp. - liquid line temp. = _____ (deg F)

[†] Use 500 for water, 485 for antifreeze.

Warranty (U.S. and Canada)

CLIMATE MASTER, INC. LIMITED EXPRESS WARRANTY/ LIMITATION OF REMEDIES AND LIABILITY



It is expressly understood that unless a statement is specifically identified as a warranty, statements made by Climate Master, Inc., a Delaware corporation, ("CM") or its representatives, relating to CM's products, whether oral, written or contained in any sales literature, catalog or any other agreement, are not express warranties and do not form a part of the basis of the bargain, but are merely CM's opinion or commendation of CM's products.

EXCEPT AS SPECIFICALLY SET FORTH HEREIN, THERE IS NO EXPRESS WARRANTY AS TO ANY OF CM'S PRODUCTS. CM MAKES NO WARRANTY AGAINST LATENT DEFECTS. CM MAKES NO WARRANTY OF MERCHANTABILITY OF THE GOODS OR OF THE FITNESS OF THE GOODS FOR ANY PARTICULAR PURPOSE.

GRANT OF LIMITED EXPRESS WARRANTY

CM warrants CM products purchased and retained in the United States of America and Canada to be free from defects in material and workmanship under normal use and maintenance as follows: (1) All complete air conditioning, heating and/or heat pump units built or sold by CM for twelve (12) months from date of unit start up or eighteen (18) months from date of shipment (from factory), whichever comes first; (2) Repair and replacement parts, which are not supplied under warranty, for ninety (90) days from date of shipment (from factory). All parts must be returned to CM's factory in Oklahoma City, Oklahoma, freight prepaid, no later than sixty (60) days after the date of the failure of the part; if CM determines the part to be defective and within CM's Limited Express Warranty, CM shall, when such part has been either replaced or repaired, return such a to a factory recognized dealer, contractor or service organization, F.O.B. CM's factory, Oklahoma City, Oklahoma, freight prepaid. The warranty on any parts repaired or replaced under warranty expires at the end of the original warranty period.

This warranty does not cover and does not apply to: (1) Air filters, fuses, refrigerant, fluids, oil; (2) Products relocated after initial installation; (3) Any portion or component of any system that is not supplied by CM, regardless of the cause of the failure of such portion or component; (4) Products on which the unit identification tags or labels have been removed or defaced; (5) Products on which payment to CM is or has been in default; (6) Products which have defects or damage which result from improper installation, wiring, electrical imbalance characteristics or maintenance; or are caused by accident, misuse or abuse, fire, flood, alteration or misapplication of the product; (7) Products which have defects or damage which result from a contaminated or corrosive air or liquid supply, operation at abnormal temperatures, or unauthorized opening of refrigerant circuit; (8) Mold, fungus or bacteria damages; (9) Products subjected to corrosion or abrasion; (10) Products manufactured or supplied by others; (11) Products which have been subjected to misuse, negligence or accidents; (12) Products which have been operated in a manner contrary to CM's printed instructions; or (13) Products which have defects, damage or insufficient performance as a result of insufficient or incorrect system design or the improper application of CM's products.

CM is not responsible for: (1) The costs of any fluids, refrigerant or other system components, or associated labor to repair or replace the same, which is incurred as a result of a defective part covered by CM's Limited Express Warranty; (2) The costs of labor, refrigerant, materials or service incurred in removal of the defective part, or in obtaining and replacing the new or repaired part; or, (3) Transportation costs of the defective part from the installation site to CM or of the return of any part not covered by CM's Limited Express Warranty.

Limitation: This Limited Express Warranty is given in lieu of all other warranties. If, notwithstanding the disclaimers contained herein, it is determined that other warranties exist, any such warranties, including without limitation any express warranties or any implied warranties of fitness for particular purpose and merchantability, shall be limited to the duration of the Limited Express Warranty.

LIMITATION OF REMEDIES

In the event of a breach of the Limited Express Warranty, CM will only be obligated at CM's option to repair the failed part or unit or to furnish a new or rebuilt part or unit in exchange for the part or unit which has failed. If after written notice to CM's factory in Oklahoma City, Oklahoma of each defect, malfunction or other failure and a reasonable number of attempts by CM to correct the defect, malfunction or other failure and the remedy fails of its essential purpose, CM shall refund the purchase price paid to CM in exchange for the return of the sold goods(s). Said refund shall be the maximum liability of CM. **THIS REMEDY IS THE SOLE AND EXCLUSIVE REMEDY OF THE BUYER OR THEIR PURCHASER AGAINST CM FOR BREACH OF CONTRACT, FOR THE BREACH OF ANY WARRANTY OR FOR CM'S NEGLIGENCE OR IN STRICT LIABILITY.**

LIMITATION OF LIABILITY

CM shall have no liability for any damages if CM's performance is delayed for any reason or is prevented to any extent by any event such as, but not limited to: any war, civil unrest, government restrictions or restraints, strikes or work stoppages, fire, flood, accident, shortages of transportation, fuel, material, or labor, acts of God or any other reason beyond the sole control of CM. **CM EXPRESSLY DISCLAIMS AND EXCLUDES ANY LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGE IN CONTRACT, FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, OR IN TORT, WHETHER FOR CM'S NEGLIGENCE OR AS STRICT LIABILITY.**

OBTAINING WARRANTY PERFORMANCE

Normally, the contractor or service organization who installed the products will provide warranty performance for the owner. Should the installer be unavailable, contact any CM recognized dealer, contractor or service organization. If assistance is required in obtaining warranty performance, write or call:

Climate Master, Inc. • Customer Service • 7300 S.W. 44th Street • Oklahoma City, Oklahoma 73179 (405) 745-6000

NOTE: Some states or Canadian provinces do not allow limitations on how long an implied warranty lasts, or the limitation or exclusions of consequential or incidental damages, so the foregoing exclusions and limitations may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state and from Canadian province to Canadian province.

Please refer to the CM Installation, Operation and Maintenance Manual for operating and maintenance instructions.

Rev.: 11/09



Models:
SR
006-060

Warranty (International)

CLIMATE MASTER, INC. LIMITED EXPRESS WARRANTY /LIMITATION OF REMEDIES AND LIABILITY (FOR INTERNATIONAL CLASS PRODUCTS)



Disclaimer: It is expressly understood that unless a statement is specifically identified as a warranty, statements made by Climate Master, Inc., a Delaware corporation, U.S.A. ("CM") or its representatives, relating to CM's products, whether oral, written or contained in any sales literature, catalog, this or any other agreement or other materials, are not express warranties and do not form a part of the basis of the bargain, but are merely CM's opinion or commendation of CM's products. **EXCEPT AS SPECIFICALLY SET FORTH HEREIN AND TO THE FULLEST EXTENT PERMITTED BY APPLICABLE LAW, CM MAKES NO WARRANTY AS TO ANY OF CM'S PRODUCTS, AND CM MAKES NO WARRANTY AGAINST LATENT DEFECTS OR ANY WARRANTY OF MERCHANTABILITY OF THE GOODS OR OF THE FITNESS OF THE GOODS FOR ANY PARTICULAR PURPOSE.**

GRANT OF LIMITED EXPRESS WARRANTY

CM warrants CM products purchased and installed outside the United States of America ("U.S.A.") and Canada to be free from material defects in materials and workmanship under normal use and maintenance as follows: (1) All complete air conditioning, heating or heat pump units built or sold by CM for twelve (12) months from date of unit start-up or eighteen (18) months from date of shipment (from CM's factory), whichever comes first; and, (2) Repair and replacement parts, which are not supplied under warranty, for ninety (90) days from date of shipment (from factory).

Warranty parts shall be furnished by CM if ordered through an authorized sales representative of CM ("Representative") within sixty (60) days after the failure of the part. If CM determines that a parts order qualifies for replacement under CM's warranty, such parts shall be shipped freight prepaid to the ultimate user, as requested by Representative. All duties, taxes and other fees shall be paid by the ultimate user through the Representative.

If requested by CM, all defective parts shall be returned to CM's factory in Oklahoma City, Oklahoma, U.S.A., freight and duty prepaid, not later than sixty (60) days after the date of the request. If the defective part is not timely returned or if CM determines the part to not be defective or otherwise not to qualify under CM's Limited Express Warranty, CM shall invoice Customer the costs for the parts furnished, including freight. The warranty on any part repaired or replaced under warranty expires at the end of the original warranty period.

This warranty does not cover and does not apply to: (1) Air filters, fuses, refrigerant, fluids, oil; (2) Products released after initial installation; (3) Any portion or component of any system that is not supplied by CM, regardless of the cause of the failure of such portion or component; (4) Products on which the unit identification tags or labels have been removed or defaced; (5) Products on which payment by Customer to CM or its distributors or Representatives, or the Customer's seller is in default; (6) Products which have defects or damage which result from improper installation, wiring, electrical imbalance characteristics or maintenance; or from parts or components manufactured by others; or are caused by accident, misuse, negligence, abuse, fire, flood, lightning, alteration or misapplication of the product; (7) Products which have defects or damage which result from contaminated or corrosive air or liquid supply, operation at abnormal temperatures or flow rates, or unauthorized opening of the refrigerant circuit; (8) Mold, fungus or bacteria damages; (9) Products subjected to corrosion or abrasion; (10) Products, parts or components manufactured or supplied by others; (11) Products which have been subjected to misuse, negligence or accidents; (12) Products which have been operated in a manner contrary to CM's printed instructions; (13) Products which have defects, damage or insufficient performance as a result of insufficient or incorrect system design or the improper application, installation, or use of CM's products; or (14) Electricity or fuel costs, or any increases or unrealized savings in same, for any reason.

CM is not responsible for: (1) The cost of any fluids, refrigerant or other system components, or the associated labor to repair or replace the same, which is incurred as a result of a defective part covered by CM's Limited Express Warranty; (2) The cost of labor, refrigerant, materials or service incurred in diagnosis and removal of the defective part, or in obtaining and replacing the new or repaired part; (3) Transportation costs of the defective part from the installation site to CM or of the return of any part not covered by CM's Limited Express Warranty; or (4) The costs of normal maintenance.

Limitation: This Limited Express Warranty is given in lieu of all other warranties. If, notwithstanding the disclaimers contained herein, it is determined by a court or other qualified judicial body that other warranties exist, any such warranty, including without limitation any express warranty or any implied warranty of fitness for particular purpose and merchantability, shall be limited to the duration of the Limited Express Warranty. This Limited Express Warranty does not exclude any warranty that is mandatory and that may not be excluded under applicable imperative law.

LIMITATION OF REMEDIES

In the event of a breach of this Limited Express Warranty or any warranty that is mandatory under applicable imperative law, CM will only be obligated at CM's option to either repair the failed part or unit or to furnish a new or rebuilt part or unit in exchange for the part or unit which has failed. If after written notice to CM's factory in Oklahoma City, Oklahoma, U.S.A. of each defect, malfunction or other failure and a reasonable number of attempts by CM to correct the defect, malfunction or other failure and the remedy fails of its essential purpose, CM shall refund the purchase price paid to CM in exchange for the return of the sold good(s). Said refund shall be the maximum liability of CM. **TO THE FULLEST EXTENT PERMITTED BY APPLICABLE LAW, THIS REMEDY IS THE SOLE AND EXCLUSIVE REMEDY OF THE CUSTOMER AGAINST CM FOR BREACH OF CONTRACT, FOR THE BREACH OF ANY WARRANTY OR FOR CM'S NEGLIGENCE OR IN STRICT LIABILITY.**

LIMITATION OF LIABILITY

CM shall have no liability for any damages if CM's performance is delayed for any reason or is prevented by any event such as, but not limited to: any war, civil unrest, government restrictions or restraints, strikes, or work stoppages, fire, flood, accident, alienation, shortages of transportation, fuel, materials, or labor; acts of God or any other reason beyond the sole control of CM. **TO THE FULLEST EXTENT PERMITTED BY APPLICABLE LAW AND SUBJECT TO THE NEXT SENTENCE, CM EXPRESSLY DISCLAIMS AND EXCLUDES ANY LIABILITY FOR LOSS OF PROFITS, LOSS OF BUSINESS OR GOODWILL, CONSEQUENTIAL, INCIDENTAL, SPECIAL, LIQUIDATED, OR PUNITIVE DAMAGE IN CONTRACT, FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, OR IN TORT, WHETHER FOR CM'S NEGLIGENCE OR AS STRICT LIABILITY.** Nothing in this Agreement is intended to exclude CM's liability for death, personal injury or fraud.

OBTAINING WARRANTY PERFORMANCE

Normally, the contractor or service organization who installed the products will provide warranty performance for the owner. Should the installer be unavailable, contact any CM recognized Representative. If assistance is required in obtaining warranty performance, write or call:

Climate Master, Inc. • Customer Service • 7300 S.W. 44th Street • Oklahoma City, Oklahoma, U.S.A. 73179 • (405) 745-6000 • FAX (405) 745-6068

NOTE: Some countries do not allow limitations on how long an implied warranty lasts, or the limitation or exclusions of consequential or incidental damages, so the foregoing exclusions and limitations may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state and country to country.

Please refer to the CM Installation, Operation and Maintenance Manual for operating and maintenance instructions.



Created: 10/09

Notes

Models:
SR
006-060

Models:
SR
006-060

Revision History

Date	Section	Description
03/06/2024	All	Added sizes 006-018 to the document.
01/18/24	All	Created



A NIBE GROUP MEMBER

7300 SW 44th St. | Oklahoma City, OK 73179
Phone: 1-800-299-9747
www.climatemaster.com



ClimateMaster works continually to improve its products. As a result, the design and specifications of each product at the time of order may be changed without notice and may not be as described herein. Please contact ClimateMaster's Customer Service Department at 1-800-299-9747 for specific information on the current design and specifications. Statements and other information contained herein are not express warranties and do not form the basis of any bargain between the parties, but are merely ClimateMaster's opinion or commendation of its products. The latest version of this document is available at www.climatemaster.com.

Engineered and assembled in the USA.

© ClimateMaster, Inc. All Rights Reserved 2024