



## INSTALLATION INSTRUCTIONS

97B0042N06  
REV.: 7 February, 2020

ENERGY RECOVERY VENTILATOR

SERIES OB, OC, OD, OE, OF, & OG

### Installation Instructions For Energy Recovery Ventilator (Fixed) For Stand Alone Rooftop Application



Energy recovery COMPONENT certified to the AHRI Air-to-Air Energy Recovery Ventilation Equipment Certification Program in accordance with AHRI Standard 1060-2000. Actual performance in packaged equipment may vary.



ETL Certified per UL 1995 and CSA 22.2

#### Inspection

Upon receipt of shipment at the job site, carefully check the shipment against the bill of lading. Make sure all units have been received. Inspect the carton or crating housing of each Rooftop Unit and inspect each unit for damage. Assure that the carrier makes proper notation of any shortages or damage on all copies of the freight bill and that he completes a Carrier Inspection Report. Concealed damage not discovered during unloading must be reported to the carrier within 15 days of receipt of shipment. **NOTE: It is the responsibility of the purchaser to file all necessary claims with the carrier.**

#### Storage

Upon the arrival of equipment at the job site, immediately store units in a clean, dry area. Do not stack units. **Do not remove equipment from pallets until equipment is required for installation.**

#### Unit Protection

Cover rooftop units on the job site. Cap the open ends of pipes. In areas where painting, plastering, roofing, or the spraying of fireproof material has not been completed, all due precautions must be taken to avoid physical damage to the units and contamination by foreign material. **Physical damage and contamination may prevent proper start-up and may result in costly equipment cleanup.**

#### Application

These Energy Recovery Ventilators (ERVs) are used in a down discharge manner equipped **with a field provided balancing damper assembly through the roof**. A roof curb must be provided by contractor to manufacturers specifications. These ventilators conserve energy by transferring humidity and heat energy across two opposing air streams using a rotary heat exchanger (the energy recovery wheel). This process works in the summer by rejecting heat energy from incoming intake air and in the winter by conserving heat energy from the exhaust air, allowing outdoor ventilation rates to be increased by factors of three or more without additional energy penalty or increase in size of heating or air conditioning systems

#### Rigging Unit For Lifting

1. Maximum weight of the unit varies per series (300-3000 lbs crated)
2. Remove crating
3. All panels must be in place for rigging.
4. Remove box containing screws and accessories from the Controls section.
5. Roof curb should be secured before installing ERV on curb. (refer to roof curb install instructions).
6. Forklift channels (if used) must be removed from the base of the ERV before setting unit on curb. **See Figure 1.**
7. Attach lifting straps to the provided lifting lugs on the top 4 corners of the unit.
8. Position unit on roof curb being sure to provide service access to ERV control access door and wheel.

### ⚠ CAUTION! ⚠

**CAUTION!** Danger of sharp metallic edges. Can cause injury. Take care when servicing unit to avoid accidental contact with sharp edges.

### ⚠ WARNING! ⚠

**WARNING!** Electric shock hazard. Can cause injury or death. Before attempting to perform any service or maintenance, turn the electrical power to unit OFF at disconnect switch(es). Unit may have multiple power supplies.

### ⚠ WARNING! ⚠

**WARNING!** To avoid equipment damage, do not use these units as a source of heat during the construction process. The mechanical components and filters used in these units will quickly become clogged with construction dirt and debris which may cause system damage.

### ⚠ WARNING! ⚠

**WARNING!** The installation of water-source heat pumps and all associated components, parts, and accessories which make up the installation shall be in accordance with the regulations of ALL authorities having jurisdiction and MUST conform to all applicable codes. It is the responsibility of the installing contractor to determine and comply with ALL applicable codes, regulations and ANSI/NFPA No. 70

O (ERV) Series

REV.: 7 February, 2020


**This Page Intentionally Left Blank**

## O Series Stand Alone ERV'S For Over and Under Duct Arrangements



### Features and Notes

1. Stand alone design allows higher levels of outdoor air to be introduced into the a/c space.
2. Static test ports provided to verify intake and exhaust CFM.
3. Balancing damper(s) is field provided when connected to ductwork. System may not operate properly without balancing damper.
4. Roof curbs are available for the ERV's.
5. See blower performance charts for airflow at various E.S.P..
6. Filter rack with 2" pleated filters included.

ERV Roof Curbs	
Series	Model Number
OB	ACURBEVFB
OC	ACURBEVFC
OD	ACURBEVFD
OE	ACURBEVFE
OF	ACURBEVFF
OG	ACURBEVFG

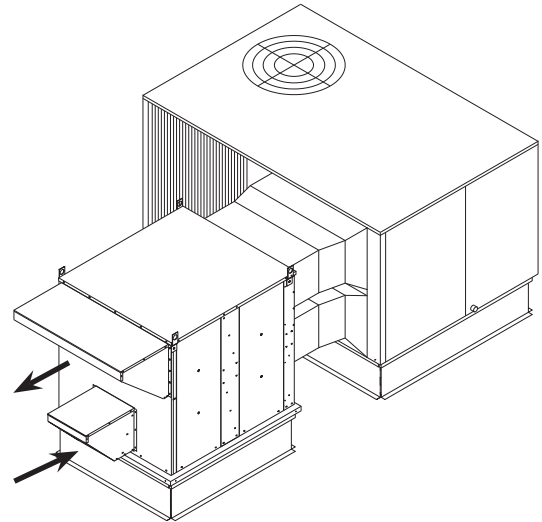

ERV with Horizontal Ductwork  
(balancing damper(s) field supplied)

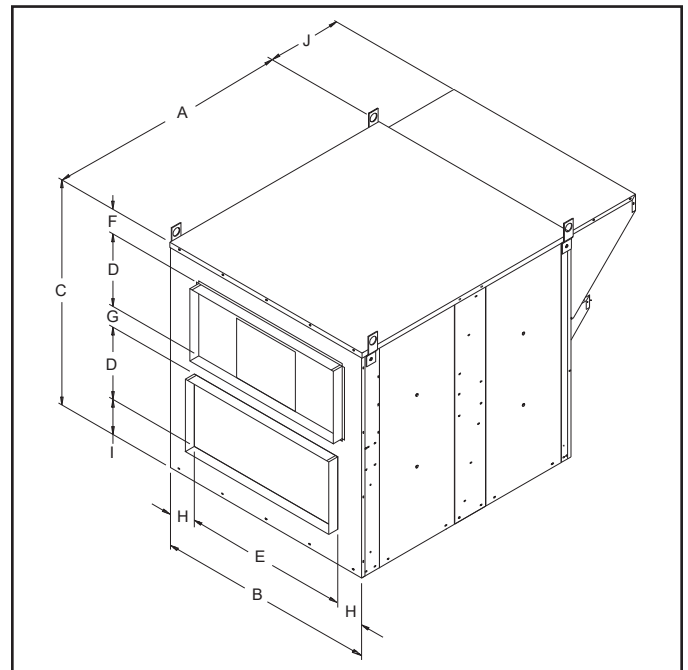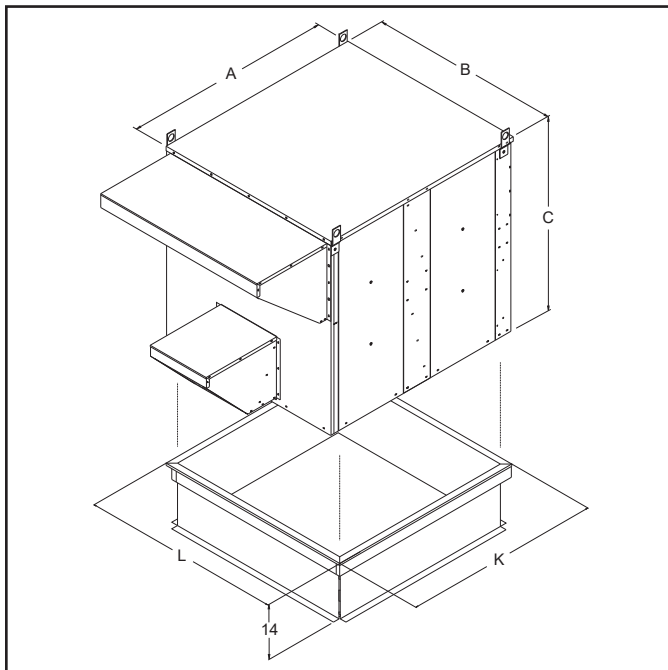

ERV Data		Dimensional Data											
ERV Series	CFM Range	ERV				Roof Curb							
		A	B	C	D	E	F	G	H	I	J	K	L
OB	300-1100	56.75	32.13	39.50	11.00	27.00	6.50	10.00	2.56	1.00	11.00	55.00	30.25
OC	1200-2000	54.38	37.25	37.50	12.00	30.00	8.00	4.00	3.63	1.50	20.32	52.75	35.50
OD	1200-2800	60.00	42.63	43.56	14.00	32.00	9.56	4.50	5.31	1.50	18.32	49.50	41.00
OE	2000-3600	60.00	46.69	57.37	16.50	39.50	12.13	6.38	3.59	5.88	18.32	55.75	41.81
OF	3000-4600	60.00	52.69	57.37	16.50	39.50	12.13	6.38	6.59	5.88	18.32	55.75	47.81
OG	4600-6200	72.00	70.88	63.63	19.50	39.50	12.13	6.50	15.69	5.88	18.32	67.75	66.00

## O (ERV) Series

REV.: 7 February, 2020

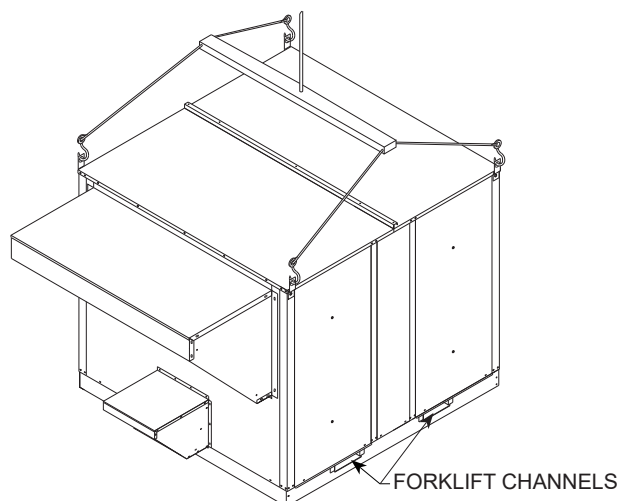


Figure 1

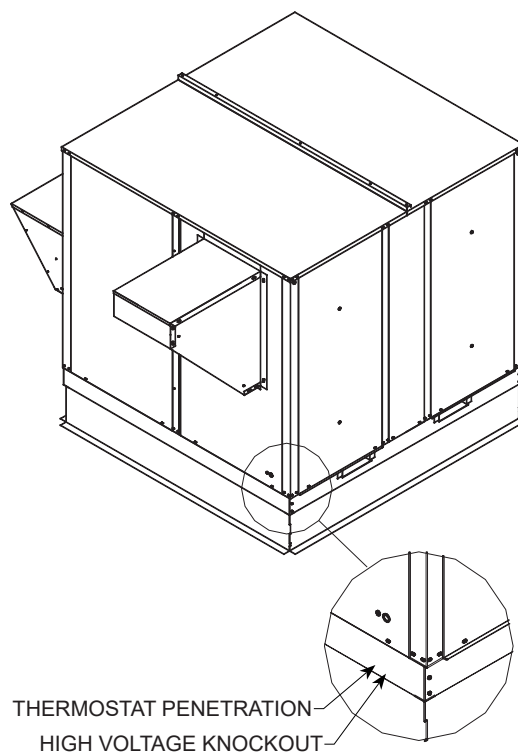


Figure 3

**Installation**

1. Install exhaust hood assembly shipped with ERV on pallet using screws provided in accessory box. On units with motorized exhaust damper connect Plug (P.161) to jack after removing PK-3 jumper before attaching hood with screws. **See Figure 2.**

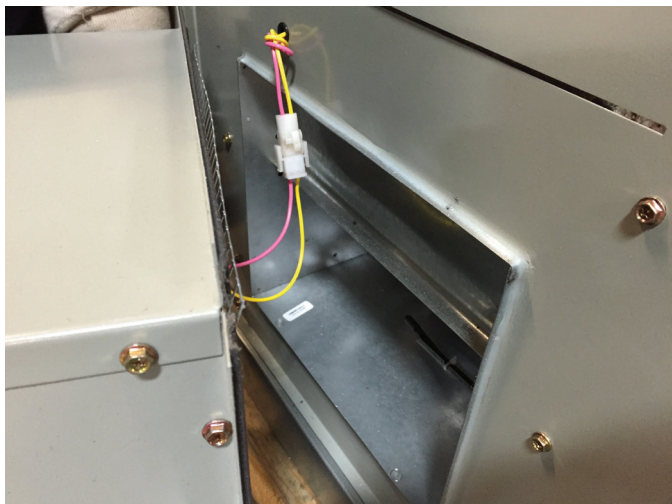


Figure 2

2. Remove ERV control access panels to connect field wiring.

**Low Voltage**

3. Route Class II low voltage wire (3 conductor) from thermostat, relay, or Energy Management through small bushing provided in the end panel in the ERV. **See Figure 3** for location of penetration.
4. Connect low voltage wires to terminals 1-3 on the control board according to the Mechanical Engineers chosen controls scheme. **See Stand Alone ERV Controls Schemes for options on Page 4.**

5. On units with Variable Frequency Drives a separate terminal strip is provided to connect low voltage (0-10 VDC) controls [field supplied] for the Drives. **See Stand Alone ERV Controls Schemes / Optional Kits on Page 5.**

**High Voltage**

6. All Electrical connections must conform to any local codes and current National Electric Codes (NEC) or Canadian Electric Codes (CEC). Refer closely to unit wiring diagram in the unit and/or in these instructions for proper wiring connections.
7. Refer to unit nameplate for minimum circuit ampacity (MCA) and maximum overcurrent protection size (fuse).
8. Electrical data is listed on unit rating plate as well as the motor name plates.
9. Connect line voltage power from field installed power disconnect to ERV fuse block in the control box of the unit. Use provided knockout on outside panel next to controls section. **See Wiring Diagrams Page 11-14.**
10. **Ground unit with suitable ground connection** either through unit supply wiring or to an earth ground.

**Note: Unit voltage entries must be sealed weather tight after wiring is complete.**

11. Remove motor access panels, check that blowers have belts in place and that motors spin freely. Blower RPM can be adjusted to meet CFM and external static pressure requirements by adjusting the sheave on the blower motors and by replacing the pulley kits on units ordered without variable frequency drives. Multiple pulley arrangements are

available from the manufacturer to meet the entire range of the units CFM options.

## ⚠CAUTION! ⚠

**CAUTION!** Blower speed must be adjusted for the given external static pressure and airflow (CFM) requirements. If blower speed is not adjusted for conditions, possible motor overloading can occur.

12. Unit Startup. Turn on power disconnect, turn on unit either from controls or by Jumping 24v+ from transformer (blue low voltage wire) to terminal #1. Check that motors are spinning the right direction (3 phase units only) that the enthalpy wheel is spinning and that motorized intake air and exhaust dampers are opening.

***If unit is operating properly proceed to next step, if not operating properly See Trouble shooting guide on Page 7.***

13. Clean up, caulk any open joints, holes or seams to make the unit completely air and water tight. Remove any jumpers, replace all access panels on the unit and secure.
14. Leave this instruction manual with the owner or in an envelope near the unit.

**See System Check or Trouble shooting guide for further information on the proper operation of the ERV.**

### VIII - Stand Alone ERV Controls Schemes

#### Dependent options

**Thermostat:** This is the standard way to wire an ERV, when the ductwork of the stand alone ERV is attached to the ductwork of a single AC system the controls of the ERV should be wired in parallel with the controls with "G" to 1, "C" to 2 and "W" to 3. The ERV will operate when ever the RTU's blower is operating.

**Energy Management:** Building Management Systems: The ERV needs a 24 Volt AC signal to operate, connect the 24V+ to 1 and the 24V C to 2, the unit can be operated off of a relay or BMS controller if necessary.

#### Dedicated options

When using a control method that does not involve an outside 24V controls signal power can be borrowed from the unit's transformer for short thermostat wire runs. Any run over 150' however should be powered by a separate transformer.

**Thermostat:** When using an ERV to service a large area with multiple AC units or when not tying directly into the ductwork of a single AC system the ERV can be run off of its own Thermostat. Splice the 24V+ wire "R" onto the XFORMER + terminal of the ERV control board, then wire "G" and "C" onto terminals 1 and 2 respectively, program Thermostat to energize G when space is occupied.

**CO<sub>2</sub> Sensor/ Transmitter:** An ERV can be wired to a wall mounted CO<sub>2</sub> Sensor/ Transmitter with relay like Johnson Controls CD-WR0-00-0 (or CD-WRD-00-0) in order to operate the ERV when ventilation is required due to high CO<sub>2</sub> levels. This type of transmitter has an adjustable set point, and a relay that the 24V+ signal can be wired into and "G" wire can be wired out of. "G" should be wired to #1 terminal. The ERV will then turn on and provide fresh air to the space to lower CO<sub>2</sub> levels.

**Quickstep:** Units equipped with the Quick Step controls option use an onboard microprocessor, factory installed CO<sub>2</sub> sensor and variable frequency drives to modulate airflow through the ERV to control for Carbon Dioxide. To operate the unit enter the Supply and Exhaust CFM values (they do not have to be the same value) into the Quick Step flexstat control along with maximum CO<sub>2</sub> level and the controls will modulate the blowers to ensure CO<sub>2</sub> levels are not above set point.

**ON/OFF switch or Timer:** Wire 24V+ from transformer onto the input of the switch and connect the output of the switch to terminal 1 on the control board. The ERV can be turned on manually or be set to turn on at a regular schedule when the building is occupied.

### IX - Operation How It Works

The unit contains an energy recovery wheel (ERW) that is a revolutionary concept in rotary air-to-air heat exchangers. Designed as a packaged unit for ease of installation and maintenance, only the connection of electrical power is required to make the system operational.

When slowly rotating through counter flowing exhaust and fresh air streams the ERW absorbs sensible heat and latent heat from the warmer air stream in the first half of its rotation and transfers this total energy to the cooler air stream during the second half of this rotating cycle. Rotating at 50-60 RPM, the ERW provides a constant flow of energy from the warmer to the cooler air stream. The large energy transfer surface and laminar flow through the ERW causes this constant flow of recovered energy to represent up to 85% of the difference in total energy contained within the two air streams.

Sensible and latent heat are the two components of total heat, sensible heat is energy contained in dry air and latent heat is the energy contained within the moisture of the air. The latent heat load from the outdoor fresh air on an air conditioning system can often be two to three times that of the sensible heat load and in the winter it is a significant part of a humidification heat load.

During both the summer and the winter, the ERW transfers moisture entirely in the vapor phase. This eliminates wet surfaces that retain dust and promote fungal growth as well as the need for a condensate pan and drain to carry water.

Because it is constantly rotating when in the air stream, the ERW is always being cleaned by air, first in one direction and then the other. Because it is always dry, dust or other particles impinging on the surface during one half of the cycle are readily removed during the next half of the cycle.

During the heating season, when outdoor air temperatures are below 15°F, it is recommended to use the (optional) low ambient kit.

#### Optional Kits

##### Motorized Intake Air Damper

This damper mounts inside the outdoor air intake hood, it opens when the ERV supply blower is energized and closes when de-energized.

##### Motorized Exhaust Air Damper

Damper mounts inside the exhaust air hood, it opens when the ERV is energized and closes when the ERV is de-energized.

## O (ERV) Series

REV.: 7 February, 2020

**Pressure Sensors**

Measurement devices (MagnaHelics) on ERV that measure pressure across the energy recovery wheel.

**Rotation Sensor**

A magnetic sensor and logic board that measure pulses from a magnet on the spinning energy recovery wheel. A lack of measured pulses after initial start up results in an alarm. The alarm can be wired into building management hardware or to a thermostat with alarm switch terminals, it will warn that the wheel has stopped spinning, but does not otherwise effect operation.

**Stop, Start, Jog [Climate Smart]**

This option adds an Economizer or free cooling mode to the ERV. The wheel stops spinning to allow air to pass without energy transfer, starting and spinning intermittently in order to keep the wheel clean.

**Low Ambient Kit**

Prevents frost buildup on energy recovery wheel by terminating intake air when the discharge air temperature falls below a set level. Intake blower operation resumes after a 16°F rise above the field adjustable set point.

The frost threshold is the outdoor temperature at which frost will begin to form on the ERV wheel. For energy recovery ventilators, the frost is typically below 10°F. Frost threshold is dependent on indoor temperature and humidity. The table shows how the frost threshold temperatures vary depending on indoor conditions.

FROST THRESHOLD TEMPERATURE	
INDOOR RH AT 70°F	FROST THRESHOLD TEMPERATURE
20%	0°F
30%	5°F
40%	10°F

Because energy recovery ventilators have a low frost threshold, frost control options are not necessary in many climates. The Low Ambient Kit is available for units installed where outdoor temperatures may drop below the frost threshold during the ERV operational hours.

**Filter Racks/ Filter Options**

Stand alone units come with return air filters standard, MERV 8, 11, or 13 filters can be ordered with the unit. Supply air filter racks can be added as an option with the same efficiency filter options.

**Dirty Filter Switches**

Pressure differential switches that can be hooked up to an alarm to alert when pressure drops across a filter bank indicating dirty or clogged filter, they do not otherwise effect operation.

**Wheel Type**

While the standard energy recovery wheel absorbs both sensible and latent heat a sensible only wheel can be ordered for applications where the sensible portion of the heat load needs to be removed from a space without returning the humidity.

**Smoke Detector**

Smoke detectors can be factory ordered with the ERV, a qualified technician needs to field wire the smoke detector into the controls to break common in case of alarm.

**CO<sub>2</sub> Sensor**

**See Quickstep in Controls schemes.** A factory installed CO<sub>2</sub> sensor can be added to the unit to adjust ventilation on a CO<sub>2</sub> parts per million demand. This sensor is mounted next to the return air inlet and is not a relay, it only provides feedback to the quick step controls to adjust motor speed and is not suitable to turn the unit on and off on CO<sub>2</sub> demand.

**Modulating Wheel Frost Control**

The modulating wheel feature uses a variable frequency drive to modulate the wheel's speed based on outside air temperature. The wheels RPM will slow as the temperature drops, hence lowering the effectiveness of the wheel and preventing icing up. The variable frequency drive is programmed to have minimum frequency of 15hz so the wheel speed does not interfere with the wheel rotation sensor's operation. This feature is useful in applications with a large demand for outside air and possible lack of pre heat.

**Variable Frequency Drives**

VFDs are available as an option to either balance airflow or modulate airflow on an external demand for ventilation as well as to provide a soft start and stop for the blowers. The drives are prewired in the unit to contact closures turning the drives on and a terminal strip where an external 0-10 volt DC control wires should be attached. For balancing an external 10 volt DC signal can be adjusted via a potentiometer until the desired CFM is reached, use separate potentiometers if the supply and exhaust CFM differ. To modulate airflow on demand a 3rd party controller connected to a building management system is needed to send the 0-10 volt DC signals as well as the 24v AC "On" signal.

**IX - System Check**

1. Disconnect main power
2. On units controlled by thermostats turn T-stat fan switch to "On". Otherwise jump 24v+ to terminal #1.
3. Restore power to unit, observe ERV wheel rotation and both fresh air and exhaust air blowers.

**Note: If the low ambient kit is used the jumper between terminals 5&6 should be removed and replaced with blue and yellow wires for the sensor. If system check out is being done at low ambient temperatures this kit can cause the unit not to operate. Under these conditions jump terminals 5&6.**

4. Verify the ERV three phase blower motors are phased sequentially ensuring correct rotation and operation. If both blowers are running backwards:
  - A. Disconnect Power.
  - B. Reverse and two high voltage line in wires on the ERVs fuse block.
  - C. Reapply Power.

**Note: Blower Motor rotation is checked in factory, do not switch wires at contactors or on motors if blowers are spinning backwards at startup.**

5. Verify that both blower motors are operating under their full load AMP rating (FLA). The FLA can be found on each motor and on the unit's name plate.

6. Verify that the fresh air and exhaust air motorized dampers are opening and closing when unit turns on/off.

**Note: If unit is not operating properly refer to troubleshooting guide.**

7. Return damper settings. When tied into an HVAC system manually adjust the position of the field installed dampers to balance Air flow.
8. Static test ports are provided to verify intake and exhaust CFM, these ports can also be used with a temperature probe to verify temperature transfer through the wheel.

Adjustment to the blower speed is accomplished by changing the sheave setting on both fresh air and exhaust air blowers.

#### Flow / Blower Speed Adjustment

Blower speed selection is accomplished by changing the sheave setting on both fresh air and exhaust air blowers. To set ERV for the required air flow (CFM), the external static pressure applied to the ERV (duct static) must be known. **See the CFM vs External Static Pressure chart** for the appropriate unit to determine the correct blower RPM for the specified CFM and External Static Pressure.

After blower speed adjustments have been made. Ensure that when the belt is replaced it is tensioned correctly. The motor mounting plate can be adjusted to tension the belt. If using a belt tension checker, adjust the span to the appropriate setting and check the belt deflection force. The belt deflection force should be between 5-8 lbs or the lowest tension at which the belt will not slip under peak load conditions.

1. Disconnect main power to unit before making adjustment to economizer and/or ERV unit.
2. Replace ERV control access cover.
3. Set thermostat to normal operating position.
4. Restore power to unit.

#### XI - Sequence of Operation

1. The thermostat or Building Management System (BMS), sends a 24 Volt AC signal to the HVAC system for cooling, heating, fan only or ventilation operation.
2. The ERV is activated simultaneously with the blower of the AC system. The intake air blower, the exhaust blower and the enthalpy wheel motor of the ERV are activated, these motors will remain energized as long as the blower in the AC system is energized and the outdoor conditions are adequate for energy recovery.
3. If the optional motorized intake air damper is present, the damper must open causing a proving switch to close in order to energize the intake air blower (10-20 seconds after the exhaust blower and enthalpy wheel have started).
4. If the optional low ambient kit is present, and the temperature leaving the exhaust side of the enthalpy wheel is lower than the field adjusted set point on the temperature sensor, the optional motorized fresh air damper will close and the intake blower will de-energize. The exhaust blower and enthalpy wheel motor will continue to operate until the temperature sensor has a 16°F rise, at this point the enthalpy wheel should be defrosted and the optional motorized damper will open and the fresh air blower will reactivate.

5. If the start, stop, jog [Climate Smart] option is present and outside conditions are adequate for free cooling the enthalpy wheel motor will stop for 10 minutes to allow for cool air to enter the building. It will then start or jog the wheel for 1 minute to keep dirt from building up on the wheel.

#### XII - Trouble Shooting guide

##### ERV will not operate:

1. Quick check items.
  - A. Verify that the door switch is closed, the switch must be in the closed position in order to power the control board.
  - B. Verify 24V power to the control board at terminals Xformer + & -. If voltage is low check high voltage into the unit (sec 2-A) and check that the T-1 wire from the high voltage into the step down transformer is on the correct terminal (208v-230v-460V) for the units voltage.
  - C. Verify 24V to the control board's terminal strip at T-1 (G) and T-2 (Com) in Fan or Cool or T-2 (Com) and T-3 (W) in Heat. **These terminals must be powered by an external power source to operate the ERV.**

A jumper from Xformer + to T-1 can be used to test operation of the ERV if an external 24V controls signal is not available.

1. Verify high voltage to ERV
  - A. Verify that the unit has the proper voltage in at terminals L1, L2 and/or L3 at the fused high voltage connection terminal block. Voltage specifications are on the units name plate.
  - B. Verify that the fuses are good, (check voltage across fuses with power on, voltage should be 0) replace any bad fuses.

##### ERV Has Power, But Motors Are Spinning Backwards

1. Motors are checked for proper rotation at the factory, if the motors are spinning backwards after install reverse the phase by switching two wires on the high voltage IN terminals.
2. If the motor is spinning backwards after replacement switch the L1 & L2 wires connected inside the motors access panel. Do no rewire unit.

\*Many of motors used in production of the ERVs are multi voltage (230/460V) motors. When replacing motors or diagnosing a motor that won't start. Care should be taken to make sure the wires inside the motors access panel are connected securely and in the proper configuration.

##### ERV Has Power, But the Enthalpy Wheel Does Not Spin (Start Stop Jog #1)

1. If the unit has the Start, Stop, Jog option installed the enthalpy wheel motor will turn off for 10 minute intervals when outside conditions are optimal for free cooling, the fresh air and exhaust blowers will continue running. The Start, Stop, Jog control board has a white test button that when pressed will bypass the boards logic and turn the enthalpy wheel on. **See Start, Stop, Jog in Options/ Accessories troubleshooting for further information.**

## O (ERV) Series

REV.: 7 February, 2020

2. With the power off, check that the wheel belt is in place and tight.
3. Check for 24 volts between terminals Exhaust (K163) A&B, if the unit doesn't have Start, Stop, Jog the relay is connected directly to the Exhaust A and B terminals on the control board. If terminals 1&2 or 3&2 are energized with 24V, there is 24V in to Xformer + & - , and there is no voltage to Exhaust A&B the board is bad.
4. If there is 24 Volts at Exhaust A&B trace wires to the enthalpy wheel relay, check terminals A&B on the Relay for 24 Volts, check for high voltage power into and out of the relay. If the relay is energized/closed and no power is passing from terminals 7 to 4 or 9 to 6 the relay is bad.
5. You can jump the enthalpy wheel relay to test its operation by running a jumper from the 24v out on the transformer (blue wire) to the A terminal on the relay after removing the pink wire.
6. If the relay is closing and there is proper voltage between terminals 4&6 on the relay check the wheel's motor for proper voltage by using a multi-meter at Plug P-150 next to the enthalpy wheel motor.
  - A. If voltage is present and this is a single phase motor (most units) check the motor's capacitor.
  - B. If the capacitor is bad replace the capacitor, continue testing the motor
  - C. If proper voltage is present and the capacitor is good check the wires into the motor for continuity, if there is no continuity through the windings a wire connection is loose or the motor is bad, check wire connections between harness and windings, if connections are good the motor is bad, replace motor.

**ERV Has Power But the Exhaust Blower Does Not Operate**

1. With power off. On units with belts, check that the blower's belt is tight and in place, if it is loose adjust the motor or sheave to tighten it, if it is broken replace it.
2. Check the contactor (K-163) to see if the issue is with high voltage or low voltage, if the contactor is closed check the motor. If it is open, push closed to check that the motor starts then check controls
3. Check for 24 Volts between Exhaust A&B terminals on the control board.
  - A. If the controls are calling for operation but there are not 24 Volts between Exhaust A&B the board is bad.
  - B. If the controls are calling for operation and there are 24 Volts between Exhaust A&B check the yellow wire for direct connection to the proper contactor (K-136), then check the pink wire for continuity through the field installed exhaust damper motor (if option was chosen) or the factory installed plug (PK-3) at the Jack (J-161) located in the exhaust blower section.
4. If contactor is closed check voltage to the motor by testing wires at Plug P-151, proper voltage is listed on the unit's information tag. If there is proper voltage to the motor and

the motor is not spinning the motor is bad. With single phase units check the capacitor, if capacitor is bad replace it then continue checking the motor.

**ERV Has Power But The Intake Air Blower Does Not Operate**

1. With power off. On units with belts, check that the blower's belt is tight and in place, if it is loose adjust the motor or sheave to tighten it, if it is broken replace it.
2. Check the contactor (K-164) to see if the issue is with high voltage or low voltage. If the contactor is closed check the motor. If it is open, push closed to check that the motor starts, then check controls.
3. If the contactor is open check for 24 Volts between Fresh A&B terminals on the control board.
  - A. If the controls are calling for operation and there is no voltage between Fresh A&B check terminals 5&6 to see if low ambient kit is installed (blue and yellow wires installed instead of a jumper), jumping terminals 5&6 will bypass the low ambient sensor and energize terminals Fresh A&B. **See Low Ambient Kit in Options/Accessories troubleshooting for further information.**
  - B. If the controls are calling for operation and there is no voltage between Fresh A&B and there is continuity between terminals 5&6 then the board is bad.
  - C. If the controls are calling for operation and terminals Fresh A&B are energized but the contactor is not energizing, check the yellow wire from terminal Fresh B to contactor (K-164), check the orange wire for continuity from terminal Fresh A through factory installed fresh air damper plug (P-160) to contactor. In models without a fresh air damper option there should be an orange jumper between pins 3&4 on the P-160 plug, when the fresh air damper option is chosen these wires connect to an end switch that is closed by a cam when the fresh air damper opens. **See Sequence of Operations.**

4. If contactor is closed check voltage to the motor by testing wires at plug P-148, proper voltage is listed on the unit's information tag. If there is proper voltage to the motor and the motor is not spinning the motor is bad. With single phase units check the capacitor, if capacitor is bad replace it then check the motor.

**ERV Has Power But The Motorized Fresh Air Damper Does Not open**

1. Verify 24V in between terminals 1&2 or 3&2
2. Check voltage at junction J-56 on the ERV control board, there should be 24V between J-56 1&2 during normal operation, If the unit has a low ambient kit installed and temperatures are low the controls de-energize J-56 and Fresh K-164 terminals on the control board, jump Terminals 5&6 on the Terminal strip to bypass. **See Low Ambient Kit in Options/Accessories Troubleshooting for further information.**
3. If there is voltage at the control board check for 24V at plug P-160 between pins 1&2

4. If there is voltage at P-160 make sure the damper linkage isn't binding and that the wires are attached to the actuator firmly. If the actuator still doesn't move when 24V is applied replace the actuator.

#### **ERV Has Power But The Motorized Exhaust Air Damper Does Not Open**

1. Verify 24V In between terminals 1&2 or 3&2
2. Check voltage at Exhaust A&B on control board
3. If there is voltage at Exhaust A&B on the control board, trace wires to the exhaust blower compartment and plug P-161, Check for 24V between Pins 1&3.
4. If there is 24V at plug P-161 make sure the field connected P-161 plug for the damper is inserted firmly into J-161, that the damper linkage isn't binding and that the wires are connected firmly to the actuator. If the damper actuator still does not move the actuator is bad.

#### **Options and Accessories Troubleshooting**

##### **Start, Stop, Jog [Climate Smart]**

The Start, Stop, Jog kit is an optional control board with temperature and/or enthalpy sensor(s) that stops the enthalpy wheel from spinning (and transferring heat) when temperature conditions are conducive for free cooling. The board will spin the wheel intermittently in 10 min off 1 min on intervals to keep dust from building up on the surface.

All units shipped with the Start, Stop, Jog option installed have the temperature and enthalpy sensors installed, and the jumper (J9) set to T(emp). A qualified tech can adjust the setting to E(nthalpy) only or Temp and Enthalpy by adjusting the jumper (J9).

The factory set points to allow for free cooling during ventilation are 40°F-70°F, but they can be field adjusted to narrow the band by adjusting two potentiometers while measuring VDC between the Com & High or Com & Low terminals (0 VDC = 40°, low set point, 5 VDC = 70°, high set point).

##### **Low Ambient Kit**

The low ambient kit is an optional temperature probe on a normally closed switch that closes the fresh air damper and turns off the fresh air blower when temperatures in the blower compartment suggest a frosted enthalpy wheel. The adjustable sensor is factory set for 20°F. The sensor is mounted in the blower compartment with its probe near the blower's inlet, it is wired into the terminal strip 5&6 terminals.

It can be tested in hot weather by turning the dial up to a higher temperature and checking to see if the normally closed relay opens. In cold weather if the "R" terminal and "W" terminal in the sensor show an open circuit the bulb can be warmed above the set-point at which point the relay should close.

##### **Dirty Filter Switch**

Dirty filter switches are an optional kit that put an adjustable pressure switch with the Low inlet on the blower side of the filter and the High inlet connected to the far side of the filter via tubing. A dirty filter moves less air lowering the pressure on the fan side Low inlet closing the normally open sensor switch and

allowing an alarm. The sensor(s) are prewired into their own terminal strip and can be field wired in series (normally closed), in parallel (normally open) or individually to an alarm device.

**Note: The Dirty Filter switch is not wired into the logic of the ERV, it will not stop the ERV if filters are dirty, it will only set off a field installed alarm or warning that the filters are dirty and need to be changed.**

##### **Pressure Gauge**

An optional Magnahelic pressure gauge can be ordered as an option to check pressure in In W.C., the Magnahelics are factory installed in the doors of the ERV to give pressure readings in the different quadrants of the unit. Occasional re-zeroing of the gauge is required.

##### **Rotation Sensor**

The rotation sensor is an optional missing pulse detector powered off of the exhaust and wheel 24v signal. A sensor is mounted in the exhaust compartment near the wheel and senses rotation via a magnet on the outside frame of the wheel. Its output is wired to a terminal strip and an alarm can be connected to alert when rotation of the wheel has stopped.

If an alarm is going off and the wheel is rotating properly check that the rotation sensor is mounted and adjusted to properly sense the sensor magnet in the wheel. Check wire connections to make sure they are secure.

If an alarm is tripped and the wheel is not rotating check the wheels belt, it's motor, and capacitor for proper operation.

#### **XIII - Maintenance**

1. All motors use prelubricated sealed bearings; no further lubrication is necessary.
2. Make visual inspection of motors, belts and wheel rotating bearings during routine maintenance.
3. Eight pie-shaped segments, are seated on stops between the segment retainer which pivots on the wheel rim and secured to the hub and rim of wheel. Annual inspection of the self cleaning wheel is recommended. With power disconnected, remove ERV access panels (rear) and unplug [J150 & P150] (**Refer to wiring diagram in this instruction manual**). Remove segment and wash with water and/or mild detergent.
4. To install wheel segments follow steps A through E. **See Figure 4.** Reverse procedure for segment removal.
  - A. Unlock two segment retainers (one on each side of the selected segment opening).
  - B. With the embedded stiffener facing the motor side, insert the nose of the segment between the hub plates.
  - C. Holding segment by the two outer corners, press the segment towards the center of the wheel and inwards against the spoke flanges. If hand pressure does not fully seat the segment, insert the flat tip of a screw driver between the wheel rim and outer corners of the segment and apply downward force while guiding the segment into place.
  - D. Close and latch each segment retainer under segment retaining catch.

## O (ERV) Series

REV.: 7 February, 2020

- E. Slowly rotate the wheel 180°. Install the second segment opposite the first for counterbalance. Rotate the two installed segments 90° to balance the wheel while the third segment is installed. Rotate the wheel 180° again to install the fourth segment opposite the third. Repeat this sequence with the remaining four segments.

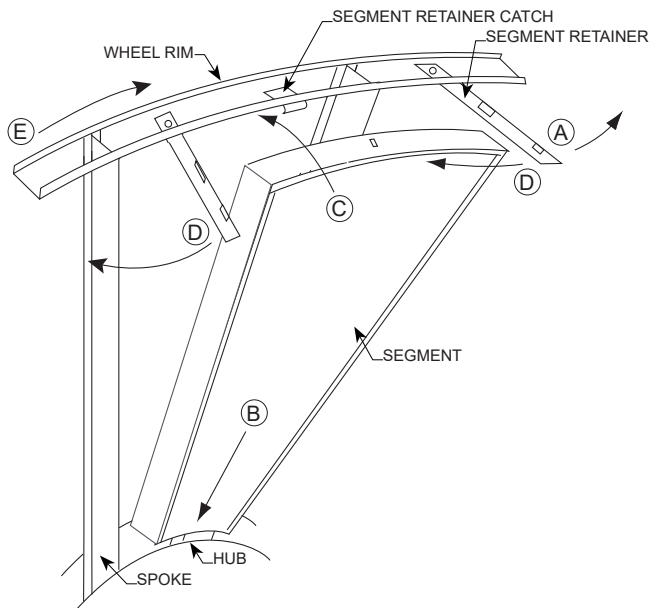



Figure 4

## XIV - Pulley Kit Installation

The units are shipped from the factory at the low static setting. Pulley kits are available for the medium and high static settings. To install a pulley kit.

1. Check content of pulley kit, if pulley kit contains:
  - A. An adjustable sheave and a fixed pitch pulley then remove belt and both motor and blower pulley.
  - B. An adjustable sheave then remove the motor pulley.
  - C. A fixed pitch pulley then remove the blower pulley.
2. Replace pulley(s) with the pulley(s) from pulley kit. Make sure each pulley is installed with a key. Tighten the set screw on the pulley(s) to 100 in.lb.
3. Install the belt that came with the pulley kit. Tension belt as explained in the blower speed adjustment section.
4. Check the speed of the blower. Adjust the motor sheave to increase or decrease the speed of the blower. **See Blower Adjustment Section.**


# ERV UNIT WIRING DIAGRAM

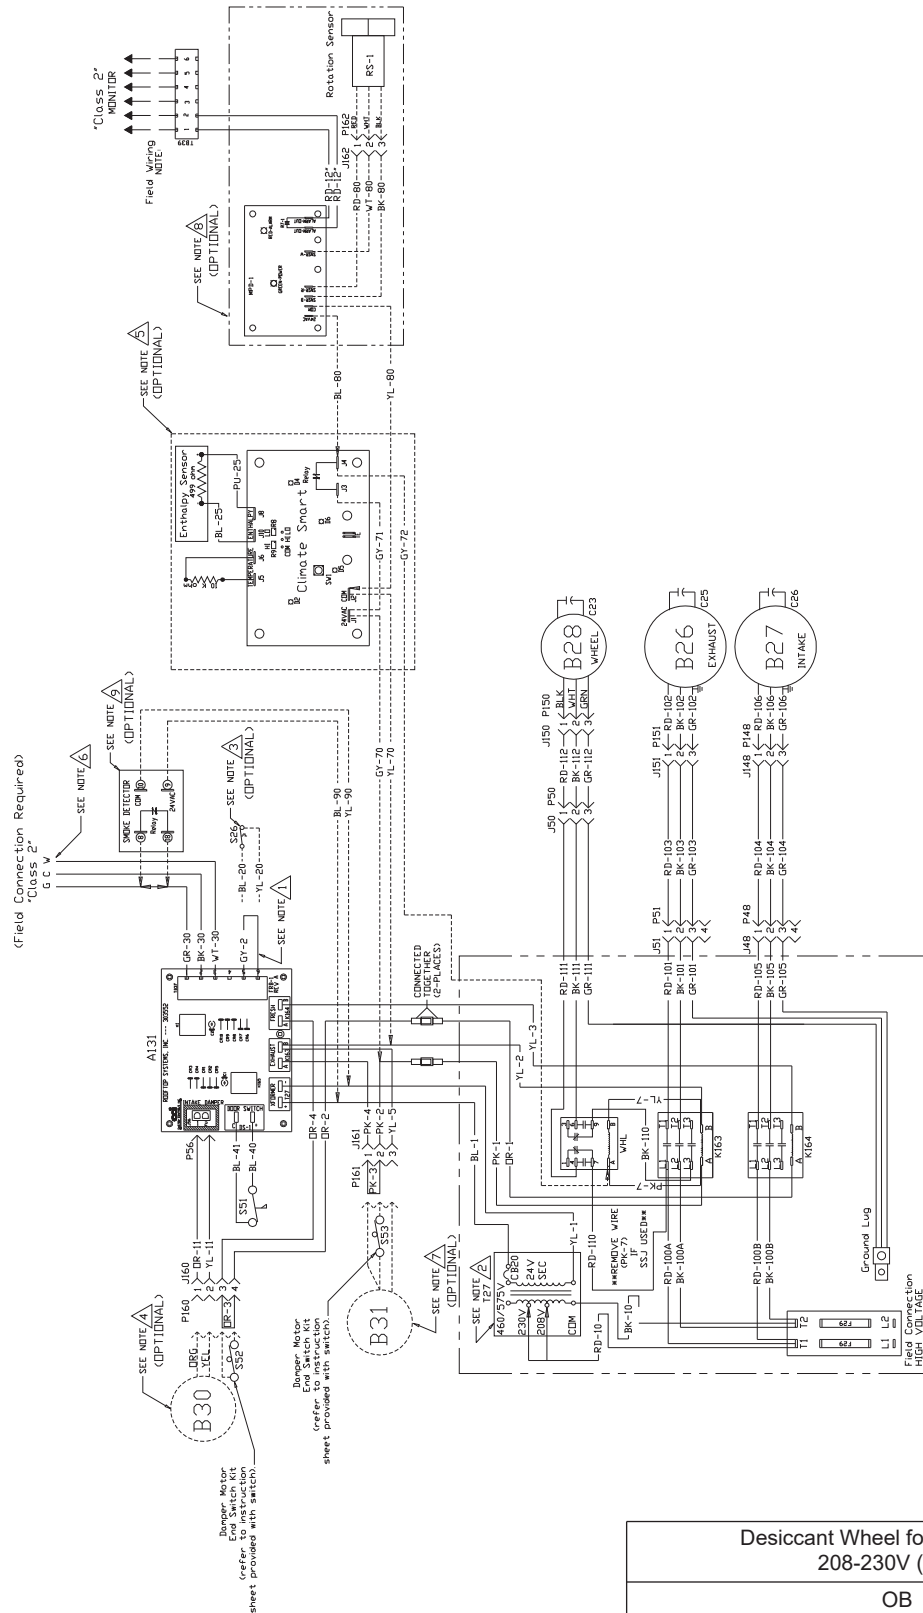


## O (ERV) Series

REV.: 7 February, 2020

## ERV UNIT WIRING DIAGRAM

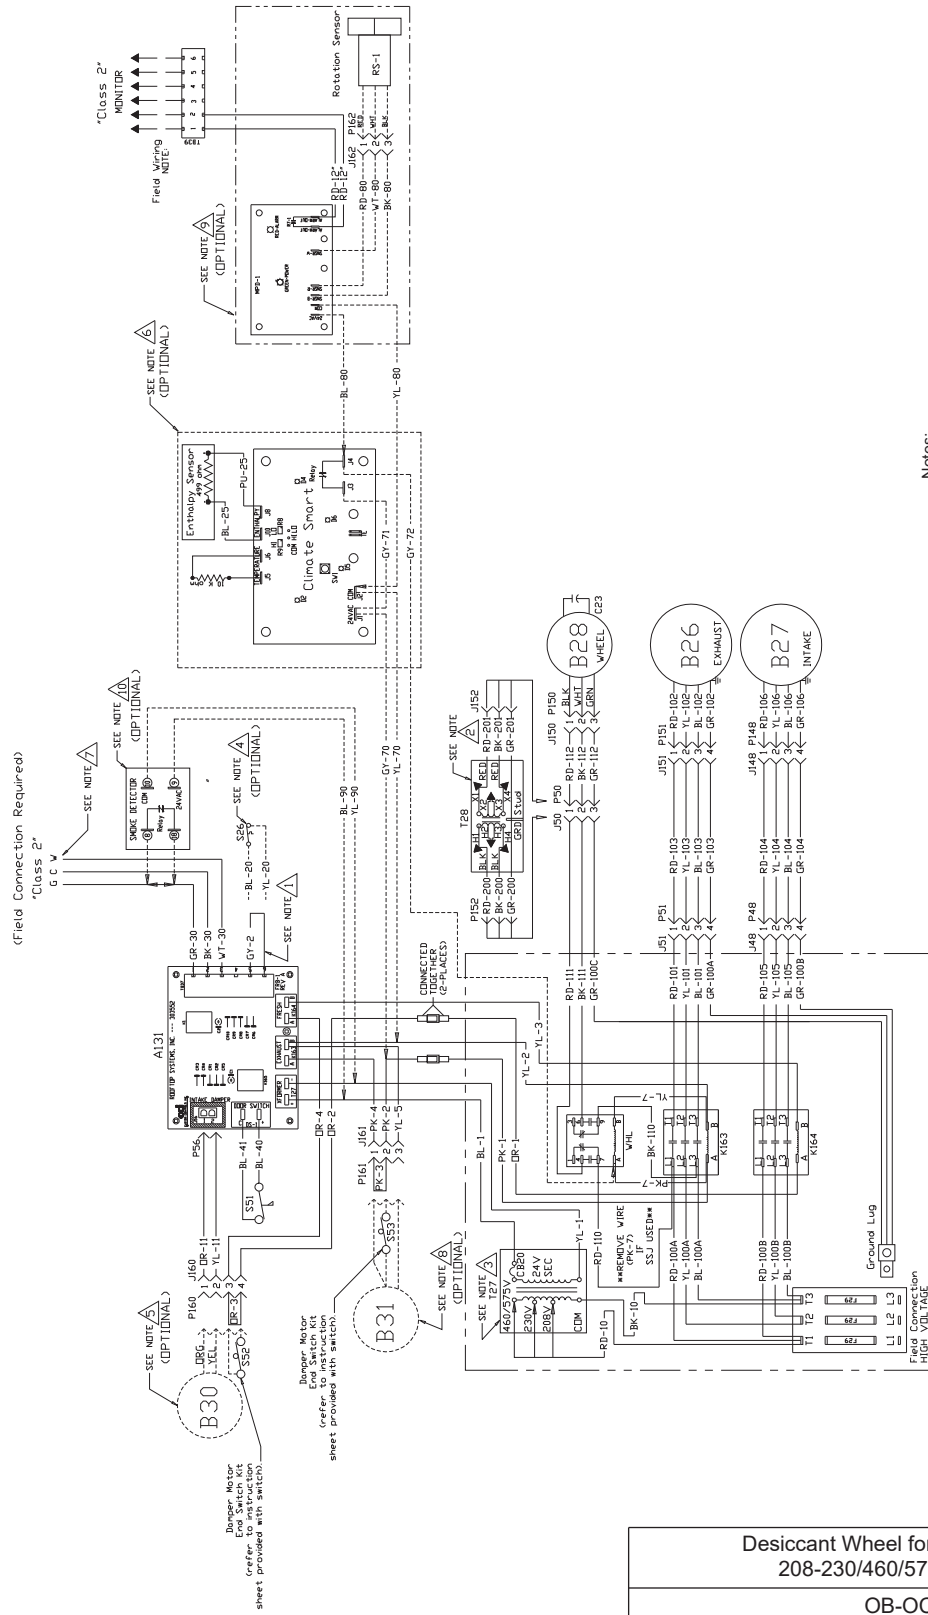

# ERV UNIT WIRING DIAGRAM

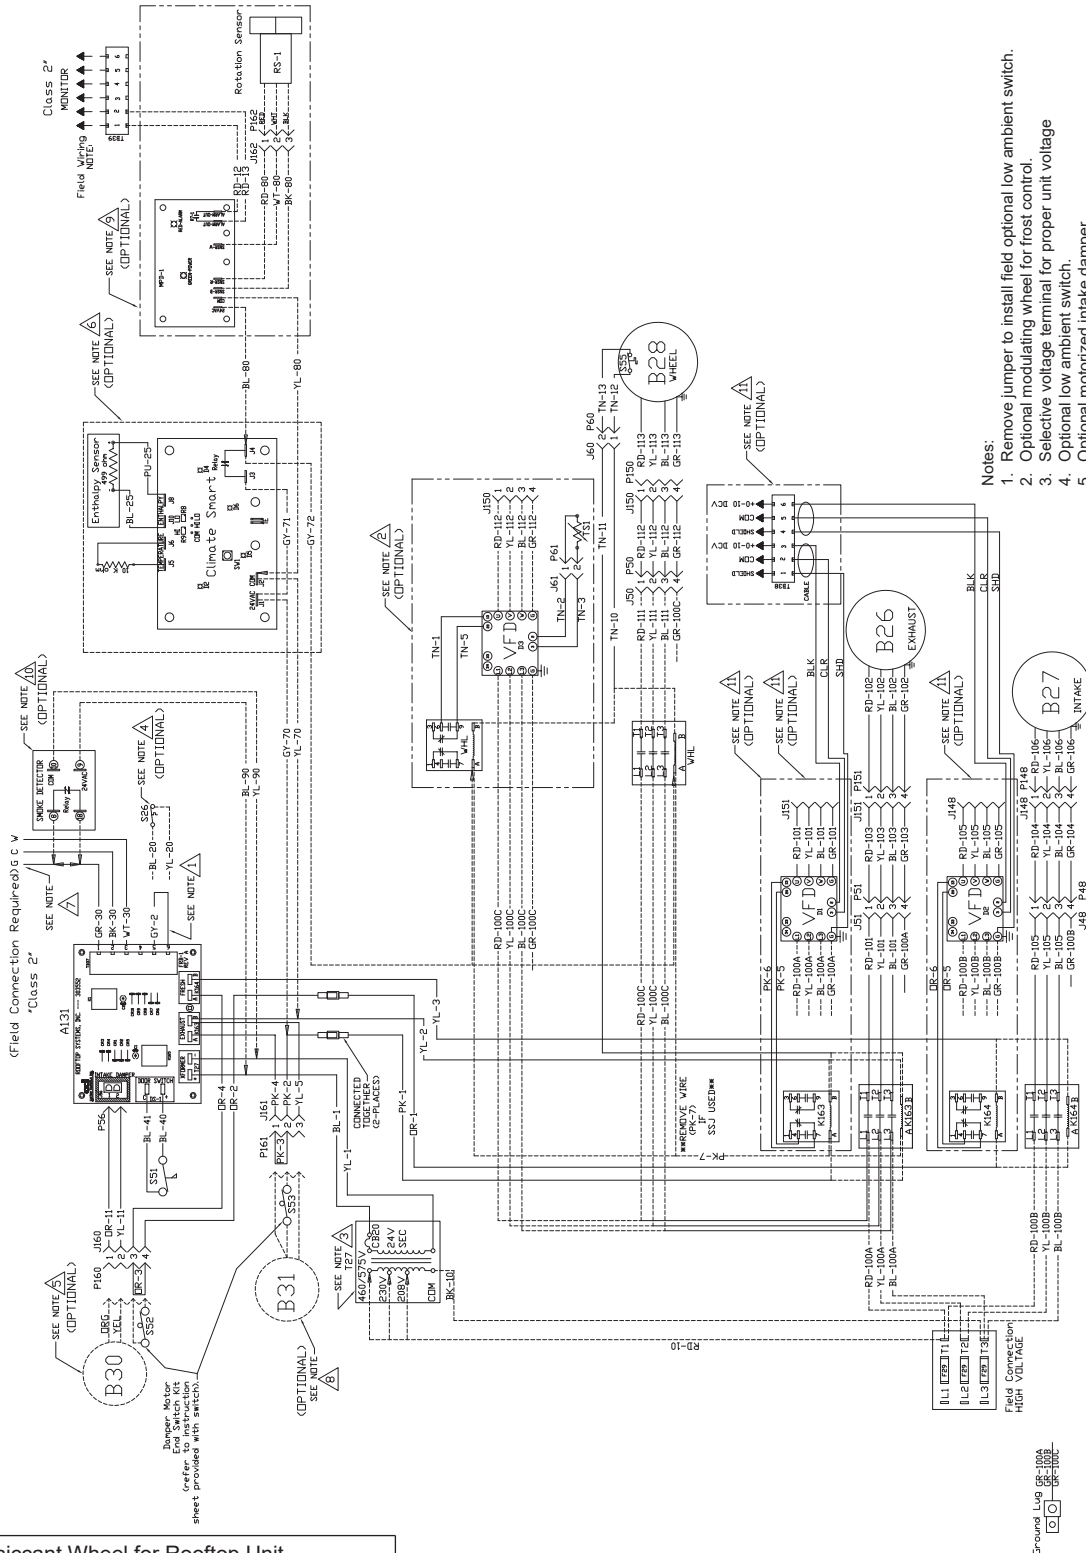

- Notes:
1. Remove jumper to install field optional low ambient switch.
  2. Optional modulating wheel for frost control.
  3. Selective voltage terminal for proper unit voltage
  4. Optional low ambient switch.
  5. Optional motorized intake damper
  6. Optional Stop, Start and Jog Control (Climate Smart).
  7. For energy management systems connect +24V to "G" and common 24V to "C".
  8. Optional motorized exhaust damper.
  9. Optional wheel rotation sensor.
  10. Optional smoke detector.
  11. Optional VFD for blowers' motors

Desiccant Wheel for Rooftop Unit  
208-230/460/575V (3 PH)

OD-OG

The diagram illustrates the electrical connections for a 1500V Inverter Drive system. It is organized into several functional blocks:

- CONTROL PANEL:** Contains the main control logic, including a Dirty Filter Stat, Wheel Rotation Stat, and various interlocking relays (PK-1, PK-2, PK-3, PK-4, PK-5, PK-6, PK-7, PK-8, PK-9, PK-10, PK-11, PK-12, PK-13, PK-14, PK-15, PK-16, PK-17, PK-18, PK-19, PK-20, PK-21, PK-22, PK-23, PK-24, PK-25, PK-26, PK-27, PK-28, PK-29, PK-30, PK-31, PK-32, PK-33, PK-34, PK-35, PK-36, PK-37, PK-38, PK-39, PK-40, PK-41, PK-42, PK-43, PK-44, PK-45, PK-46, PK-47, PK-48, PK-49, PK-50, PK-51, PK-52, PK-53, PK-54, PK-55, PK-56, PK-57, PK-58, PK-59, PK-60, PK-61, PK-62, PK-63, PK-64, PK-65, PK-66, PK-67, PK-68, PK-69, PK-70, PK-71, PK-72, PK-73, PK-74, PK-75, PK-76, PK-77, PK-78, PK-79, PK-80, PK-81, PK-82, PK-83, PK-84, PK-85, PK-86, PK-87, PK-88, PK-89, PK-90, PK-91, PK-92, PK-93, PK-94, PK-95, PK-96, PK-97, PK-98, PK-99, PK-100, PK-101, PK-102, PK-103, PK-104, PK-105, PK-106, PK-107, PK-108, PK-109, PK-110, PK-111, PK-112, PK-113, PK-114, PK-115, PK-116, PK-117, PK-118, PK-119, PK-120, PK-121, PK-122, PK-123, PK-124, PK-125, PK-126, PK-127, PK-128, PK-129, PK-130, PK-131, PK-132, PK-133, PK-134, PK-135, PK-136, PK-137, PK-138, PK-139, PK-140, PK-141, PK-142, PK-143, PK-144, PK-145, PK-146, PK-147, PK-148, PK-149, PK-150, PK-151, PK-152, PK-153, PK-154, PK-155, PK-156, PK-157, PK-158, PK-159, PK-160, PK-161, PK-162, PK-163, PK-164, PK-165, PK-166, PK-167, PK-168, PK-169, PK-170, PK-171, PK-172, PK-173, PK-174, PK-175, PK-176, PK-177, PK-178, PK-179, PK-180, PK-181, PK-182, PK-183, PK-184, PK-185, PK-186, PK-187, PK-188, PK-189, PK-190, PK-191, PK-192, PK-193, PK-194, PK-195, PK-196, PK-197, PK-198, PK-199, PK-200, PK-201, PK-202, PK-203, PK-204, PK-205, PK-206, PK-207, PK-208, PK-209, PK-210, PK-211, PK-212, PK-213, PK-214, PK-215, PK-216, PK-217, PK-218, PK-219, PK-220, PK-221, PK-222, PK-223, PK-224, PK-225, PK-226, PK-227, PK-228, PK-229, PK-230, PK-231, PK-232, PK-233, PK-234, PK-235, PK-236, PK-237, PK-238, PK-239, PK-240, PK-241, PK-242, PK-243, PK-244, PK-245, PK-246, PK-247, PK-248, PK-249, PK-250, PK-251, PK-252, PK-253, PK-254, PK-255, PK-256, PK-257, PK-258, PK-259, PK-260, PK-261, PK-262, PK-263, PK-264, PK-265, PK-266, PK-267, PK-268, PK-269, PK-270, PK-271, PK-272, PK-273, PK-274, PK-275, PK-276, PK-277, PK-278, PK-279, PK-280, PK-281, PK-282, PK-283, PK-284, PK-285, PK-286, PK-287, PK-288, PK-289, PK-290, PK-291, PK-292, PK-293, PK-294, PK-295, PK-296, PK-297, PK-298, PK-299, PK-300, PK-301, PK-302, PK-303, PK-304, PK-305, PK-306, PK-307, PK-308, PK-309, PK-310, PK-311, PK-312, PK-313, PK-314, PK-315, PK-316, PK-317, PK-318, PK-319, PK-320, PK-321, PK-322, PK-323, PK-324, PK-325, PK-326, PK-327, PK-328, PK-329, PK-330, PK-331, PK-332, PK-333, PK-334, PK-335, PK-336, PK-337, PK-338, PK-339, PK-340, PK-341, PK-342, PK-343, PK-344, PK-345, PK-346, PK-347, PK-348, PK-349, PK-350, PK-351, PK-352, PK-353, PK-354, PK-355, PK-356, PK-357, PK-358, PK-359, PK-360, PK-361, PK-362, PK-363, PK-364, PK-365, PK-366, PK-367, PK-368, PK-369, PK-370, PK-371, PK-372, PK-373, PK-374, PK-375, PK-376, PK-377, PK-378, PK-379, PK-380, PK-381, PK-382, PK-383, PK-384, PK-385, PK-386, PK-387, PK-388, PK-389, PK-390, PK-391, PK-392, PK-393, PK-394, PK-395, PK-396, PK-397, PK-398, PK-399, PK-400, PK-401, PK-402, PK-403, PK-404, PK-405, PK-406, PK-407, PK-408, PK-409, PK-410, PK-411, PK-412, PK-413, PK-414, PK-415, PK-416, PK-417, PK-418, PK-419, PK-420, PK-421, PK-422, PK-423, PK-424, PK-425, PK-426, PK-427, PK-428, PK-429, PK-430, PK-431, PK-432, PK-433, PK-434, PK-435, PK-436, PK-437, PK-438, PK-439, PK-440, PK-441, PK-442, PK-443, PK-444, PK-445, PK-446, PK-447, PK-448, PK-449, PK-450, PK-451, PK-452, PK-453, PK-454, PK-455, PK-456, PK-457, PK-458, PK-459, PK-460, PK-461, PK-462, PK-463, PK-464, PK-465, PK-466, PK-467, PK-468, PK-469, PK-470, PK-471, PK-472, PK-473, PK-474, PK-475, PK-476, PK-477, PK-478, PK-479, PK-480, PK-481, PK-482, PK-483, PK-484, PK-485, PK-486, PK-487, PK-488, PK-489, PK-490, PK-491, PK-492, PK-493, PK-494, PK-495, PK-496, PK-497, PK-498, PK-499, PK-500, PK-501, PK-502, PK-503, PK-504, PK-505, PK-506, PK-507, PK-508, PK-509, PK-510, PK-511, PK-512, PK-513, PK-514, PK-515, PK-516, PK-517, PK-518, PK-519, PK-520, PK-521, PK-522, PK-523, PK-524, PK-525, PK-526, PK-527, PK-528, PK-529, PK-530, PK-531, PK-532, PK-533, PK-534, PK-535, PK-536, PK-537, PK-538, PK-539, PK-540, PK-541, PK-542, PK-543, PK-544, PK-545, PK-546, PK-547, PK-548, PK-549, PK-550, PK-551, PK-552, PK-553, PK-554, PK-555, PK-556, PK-557, PK-558, PK-559, PK-560, PK-561, PK-562, PK-563, PK-564, PK-565, PK-566, PK-567, PK-568, PK-569, PK-570, PK-571, PK-572, PK-573, PK-574, PK-575, PK-576, PK-577, PK-578, PK-579, PK-580, PK-581, PK-582, PK-583, PK-584, PK-585, PK-586, PK-587, PK-588, PK-589, PK-590, PK-591, PK-592, PK-593, PK-594, PK-595, PK-596, PK-597, PK-598, PK-599, PK-600, PK-601, PK-602, PK-603, PK-604, PK-605, PK-606, PK-607, PK-608, PK-609, PK-610, PK-611, PK-612, PK-613, PK-614, PK-615, PK-616, PK-617, PK-618, PK-619, PK-620, PK-621, PK-622, PK-623, PK-624, PK-625, PK-626, PK-627, PK-628, PK-629, PK-630, PK-631, PK-632, PK-633, PK-634, PK-635, PK-636, PK-637, PK-638, PK-639, PK-640, PK-641, PK-642, PK-643, PK-644, PK-645, PK-646, PK-647, PK-648, PK-649, PK-650, PK-651, PK-652, PK-653, PK-654, PK-655, PK-656, PK-657, PK-658, PK-659, PK-660, PK-661, PK-662, PK-663, PK-664, PK-665, PK-666, PK-667, PK-668, PK-669, PK-670, PK-671, PK-672, PK-673, PK-674, PK-675, PK-676, PK-677, PK-678, PK-679, PK-680, PK-681, PK-6

- Notes:
1. For 1P wheel only.
  2. For 3P wheel only
  3. Position jumper 13-18 to outside position for 24V
  4. For motor contactor only.
  5. For motor VFD only.
  6. For 460V/575V power only.
  7. For 240V power only.

## Blower RPM for OB

### SUPPLY

Mist Eliminator Filter in Intake Hood (1.5HP)								
		External Static Pressure (in water)						
		0	0.25	0.5	0.75	1	1.25	1.5
CFM	300	N/A	N/A	1175	1350	1450	1605	1730
	500	N/A	1170	1340	1540	1655	1725	1840
	700	1295	1425	1600	1625	1795	1960	2035
	900	1540	1660	1720	1790	2030	2110	2195
	1100	1785	1915	2025	2185	N/A	N/A	N/A

### EXHAUST

Barometric Hood, 2" Pleated Filters (1.5HP)								
		External Static Pressure (in water)						
		0	0.25	0.5	0.75	1	1.25	1.5
CFM	300	N/A	N/A	1030	1225	N/A	N/A	N/A
	500	N/A	1025	1180	1265	1425	1535	N/A
	700	1120	1190	1340	1445	1540	1645	1720
	900	1285	1525	1500	1575	1670	1785	1865
	1100	1570	1665	1670	1775	1860	1920	N/A

#### Notes:

1. Drive losses included in the above tables.
2. Performance can vary depending on ambient conditions.
3. Blower RPMs are for reference only.

RPM Range			
	Low	1000-1300	Standard Unit
	Medium	1300-1700	Optional Kit
	High	1750-2200	Optional Kit

## Blower RPM for OC

### SUPPLY

Mist Eliminator Filter in Intake Hood (2HP)								
		External Static Pressure (in water)						
		0	0.25	0.5	0.75	1	1.25	1.5
CFM	1200	1055	1135	1295	1420	1540	1650	1725
	1400	1140	1240	1340	1490	1600	1690	1795
	1600	1200	1330	1460	1565	1645	1740	1830
	1800	1320	1405	1525	1615	1705	1785	1885
	2000	1415	1515	1605	1690	1775	1875	1960

### EXHAUST

Barometric Hood, 2" Pleated Filters (2HP)								
		External Static Pressure (in water)						
		0	0.25	0.5	0.75	1	1.25	1.5
CFM	1200	1010	1195	1350	1445	1580	1685	1735
	1400	1125	1315	1435	1545	1620	1730	1800
	1600	1185	1370	1500	1610	1695	1790	1965
	1800	1305	1485	1600	1685	1781	1955	2030
	2000	1410	1550	1670	1765	1855	N/A	N/A

#### Notes:

1. Drive losses included in the above tables.
2. Performance can vary depending on ambient conditions.
3. Blower RPMs are for reference only.

RPM Range			
	Low	1000-1300	Standard Unit
	Medium	1300-1700	Optional Kit
	High	1700-2080	Optional Kit

## O (ERV) Series

REV.: 7 February, 2020

## Blower RPM for OD

## SUPPLY

Mist Eliminator Filter in Intake Hood (3HP)								
		External Static Pressure (in water)						
		0	0.25	0.5	0.75	1	1.25	1.5
CFM	1200	N/A	790	960	1110	1210	1315	1380
	1600	750	900	1005	1145	1230	1365	1410
	2000	900	1005	1105	1210	1275	1400	1450
	2400	1005	1125	1210	1275	1365	1450	1500
	2800	1125	1230	1315	1380	1450	1535	1600

## EXHAUST

Barometric Hood, 2" Pleated Filters (3HP)								
		External Static Pressure (in water)						
		0	0.25	0.5	0.75	1	1.25	1.5
CFM	1200	750	885	1015	1145	1260	1350	1485
	1600	870	1015	1125	1215	1325	1410	1500
	2000	1015	1145	1240	1345	1410	1485	1560
	2400	1125	1250	1345	1430	1500	1575	1630
	2800	1250	1410	1485	1520	1630	1650	1675

## Notes:

1. Drive losses included in the above tables.
2. Performance can vary depending on ambient conditions.
3. Blower RPMs are for reference only.

RPM Range		
	Low	750-975
	Medium	1008-1314
	High	1311-1708
		Standard Unit
		Optional Kit
		Optional Kit

## Blower RPM for OE

## SUPPLY

Mist Eliminator Filter in Intake Hood (3HP)								
		External Static Pressure (in water)						
		0	0.25	0.5	0.75	1	1.25	1.5
CFM	2000	725	825	900	1000	1070	1180	1250
	2400	800	900	1000	1070	1160	1250	1275
	2800	900	1000	1070	1160	1250	1275	1340
	3200	1000	1070	1160	1250	1275	1340	1400
	3600	1055	1180	1250	1300	1360	N/A	N/A

## EXHAUST

Barometric Hood, 2" Pleated Filters (3HP)								
		External Static Pressure (in water)						
		0	0.25	0.5	0.75	1	1.25	1.5
CFM	2000	750	865	950	1030	1100	1200	1265
	2400	820	950	1035	1100	1200	1265	1300
	2800	925	1035	1150	1200	1265	1315	1350
	3200	1035	1160	1215	1265	1325	1350	1390
	3600	1100	1215	1300	1350	1390	N/A	N/A

## Notes:

1. Drive losses included in the above tables.
2. Performance can vary depending on ambient conditions.
3. Blower RPMs are for reference only.

RPM Range		
	Low	725-975
	Medium	1000-1315
	High	1215-1425
		Standard Unit
		Optional Kit
		Optional Kit

## Blower RPM for OF

### SUPPLY

Mist Eliminator Filter in Intake Hood (5HP)								
		External Static Pressure (in water)						
		0	0.25	0.5	0.75	1	1.25	1.5
CFM	3000	900	1030	1100	1165	1240	1285	1350
	3400	975	1085	1175	1240	1290	1350	1400
	3800	1070	1175	1240	1290	1350	1400	1465
	4200	1165	1240	1320	1350	1430	1465	1515
	4600	1240	1320	1375	1430	1500	1515	1580

### EXHAUST

Barometric Hood, 2" Pleated Filters (5HP)								
		External Static Pressure (in water)						
		0	0.25	0.5	0.75	1	1.25	1.5
CFM	3000	955	1100	1160	1245	1280	1360	1425
	3400	1055	1185	1245	1300	1375	1425	1480
	3800	1160	1300	1360	1400	1425	1530	1585
	4200	1245	1375	1450	1480	1500	1585	1650
	4600	1360	1450	1500	1585	1600	1650	1700

#### Notes:

1. Drive losses included in the above tables.
2. Performance can vary depending on ambient conditions.
3. Blower RPMs are for reference only.

RPM Range			
	Low	780-1020	Standard Unit
	Medium	1000-1315	Optional Kit
	High	1315-1700	Optional Kit

## Blower RPM for OG

### SUPPLY

Mist Eliminator Filter in Intake Hood (5HP)								
		External Static Pressure (in water)						
		0	0.25	0.5	0.75	1	1.25	1.5
CFM	4600	815	900	975	1045	1085	1125	1175
	5000	880	940	1015	1060	1135	1175	1215
	5400	915	975	1045	1125	1150	1195	1250
	5800	975	1045	1085	1175	1250	1260	N/A
	6200	1000	1075	1165	1200	N/A	N/A	N/A

### EXHAUST

Barometric Hood, 2" Pleated Filters (5HP)								
		External Static Pressure (in water)						
		0	0.25	0.5	0.75	1	1.25	1.5
CFM	4600	825	915	1000	1025	1100	1140	1170
	5000	890	975	1025	1100	1140	1170	1240
	5400	925	1000	1085	1140	1170	1240	1280
	5800	975	1025	1140	1170	1240	N/A	N/A
	6200	1025	1120	1170	N/A	N/A	N/A	N/A

#### Notes:

1. Drive losses included in the above tables.
2. Performance can vary depending on ambient conditions.
3. Blower RPMs are for reference only.

RPM Range			
	Low	820-1000	Standard Unit
	Medium	1000-1200	Optional Kit
	High	1175-1375	Optional Kit

## O (ERV) Series

REV.: 7 February, 2020

**START UP INFORMATION SHEET****VOLTAGE - ERV UNIT**

Incoming Voltage L1-L2 \_\_\_\_\_ L1-L3 \_\_\_\_\_ L2-L3 \_\_\_\_\_  
 Running Voltage L1-L2 \_\_\_\_\_ L 1-L3 \_\_\_\_\_ L2-L3 \_\_\_\_\_  
 Secondary Voltage \_\_\_\_\_ C (black) to G (green) Volts\* \_\_\_\_\_  
 C (black) to W (white) Volts\* \_\_\_\_\_

\* With thermostat calling.

**AMPERAGE - UERV MOTORS**

Intake Motor: Nominal HP \_\_\_\_\_ Rated Amps \_\_\_\_\_ Running Amps \_\_\_\_\_  
 Exhaust Motor: Nominal HP \_\_\_\_\_ Rated Amps \_\_\_\_\_ Running Amps \_\_\_\_\_  
 Wheel Motor: Nominal HP \_\_\_\_\_ Rated Amps \_\_\_\_\_ Running Amps \_\_\_\_\_

**AIRFLOW**

Intake Design CFM \_\_\_\_\_ Pressure Drop \_\_\_\_\_ Calculated CFM \_\_\_\_\_  
 Exhaust Design CFM \_\_\_\_\_ Pressure Drop \_\_\_\_\_ Calculated CFM \_\_\_\_\_  
 Amb. db Temp \_\_\_\_\_ Return Air db Temp\* \_\_\_\_\_ Tempered Air db Temp\* \_\_\_\_\_  
 Amb. wb Temp \_\_\_\_\_ Return Air wb Temp\* \_\_\_\_\_ Tempered Air wbTemp\* \_\_\_\_\_

\* Measure after 15 minutes of run time

**INSTALLATION CHECK LIST**

Model # \_\_\_\_\_ Serial # \_\_\_\_\_  
 Owner \_\_\_\_\_ Owner Phone # \_\_\_\_\_  
 Owner Address \_\_\_\_\_  
 Installing Contractor \_\_\_\_\_ Start Up Mechanic \_\_\_\_\_

- ☐ Inspect the unit for transit damage and report any damage on the carrier's freight bill.
- ☐ Check model number to insure it matches the job requirements.
- ☐ Install field accessories and unit adapter panels as required. Follow accessory and unit installation manuals.
- ☐ Verify field wiring, including the wiring to any accessories.
- ☐ Check all multi-tap transformers, to insure they are set to the proper incoming voltage.
- ☐ Verify correct belt tension, as well as the belt/pulley alignment. Tighten if needed.
- ☐ Prior to energizing the unit, inspect all the electrical connections.
- ☐ Power the unit. Bump the motor contactor to check rotation. Three phase motors are synchronized at the factory. If blower motor fans are running backwards, de-energize power to the unit, then swap two of the three incoming electrical lines to obtain proper phasing. Re-check.
- ☐ Perform all start up procedures outlined in the installation manual shipped with the unit.
- ☐ Fill in the Start Up Information as outlined on the opposite side of this sheet.
- ☐ Provide owner with information packet. Explain the thermostat and unit operation.



## CLIMATE MASTER, INC.

### LIMITED EXPRESS WARRANTY/ LIMITATION OF REMEDIES AND LIABILITY

It is expressly understood that unless a statement is specifically identified as a warranty, statements made by Climate Master, Inc., a Delaware corporation, ("CM") or its representatives, relating to CM's products, whether oral, written or contained in any sales literature, catalog or any other agreement, are not express warranties and do not form a part of the basis of the bargain, but are merely CM's opinion or commendation of CM's products.

**EXCEPT AS SPECIFICALLY SET FORTH HEREIN, THERE IS NO EXPRESS WARRANTY AS TO ANY OF CM'S PRODUCTS. CM MAKES NO WARRANTY AGAINST LATENT DEFECTS. CM MAKES NO WARRANTY OF MERCHANTABILITY OF THE GOODS OR OF THE FITNESS OF THE GOODS FOR ANY PARTICULAR PURPOSE.**

#### GRANT OF LIMITED EXPRESS WARRANTY

CM warrants CM products purchased and retained in the United States of America and Canada to be free from defects in material and workmanship under normal use and maintenance as follows: (1) All complete air conditioning, heating and/or heat pump units built or sold by CM for twelve (12) months from date of unit start up or eighteen (18) months from date of shipment (from factory), whichever comes first; (2) Repair and replacement parts, which are not supplied under warranty, for ninety (90) days from date of shipment (from factory). All parts must be returned to CM's factory in Oklahoma City, Oklahoma, freight prepaid, no later than sixty (60) days after the date of the failure of the part; if CM determines the part to be defective and within CM's Limited Express Warranty, CM shall, when such part has been either replaced or repaired, return such a factory recognized dealer, contractor or service organization, F.O.B. CM's factory, Oklahoma City, Oklahoma, freight prepaid. The warranty on any parts repaired or replaced under warranty expires at the end of the original warranty period.

This warranty does not cover and does not apply to: (1) Air filters, fuses, refrigerant, fluids, oil; (2) Products relocated after initial installation; (3) Any portion or component of any system that is not supplied by CM, regardless of the cause of the failure of such portion or component; (4) Products on which the unit identification tags or labels have been removed or defaced; (5) Products on which payment to CM is or has been in default; (6) Products which have defects or damage which result from improper installation, wiring, electrical imbalance characteristics or maintenance; or are caused by accident, misuse or abuse, fire, flood, alteration or misapplication of the product; (7) Products which have defects or damage which result from a contaminated or corrosive air or liquid supply, operation at abnormal temperatures, or unauthorized opening of refrigerant circuit; (8) Mold, fungus or bacteria damages; (9) Products subjected to corrosion or abrasion; (10) Products manufactured or supplied by others; (11) Products which have been subjected to misuse, negligence or accidents; (12) Products which have been operated in a manner contrary to CM's printed instructions; or (13) Products which have defects, damage or insufficient performance as a result of insufficient or incorrect system design or the improper application of CM's products.

CM is not responsible for: (1) The costs of any fluids, refrigerant or other system components, or associated labor to repair or replace the same, which is incurred as a result of a defective part covered by CM's Limited Express Warranty; (2) The costs of labor, refrigerant, materials or service incurred in removal of the defective part, or in obtaining and replacing the new or repaired part; or, (3) Transportation costs of the defective part from the installation site to CM or of the return of any part not covered by CM's Limited Express Warranty.

**Limitation:** This Limited Express Warranty is given in lieu of all other warranties. If, notwithstanding the disclaimers contained herein, it is determined that other warranties exist, any such warranties, including without limitation any express warranties or any implied warranties of fitness for particular purpose and merchantability, shall be limited to the duration of the Limited Express Warranty.

#### LIMITATION OF REMEDIES

*In the event of a breach of the Limited Express Warranty, CM will only be obligated at CM's option to repair the failed part or unit or to furnish a new or rebuilt part or unit in exchange for the part or unit which has failed. If after written notice to CM's factory in Oklahoma City, Oklahoma of each defect, malfunction or other failure and a reasonable number of attempts by CM to correct the defect, malfunction or other failure and the remedy fails of its essential purpose, CM shall refund the purchase price paid to CM in exchange for the return of the sold goods(s). Said refund shall be the maximum liability of CM. THIS REMEDY IS THE SOLE AND EXCLUSIVE REMEDY OF THE BUYER OR THEIR PURCHASER AGAINST CM FOR BREACH OF CONTRACT, FOR THE BREACH OF ANY WARRANTY OR FOR CM'S NEGLIGENCE OR IN STRICT LIABILITY.*

#### LIMITATION OF LIABILITY

CM shall have no liability for any damages if CM's performance is delayed for any reason or is prevented to any extent by any event such as, but not limited to: any war, civil unrest, government restrictions or restraints, strikes or work stoppages, fire, flood, accident, shortages of transportation, fuel, material, or labor, acts of God or any other reason beyond the sole control of CM. CM EXPRESSLY DISCLAIMS AND EXCLUDES ANY LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGE IN CONTRACT, FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, OR IN TORT, WHETHER FOR CM'S NEGLIGENCE OR AS STRICT LIABILITY.

#### OBTAINING WARRANTY PERFORMANCE

Normally, the contractor or service organization who installed the products will provide warranty performance for the owner. Should the installer be unavailable, contact any CM recognized dealer, contractor or service organization. If assistance is required in obtaining warranty performance, write or call:

Climate Master, Inc. • Customer Service • 7300 S. W. 44th Street • Oklahoma City, Oklahoma 73179 (405) 745-6000

NOTE: Some states or Canadian provinces do not allow limitations on how long an implied warranty lasts, or the limitation or exclusions of consequential or incidental damages, so the foregoing exclusions and limitations may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state and from Canadian province to Canadian province.

Please refer to the CM Installation, Operation and Maintenance Manual for operating and maintenance instructions.

Rev.: 11/09



LC083

## O (ERV) Series

REV.: 7 February, 2020

## Revision History

Date:	Item:	Action:
02/07/20	Revised wiring diagrams pg 13, Removed Warning pg 1.	Updated
09/07/18	Added Warning - pg 1, Removed Schematics pg 8-10, Revised wiring diagrams 11-13. Revised text in all sections and added new sections (i.e. Trouble Shooting Guide).	Updated
04/04/14	Logos - page 1 & 20	Updated
11/21/13	Created	



97B0042N06



7300 S.W. 44th Street  
 Oklahoma City, OK 73179  
 Phone: 405-745-6000  
 Fax: 405-745-6058  
[climatemaster.com](http://climatemaster.com)

ClimateMaster works continually to improve its products. As a result, the design and specifications of each product at the time of order may be changed without notice and may not be as described herein. Please contact ClimateMaster's Customer Service Department at 1-405-745-6000 for specific information on the current design and specifications. Statements and other information contained herein are not express warranties and do not form the basis of any bargain between the parties, but are merely ClimateMaster's opinion or commendation of its products. For the latest version of this document go to [climatemaster.com](http://climatemaster.com).

ClimateMaster is a proud supporter of the Geothermal Exchange Organization - GEO. For more information visit [geoexchange.org](http://geoexchange.org).

© ClimateMaster, Inc. 2013