

Tranquility® Digital Split Products (TES/TEP)

97B0047N05



Tranquility® Digital Split Indoor (TES) Series



Tranquility® Digital Split Outdoor (TEP) Series

Indoor and Outdoor Split Geothermal Heat Pumps

Installation, Operation & Maintenance Instructions

Rev.: October 18, 2022


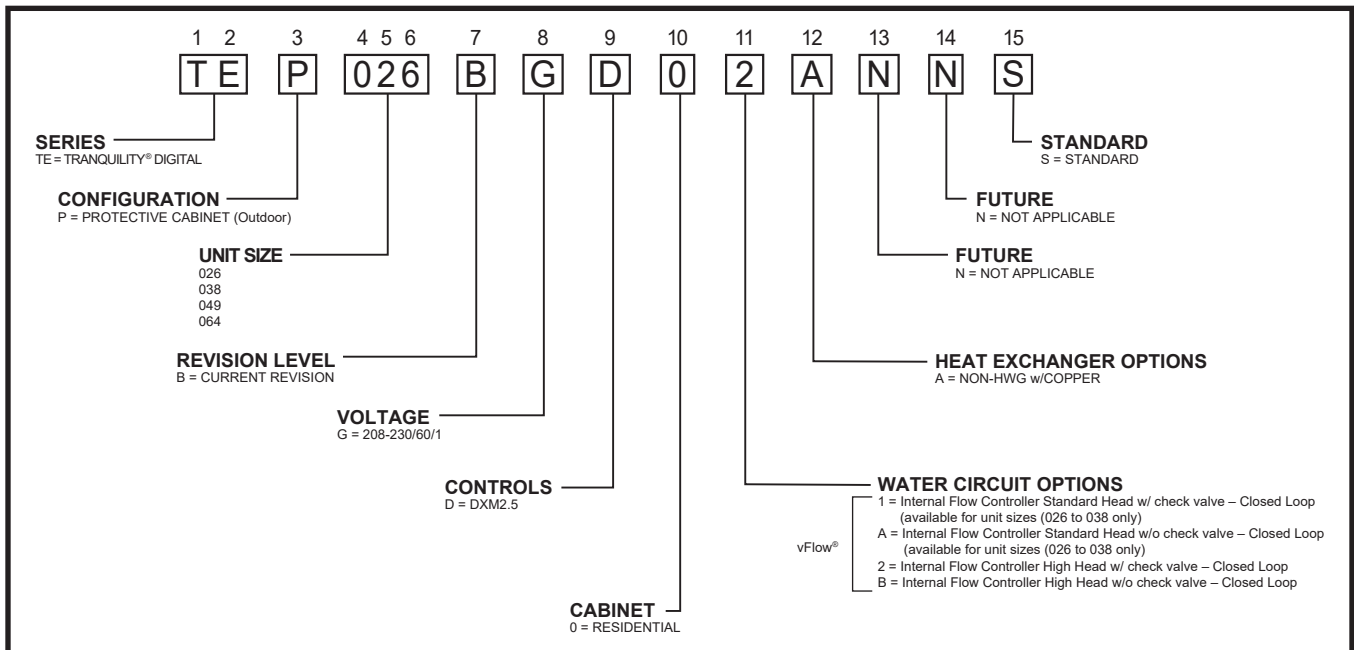


Table of Contents

Model Nomenclature	3	Electrical – Line Voltage	40
Safety	4	Electrical – Power Wiring	41
General Information	5	Electrical – Low Voltage Wiring	42
Equipment Selection	6	Electrical – Thermostat Wiring	43
Installation	7	Controls – DXM2.5	44
vFlow® Heat Pump Applications Overview	9	Wiring Diagrams	45
Closed Loop Heat Pump Applications w/Internal Flow Controller	10	Unit Starting and Operating Conditions	50
Flushing the Earth Loop	12	Unit Start-Up Procedure	52
Multiple Unit Piping and Flushing	15	Unit Operating Conditions	54
Ground Loop Heat Pump Applications	18	Performance Data	56
Closed Loop – External Central Pumping Applications (Indoor Split TES Only)	20	Preventive Maintenance	60
Open Loop or Ground Water Heat Pump Applications	21	Troubleshooting	61
Water Quality Standards	23	DXM2.5 Functional Troubleshooting Flow Chart	63
Refrigeration Installation	27	Functional Troubleshooting	64
Hot Water Generator	35	Performance Troubleshooting	66
Hot Water Generator: For Indoor and Outdoor Compressor Section Only	37	Troubleshooting Form	68
Hot Water Generator Module Refrigeration Installation: For Outdoor Compressor Section Only	38	Warranty	69
		Revision History	72

This page was intentionally left blank.

Model Nomenclature

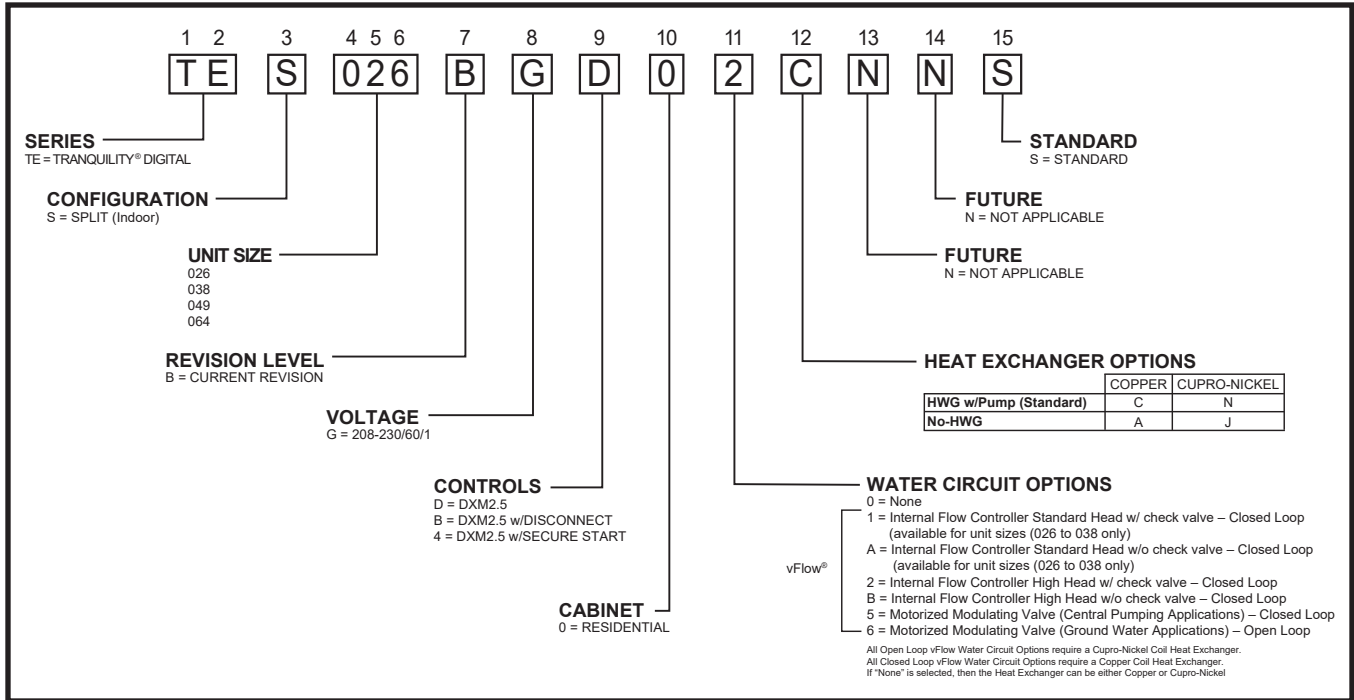

Safety

SAFETY

Warnings, cautions and notices appear throughout this manual. Read these items carefully before attempting any installation, service, or troubleshooting of the equipment.

DANGER: Indicates an immediate hazardous situation, which if not avoided will result in death or serious injury. DANGER labels on unit access panels must be observed.

WARNING: Indicates a potentially hazardous situation, which if not avoided could result in death or serious injury.

CAUTION: Indicates a potentially hazardous situation or an unsafe practice, which if not avoided could result in minor or moderate injury or product or property damage.

NOTICE: Notification of installation, operation or maintenance information, which is important, but which is not hazard-related.

WARNING!

WARNING! To avoid the release of refrigerant into the atmosphere, the refrigerant circuit of this unit must be serviced only by technicians who meet local, state, and federal proficiency requirements.

WARNING!

WARNING! The EarthPure® Application and Service Manual should be read and understood before attempting to service refrigerant circuits with HFC-410A.

The following warning complies with State of California law, Proposition 65.

WARNING!

WARNING! This product can expose you to chemicals including Carbon Black, which is known to the State of California to cause cancer and Methanol, which is known to the State of California to cause birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

WARNING!

WARNING! All refrigerant discharged from this unit must be recovered **WITHOUT EXCEPTION**. Technicians must follow industry accepted guidelines and all local, state, and federal statutes for the recovery and disposal of refrigerants. If a compressor is removed from this unit, refrigerant circuit oil will remain in the compressor. To avoid leakage of compressor oil, refrigerant lines of the compressor must be sealed after it is removed.

CAUTION!

CAUTION! To avoid equipment damage, **DO NOT** use these units as a source of heating or cooling during the construction process. The mechanical components and filters can quickly become clogged with construction dirt and debris, which may cause system damage and void product warranty.

General Information

INSPECTION

Upon receipt of the equipment, carefully check the shipment against the bill of lading. Make sure all units have been received. Inspect the packaging of each unit, and inspect each unit for damage. Insure that the carrier makes proper notation of any shortages or damage on all copies of the freight bill and completes a common carrier inspection report. Concealed damage not discovered during unloading must be reported to the carrier within 15 days of receipt of shipment. If not filed within 15 days, the freight company can deny the claim without recourse. Note: It is the responsibility of the purchaser to file all necessary claims with the carrier. Notify your equipment supplier of all damage within fifteen (15) days of shipment.

STORAGE

Equipment should be stored in its original packaging in a clean, dry area. Store units in an upright position at all times. Stack units a maximum of 3 units high.

UNIT PROTECTION

Cover units on the job site with either the original packaging or an equivalent protective covering. Cap the open ends of pipes stored on the job site. In areas where painting, plastering, and/or spraying has not been completed, all due precautions must be taken to avoid physical damage to the units and contamination by foreign material. Physical damage and contamination may prevent proper start-up and may result in costly equipment clean-up.

Examine all pipes, fittings, and valves before installing any of the system components. Remove any dirt or debris found in or on these components.

PRE-INSTALLATION

Installation, Operation, and Maintenance instructions are provided with each unit. The installation site chosen should include adequate service clearance around the unit. Before unit start-up, read all manuals and become familiar with the unit and its operation. Thoroughly check the system before operation.

PREPARE UNITS FOR INSTALLATION AS FOLLOWS:

1. Compare the electrical data on the unit nameplate with ordering and shipping information to verify that the correct unit has been shipped.
2. Keep the cabinet covered with the original packaging until installation is complete and all plastering, painting, etc. is finished.
3. Verify refrigerant tubing is free of kinks or dents and that it does not touch other unit components.
4. Inspect all electrical connections. Connections must be clean and tight at the terminals.
5. Locate and verify any hot water generator (HWG) or other accessory kit located in the compressor section.

CAUTION!

CAUTION! DO NOT store or install units in corrosive environments or in locations subject to temperature or humidity extremes (e.g., attics, garages, rooftops, etc.). Corrosive conditions and high temperature or humidity can significantly reduce performance, reliability, and service life. Always move and store units in an upright position. Tilting units on their sides will cause equipment damage.

CAUTION!

CAUTION! CUT HAZARD - Failure to follow this caution may result in personal injury. Sheet metal parts may have sharp edges or burrs. Use care and wear appropriate protective clothing, safety glasses and gloves when handling parts and servicing.

Equipment Selection

GENERAL

Proper indoor coil selection is critical to system efficiency. Using an older-model coil can affect efficiency and may not provide the customer with rated or advertised EER and COP. Coil design and technology have dramatically improved operating efficiency and capacity in the past 20 years. Homeowners using an older coil are not reaping these cost savings and comfort benefits. NEVER MATCH AN R-22 INDOOR COIL WITH AN HFC-410A COMPRESSOR SECTION.

Newer indoor coils have a larger surface area, enhanced fin design, and grooved tubing. These features provide a larger area for heat transfer, improving efficiency and expanding capacity. Typical older coils may only have one-third to one-half the face area of these redesigned coils.

INDOOR COIL SELECTION – TRANQUILITY® (TES & TEP)

ClimateMaster Split System Heat Pumps are rated in the AHRI directory with a specific indoor coil match. Tranquility models are rated with Tranquility Air Handlers and Cased Coils.

Table 1: Tranquility Split System AHRI Rated Components

COMPRESSOR SECTION	AIR HANDLER	CASED COIL
TES/P026	TAH026	TAC026
TES/P038	TAH038	TAC038
TES/P049	TAH049	TAC049
TES/P064	TAH064	TAC064

COMMUNICATING SYSTEM

To receive full benefits of the 4-wire communicating system, always select a Tranquility Digital Air Handler with AXM Control and an iGate® 2 Communicating (AWC) Thermostat with Tranquility Digital Splits (TES/TEP).

INDOOR/OUTDOOR APPLICATION

Select Tranquility Digital INDOOR Split (TES) with Tranquility Digital Air Handler or cased coil for applications with a compressor and air handler/coil used indoors.

Select Tranquility Digital OUTDOOR Split (TEP) with Tranquility Digital Air Handler or cased coil applications with an outdoor compressor section and air handler/coil used indoors.

Installation

The installation of geothermal heat pump units and all associated components, parts and accessories which make up the installation shall be in accordance with the regulations of ALL authorities having jurisdiction and MUST conform to all applicable codes. It is the responsibility of the installing contractor to determine and comply with ALL applicable codes and regulations.

REMOVING EXISTING CONDENSING UNIT (WHERE APPLICABLE)

1. Pump down condensing unit. Close the liquid line service valve of existing condensing unit and start compressor to pump refrigerant back into compressor section. Then, close suction service valve while compressor is still running to trap refrigerant in outdoor section. Immediately kill power to the condensing unit.
2. Disconnect power and low voltage and remove old condensing unit. Cut or unbraid line set from unit. Remove condensing unit.
3. If condensing unit is not operational or will not pump down, refrigerant should be recovered using appropriate equipment.
4. Replace line set, especially if upgrading system from R-22 to HFC-410A refrigerant. If line set cannot be replaced, it must be thoroughly flushed before installing new compressor section. HFC-410A compressors use POE oil instead of mineral oil (R-22 systems). Mineral oil is not compatible with POE oil, and could cause system damage if not completely flushed from the line set.

“INDOOR” COMPRESSOR SECTION LOCATION

Both “indoor” and “outdoor” versions of the geothermal split system compressor section are available. “Indoor” version is not designed for outdoor installation. Locate the unit in an INDOOR area that allows enough space for service personnel to perform typical maintenance or repairs without removing unit. Units are typically installed in a mechanical room or closet. Never install units in areas subject to freezing or where humidity levels could cause cabinet condensation (such as unconditioned spaces subject to 100% outside air). Consideration should be given to access for easy removal of service access panels. Provide sufficient room to make water, electrical, and line set connections.

Any access panel screws that would be difficult to remove after the unit is installed should be removed prior to setting the unit. Refer to Figure 1 for an illustration of a typical installation. Refer to “Physical Dimensions” section for dimensional data. Conform to the following guidelines when selecting unit location:

1. Install the unit on a piece of rubber, neoprene or other mounting pad material for sound isolation. The pad should be at least 3/8” [10 mm] to 1/2” [13 mm] in thickness. Extend the pad beyond all four edges of the unit.
2. Provide adequate clearance for maintenance and service. Do not block access panels with piping, conduit or other materials.
3. Provide access for servicing the compressor and heat exchanger without removing the unit.

4. Provide an unobstructed path to the unit within the closet or mechanical room. Space should be sufficient to allow removal of the unit, if necessary.
5. Provide access to water valves and fittings and screwdriver access to the unit side panels and all electrical connections.

“OUTDOOR” COMPRESSOR SECTION LOCATION

Locate the unit in an outdoor area that allows easy loop and lineset access and also has enough space for service personnel to perform typical maintenance or repairs. The “outdoor” compressor section is usually installed on a condenser pad directly outside the lineset access into the building. The loop access end should be located away from the building. Conform to the following guidelines when selecting unit location:

1. Provide adequate access for loop trench excavation.
2. Locate unit directly outside lineset penetration if possible. Utilize existing condenser pad where possible.
3. Provide access for servicing and maintenance.

“Outdoor” compressor section may be mounted on a vibration isolation pad with loop access hole as shown in Figure 3. When mounting on an existing concrete condenser pad, 3” [76 mm] holes should be bored through the pad to accommodate the pipe (1-1/4” - 32 mm) and insulation (1/2” [13 mm] wall thickness). Figure 3 illustrates location and dimensions of the holes required.

AIR HANDLER INSTALLATION

This manual specifically addresses the compressor section of the system. Air handler location and installation should be according to the instructions provided with the air handling unit (Tranquility Digital Air Handler)



CAUTION! To avoid equipment damage to TES/TEP units with expansion tank, DO NOT allow system water pressure to exceed 145 psi [1000 kPa]. The expansion tank used in TES/TEP units has a maximum working water pressure of 145 psi [1000 kPa]. Any pressure in excess of 145 psi [1000 kPa] may damage the expansion tank.

Installation

Figure 1: TES Installation


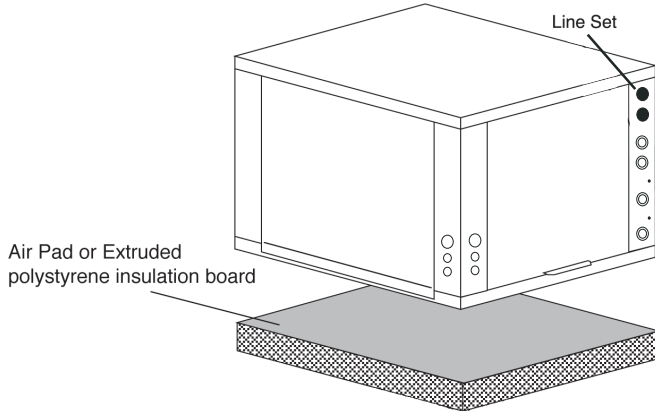


Figure 3: TEP Installation


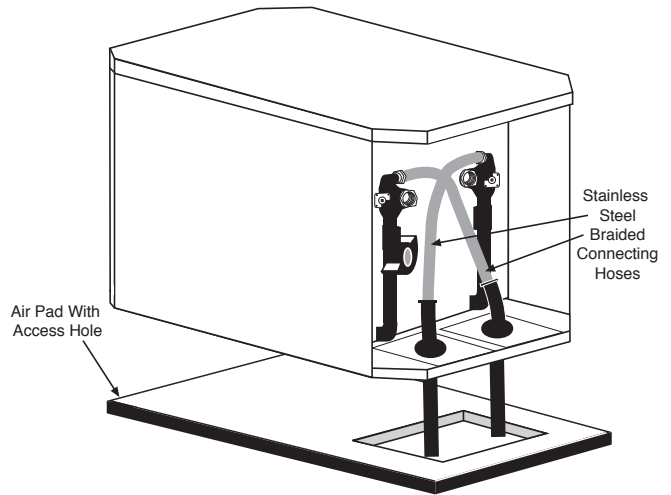


WATER CONNECTIONS

Swivel piping fittings are used for water connections that are rated for 450 psi (3101 kPa) operating pressure. The connections have a rubber gasket seal similar to a garden hose gasket, which when mated to the flush end of most 1" threaded male pipe fittings provides a leak-free seal without the need for thread sealing tape or joint compound. Check for burrs and ensure that the rubber seal is in the swivel connector prior to attempting any connection (rubber seals are shipped attached to the swivel connector). **DO NOT OVER TIGHTEN** or leaks may occur.

The female locking ring is threaded onto the pipe threads which holds the male pipe end against the rubber gasket, and seals the joint. **HAND TIGHTEN ONLY! DO NOT OVERTIGHTEN!**

Figure 2: Water Connections (TES Series)

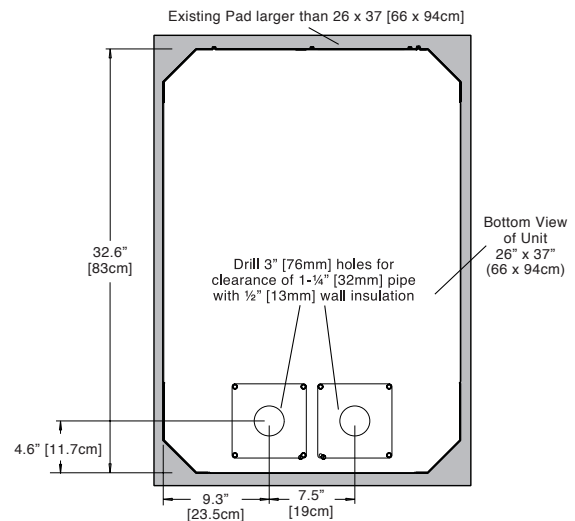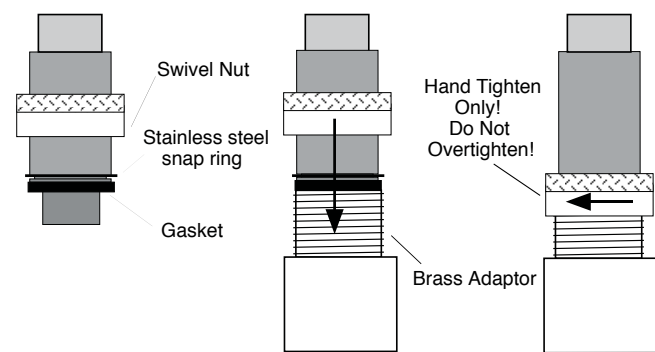


NOTE: OUTDOOR UNIT WATER CONNECTIONS

TEP026 and 038 units are shipped with 3/4" stainless steel braided hoses connected to unit piping. Field connection end of hoses are gasketed female swivel.

TEP049 and 064 units are shipped with 1" stainless steel braided hoses connected to unit piping. Field connection end of hoses are gasketed female swivel.

⚠ WARNING! ⚠

WARNING! Polyolester Oil, commonly known as POE oil, is a synthetic oil used in many refrigeration systems including those with HFC-410A refrigerant. POE oil, if it ever comes in contact with PVC or CPVC piping, may cause failure of the PVC/CPVC. PVC/CPVC piping should never be used as supply or return water piping with water source heat pump products containing HFC-410A as system failures and property damage may result.

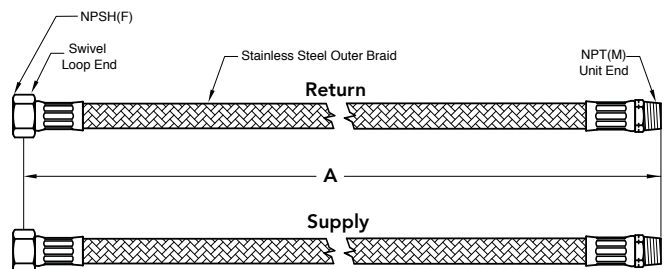

vFlow® Heat Pump Applications Overview

OPTIONAL vFLOW® INTERNAL VARIABLE WATER-FLOW CONTROL

vFlow® is an efficient means of circulating water (or water plus antifreeze) using internal factory installed variable speed pump or modulating motorized valve. vFlow technology improves performance of the unit by reducing the amount of energy required to flow water throughout the geothermal heat pump system and also reduces the space, cost, and labor required to install external water flow control mechanisms (such as pumps, flow controllers, solenoid, and flow control valves)

vFLOW CONFIGURATIONS**1. Internal Flow Controller – For Closed Loop Applications**

This is the most common configuration for closed loops. With this factory-installed option, the unit is built with an Internal Variable Speed Pump and other components to flush and operate the unit correctly (including an expansion tank, flush ports and flushing valves). The pump speed is controlled by the DXM2.5 control based on the difference in entering and leaving water temperatures (ΔT). The Internal Flow Controller pump includes an internal check valve for multiple unit installations. A copper water coil is standard with this option.

NOTE: Internal Flow Controllers are also very suitable for multiple unit installations depending on pump performance requirements.


2. Internal Modulating Motorized Valve – For Large Closed Loop Applications (external central pumping)

Primarily for use on multi-unit closed loop applications with central pumping. With this factory-installed option, the unit includes a low pressure drop modulating motorized valve that is controlled by the DXM2.5 microprocessor control based on the difference in the entering and leaving water temperatures (ΔT). A Copper Water Coil is standard with this option. The modulating valve in this option has a higher Cv than the open loop option.


3. Internal Modulating Motorized Valve – For Open Loop Applications (TES Models Only)

For use on open loop applications. With this factory-installed option, the unit is built with an internal modulating motorized valve controlled by the Communicating DXM2.5 control board based on entering and leaving water temperatures (ΔT). A low Cv modulating motorized valve is used for this application to provide more precise control against the higher system pressure differential of open loop applications. A Cupro-Nickel water coil comes standard with this option.

Details on these options are included in the following sections on ground loop and ground water applications.

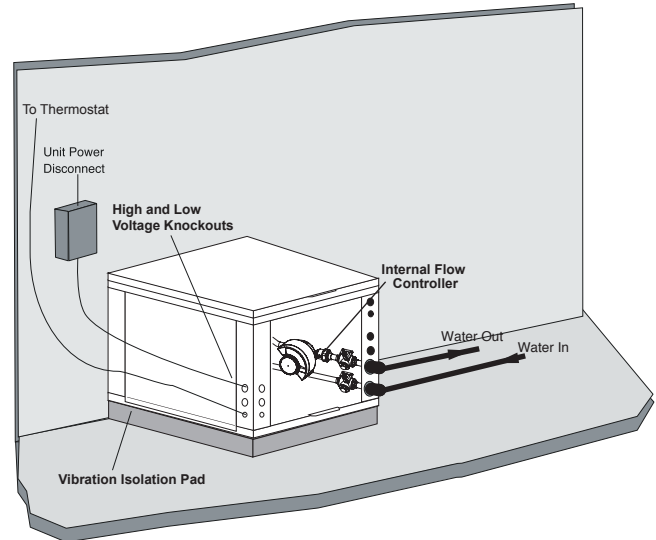Figure 4a: Typical Closed Loop Application (with Internal Flow Controller Shown)**Figure 4b: Typical Open-Loop Application (with Internal Modulating Motorized Valve Shown)**

For use on applications using external source for flow

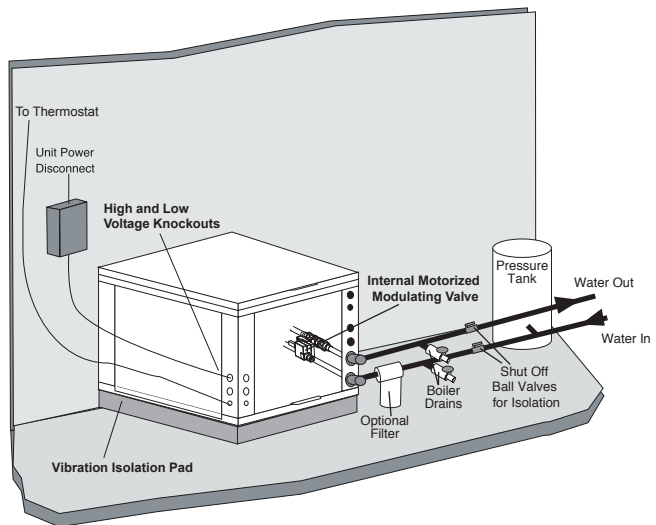**⚠ CAUTION! ⚠**

CAUTION! The following instructions represent industry accepted installation practices for closed loop earth coupled heat pump systems. Instructions are provided to assist the contractor in installing trouble free ground loops. These instructions are recommendations only. State/provincial and local codes **MUST** be followed and installation **MUST** conform to **ALL** applicable codes. It is the responsibility of the installing contractor to determine and comply with **ALL** applicable codes and regulations.

Closed Loop Heat Pump Applications w/Internal Flow Controller

Units with internal flow control come with a built-in variable speed pump, an expansion tank, flushing ports and three-way valves (used to flush the unit). The variable speed pump is controlled by the Communicating DXM2.5 board based on the difference between the entering and leaving water temperature (ΔT). When entering water temperatures are abnormally low for cooling, or abnormally high for heating, the DXM2.5 controller will modulate the water flow to maintain a constant ΔT which will allow the unit to operate properly under those conditions. The internal expansion tank helps to maintain constant loop pressure despite the natural expansion and contraction of the loop as the seasons and loop temperatures vary. The expansion tank also helps to avoid flat loop callbacks.

PRE-INSTALLATION

Prior to installation, locate and mark all existing underground utilities, piping, etc. Install loops for new construction before sidewalks, patios, driveways, and other construction has begun. During construction, accurately mark all ground loop piping on the plot plan as an aid in avoiding potential future damage to the installation.


PIPING INSTALLATION

The typical closed loop ground source system is shown in Figure 4a. All earth loop piping materials should be limited to polyethylene fusion only for in-ground sections of the loop and it is also recommended for inside piping. Galvanized or steel fittings should not be used at any time due to their tendency to corrode. All plastic to metal threaded fittings should be avoided due to their potential to leak in ground loop applications. Loop temperatures can range between 25 and 110°F [-4 to 43°C]. Flow rates between 2.25 and 3 gpm per ton [2.41 to 3.23 l/m per kW] of cooling capacity is recommended in these applications.

Test individual horizontal loop circuits before backfilling. Test vertical U-bends and pond loop assemblies prior to installation. Pressures of at least 100 psi [689 kPa] should be used when testing. Do not exceed the pipe pressure rating. Test entire system when all loops are assembled.

The following section will help to guide you through flushing a unit with internal flow control.

Figure 5: Internal Flow Controller

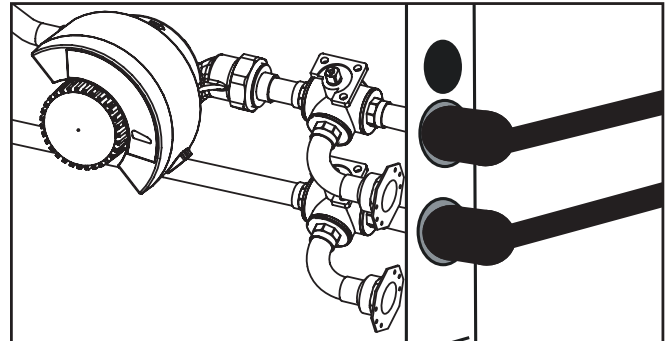

⚠ NOTICE! ⚠

NOTICE! If installing MULTIPLE vFlow® Internal Variable Speed Flow Controller units (in parallel) on one loop, please refer to section 'Multiple Unit Piping and Flushing' (later in this document).

WATER PRESSURE SCHRADER PORTS

The pressure ports built in to the unit are provided as a means of measuring pressure drop through the water-to-refrigerant heat exchanger. The water pressure ports are Schrader ports smaller than refrigerant Schrader ports. They are the same size as tire Schrader ports. A digital pressure gauge is recommended for taking pressure readings through these ports. The water flow through the unit can be determined by measuring the water pressure at the "water pressure out" port and subtracting it from the water pressure at the "water pressure in" port. Comparing the pressure differential to the pressure drop table (Table 14) in this manual will determine the flow rate through the unit.

Digital Tire Pressure Gauge



Closed Loop Heat Pump Applications w/Internal Flow Controller, Cont'd.

Figure 6a: Standard Head Variable Pump Performance


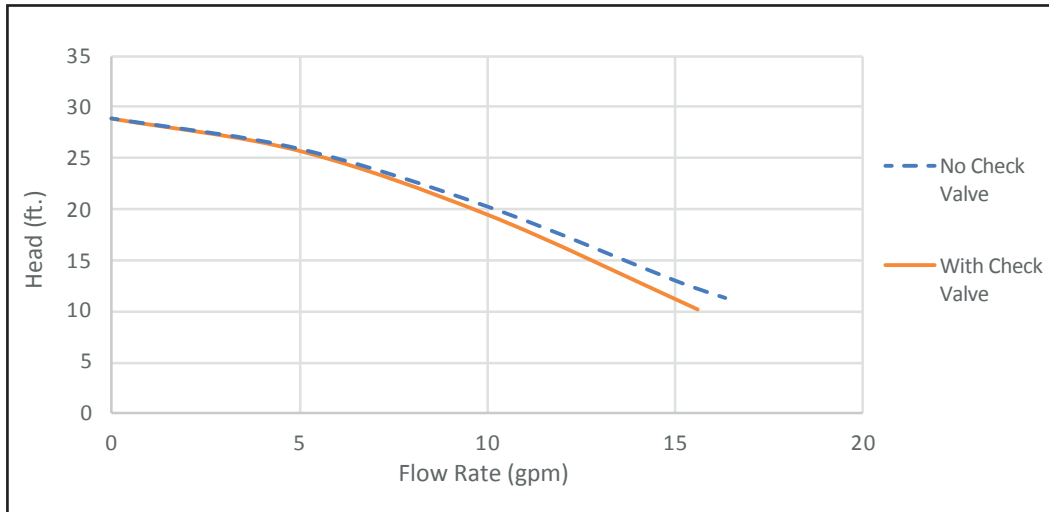


Figure 6b: High Head Variable Pump Performance

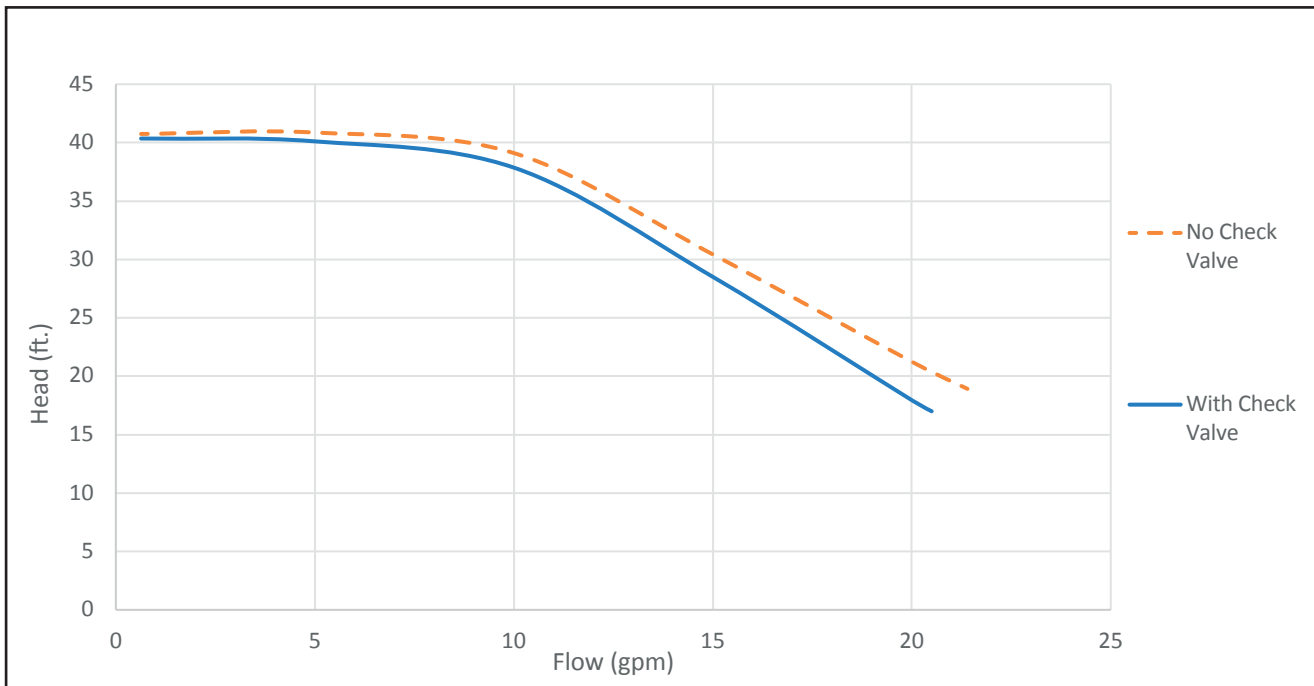

Flushing the Earth Loop

Once piping is completed between the unit and the ground loop, final purging and charging of the loop is needed.

A flush cart (at least a 1.5 hp [1.1 kW] pump) is needed to achieve adequate flow velocity in the loop to purge air and dirt particles from the loop itself. Antifreeze solution is used in most areas to prevent freezing. All air and debris must be removed from the earth loop piping system before operation, **Flush the loop with a high volume of water at a high velocity (2 fps [0.6 m/s] in all piping)**, using a filter in the loop return line, of the flush cart to eliminate debris from the loop system. See Table 2 for flow rate required to attain 2 fps [0.6 m/s]. The steps below must be followed for proper flushing.

Table 2: Minimum Flow Required to Achieve 2 ft/sec (0.6 m/s) velocity

PE Pipe Size	Flow (GPM)
3/4"	4 [4.3 l/m per KW]
1"	6 [6.5 l/m per KW]
1 1/4"	10 [10.8 l/m per KW]
1 1/2"	13 [14.0 l/m per KW]
2"	21 [22.6 l/m per KW]

Units with internal variable speed pumps also include a check valve internal to the pump. It is not possible to flush backwards through this pump. Care must be taken to connect the flush cart hoses so that the flush cart discharge is connected to the "water in" flushing valve of the heat pump.

LOOP FILL

Fill loop (valve position A, see Figure 8a) with water from a garden hose through flush cart before using flush cart pump to ensure an even fill and increase flushing speed. When water consistently returns back to the flush reservoir, switch to valve position B (Figure 8b).

Isolate expansion tank for flushing procedure using the ball valve. During dead heading of flush cart pump, isolation will prevent compression of bladder in the expansion tank and flush cart fluid level dropping below available capacity.


Figure 7a: Typical Cleanable Flush Cart Strainer (100 mesh [0.149 mm])



⚠ WARNING! ⚠


WARNING! Disconnect electrical power source to prevent injury or death from electrical shock.

Figure 7b: Cam Fittings for Flush Cart Hoses

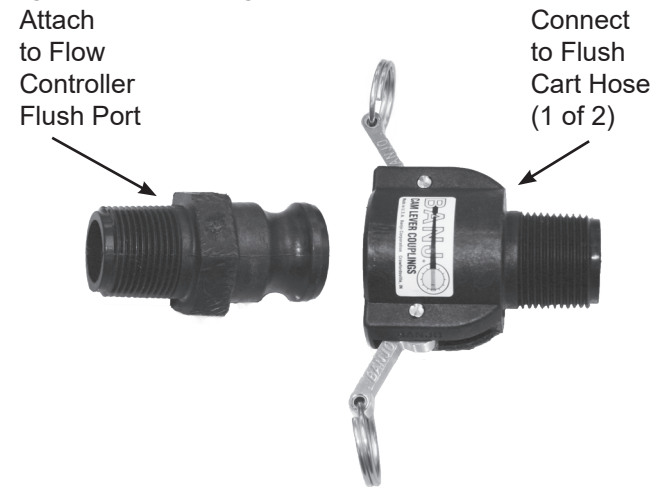


NOTICE: A hydrostatic pressure test is required on ALL piping, especially underground piping before final backfill per IGSHA and the pipe manufacturers recommendations.

Figure 8a: Valve Position A – Loop Fill/Flush

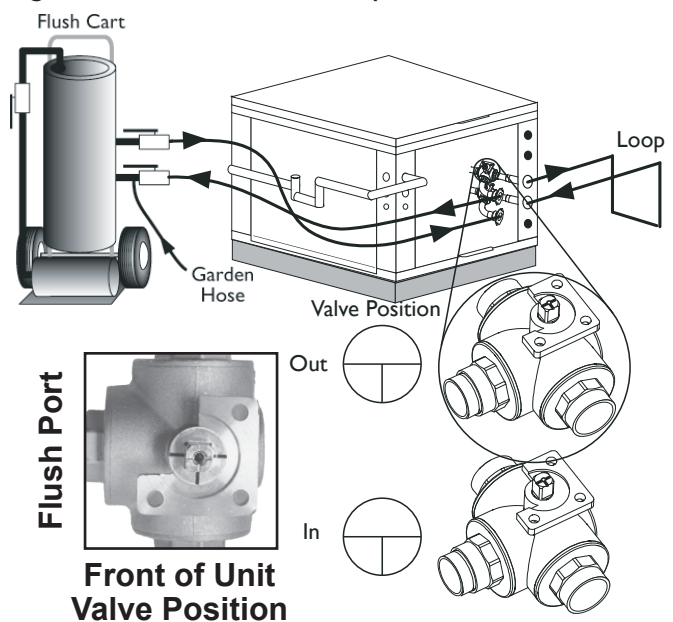

Flushing the Earth Loop, Cont'd.

Figure 8b: Valve Position B – Unit Fill/Flush

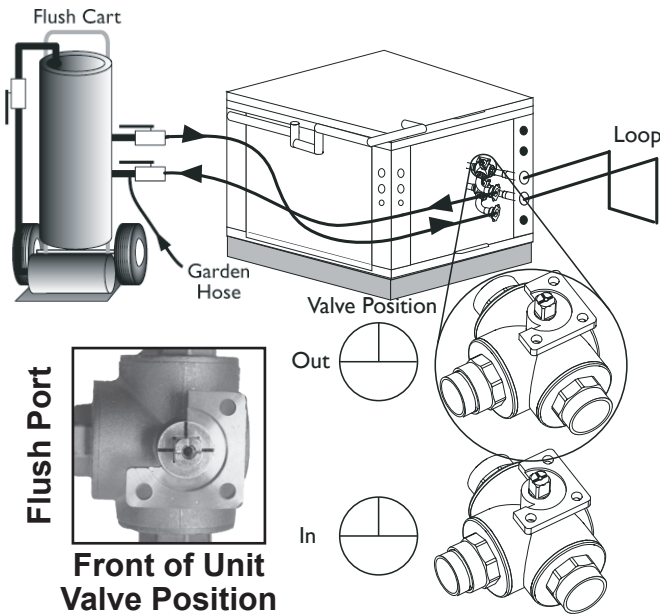**UNIT FILL**

Unit fill valves should be switched to Position B while flush cart is pumping to fill the unit heat exchanger (see Figure 8b). The valves position should be maintained until water is consistently returned into the flush reservoir.

LOOP FLUSH


Switch to valve Position A. The supply water may be shut off and the flush cart turned on to begin flushing. Once the flush reservoir is full, do not allow the water level in the flush cart tank to drop below the pump inlet line or air can be pumped back out to the earth loop. Try to maintain a fluid level in the tank above the return tee so that air can not be continuously mixed back into the fluid. Surges of 50 psi [345 kPa] can be used to help purge air pockets by simply shutting off the flush cart return valve going into the flush cart reservoir. This process 'dead heads' the pump to 50 psi [345 kPa]. To dead head the pump until maximum pumping pressure is reached, open the valve back up and a pressure surge will be sent through the loop to help purge air pockets from the piping system. Notice the drop in fluid level in the flush cart tank. If all air is purged from the system, the level will drop only 3/8" (1.2 cm) in a 10" [25.4 cm] diameter PVC flush tank (about a half gallon [1.9 liters]) since liquids are incompressible. If the level drops more than this level, flushing should continue since air is still being compressed in the loop fluid. Do this a number of times.

NOTICE: Actual flushing time require will vary for each installation due to piping length, configuration, and flush cart pump capacity. 3/8" (1.2 cm) or less fluid level drop is the ONLY indication that flushing is complete.

Switch valves to Position B to flush the unit. Flush through the unit until all air pockets have been removed.

Move valves to position C. By switching both valves to this position, water will flow through the loop and the unit heat exchanger. Finally, the dead head test should be checked again for an indication of air in the loop. Fluid level drop is your only indication of air in the loop.

Figure 8c: Valve Position C – Full Flush

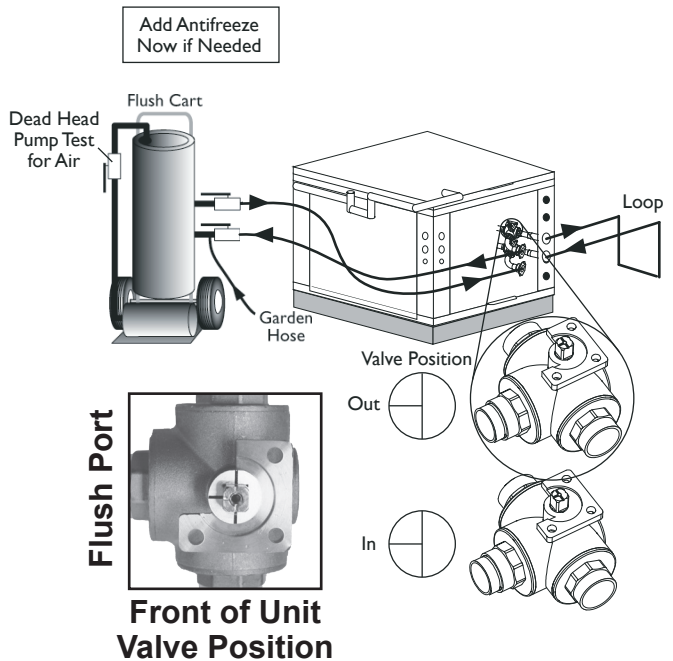**PRESSURIZE AND OPERATE**


As shown in Figure 8d, close the flush cart return valve to pressurize the loop to at least 50 psi [345 kPa], not to exceed 75 psi [517 kPa]. Open the isolation valve to the expansion tank and bleed air from the expansion tank piping using the Schrader valve located in front of the expansion tank. This will allow loop pressure to compress the expansion tank bladder, thus charging the expansion tank with liquid. After pressurizing, close the flush cart supply valve to isolate the flush cart. Move the Flow Controller valves to Position D.

Loop static pressure will fluctuate with the seasons and pressures will be higher in the winter months than during the cooling season. This fluctuation is normal and should be considered when charging the system initially. Unhook the flush cart from the Internal Flow Controller. Install Flow Controller caps to ensure that any condensation/leakage remains contained within the Flow Controller package.

If the loop pressure is between 50 and 75 psi [345 to 517 kPa] upon completion of flushing, pressures should be sufficient for all seasons.

Flushing the Earth Loop, Cont'd.

Figure 8d: Valve Position D – Pressurize and Operation

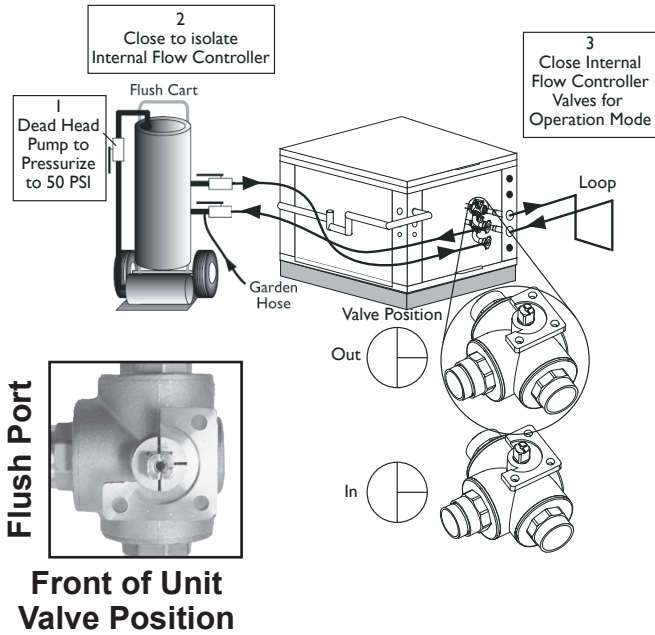

NOTICE: It is recommended to run the unit in the cooling, then heating mode for 15-20 minutes each to 'temper' the fluid temperature and prepare it for pressurization. This procedure helps prevent the periodic "flat" loop condition of no pressure.

Multiple Unit Piping and Flushing

Often projects require more than one heat pump. Where possible, it makes sense for multiple units to share a common ground loop. Common ground loops for multiple units bring new challenges including the need to avoid backward flow through inactive units, increased pumping requirements, and more complex flushing needs. Three types of multiple unit systems are described below along with guidelines for installation of each type.

vFlow® internal variable flow technology is a great assist for systems with multiple units. vFlow is available in three different configurations:

1. Internal variable-speed pump
2. Internal modulating valve for closed loops
3. Internal modulating valve for open loops

The internal modulating valve for open loops version should never be used on closed loops.

The internal variable speed pump version of vFlow includes an internal variable speed circulator controlled by the DXM2.5 microprocessor, internal 3-way flushing valves, an internal bladder type expansion tank, and front-mounted pressure ports that allow access to the pressure drop across the coaxial heat exchanger only. The pump curve for the circulator is shown in Figures 6a-b. The internal expansion tank will operate as a pressure battery for the geothermal system. It will absorb fluid from the loop when loop pressure rises and inject fluid into the loop when loop pressure falls. In this way the expansion tank will help to maintain a more constant loop pressure and avoid flat loops due to seasonal pressure changes in the loop.

When using the internal variable speed pump as the loop pump in multiple unit installations it is important to ensure that the variable speed pump can provide adequate flow through the heat pump against the loop head when all units are operating.

Units with the standard head pump should not be combined with units with high head pumps on the same loop. Standard head pumps are best suited for small applications with a single unit.

It may be possible to flush a multiple unit system through the unit's flushing valves. Flushing pressure drop of the valve may be calculated to determine if it is acceptable. Engineering data for the 3-way flushing valves can be found in Table 3.

Table 3: Internal 3-Way Flushing Valve Data

Model	Flushing Connection	Straight Flow Cv	90° Flow Cv
TES/P026 - 038	1" FPT	25	10.3
TES/P049 - 064	1" FPT	58	14.5

For example, if a system includes two 2-ton units and four ¾ loop circuits we can calculate the flushing pressure drop as follows. From Table 2 we know that it will take 4 gpm to

flush each ¾ circuit. If there is no provision to isolate the circuits for flushing, we will have to flush with a minimum of 4 circuits x 4 gpm/circuit = 16 gpm total. A check of other piping sizes used must be done to ensure that 16 gpm total flow will flush all piping.

Pressure drop through the flushing valve can be calculated using the following formula.


$$\Delta P = (GPM/Cv)^2 \text{ where,}$$

ΔP = pressure drop in psi through the valve while flushing
 GPM = flushing flow in gallons per minute
 Cv = valve Cv in flushing mode

We know from Table 3 that the Cv for the flushing valve in a TES/P026 is 10.3 in the flushing mode (90° flow). Therefore, $\Delta P = (GPM/Cv)^2 = (16/10.3)^2 = 2.4$ psi per valve (there are two flushing valves). So long as the flushing pump is able to provide 16 gpm at the flushing pressure drop of the loop plus the 2.4 x 2 valves = 4.8 psi of the flushing valves, the internal flushing valves may be used. If the flushing pump is not able to overcome the pressure drop of the internal flushing valves, then larger external flushing valves must be used.

UNIT CONFIGURATION

Multiple vFlow® units with internal variable-speed flow controller and check valve, piped in parallel sharing a common loop MUST be configured for 'VS PUMP PARALLEL' in Installer Settings Menu.

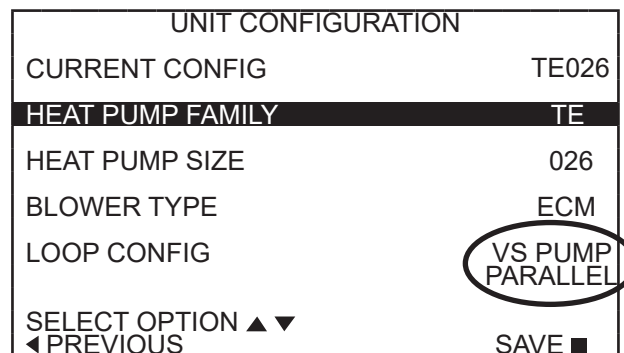

Installer Settings ➡ System Config ➡ Unit Config ➡ Loop Config

MULTIPLE UNITS w/INTERNAL FLOW CONTROLLERS

The simplest multiple unit system is one with two (or more) units utilizing internal Flow Controllers with no external pumps or flushing valves. In this case the units are piped in parallel and use the internal flushing valves to flush the system. The variable speed pump includes an internal check valve to prevent back (short circuiting) flow through the units.


In this case, flush the loop through the internal flushing valves in the unit farthest from the loop first. Once the loop is flushed, then change the internal flushing valves to flush the heat pump. Next, move the flushing cart to the next closest unit to the loop.

Multiple Unit Piping and Flushing, Cont'd.

Again, flush the loop through the internal flushing valves. This is important as there may be air/debris in the lines from this unit to the common piping. Once flushing begins the air will be moved into the loop and will need to be flushed out. After the loop is flushed through the second unit, change the flushing valves to flush the second unit. This process should be repeated for additional units working from the farthest from the loop to the closest to the loop.


This type of application can generally be employed for systems up to 12 tons depending on loop design. However, it is important to perform appropriate calculations to confirm that the variable speed pump can provide adequate flow through all heat pumps against the loop head when all units are operating.

Figure 9a: Multiple Units with Internal Flow Controllers

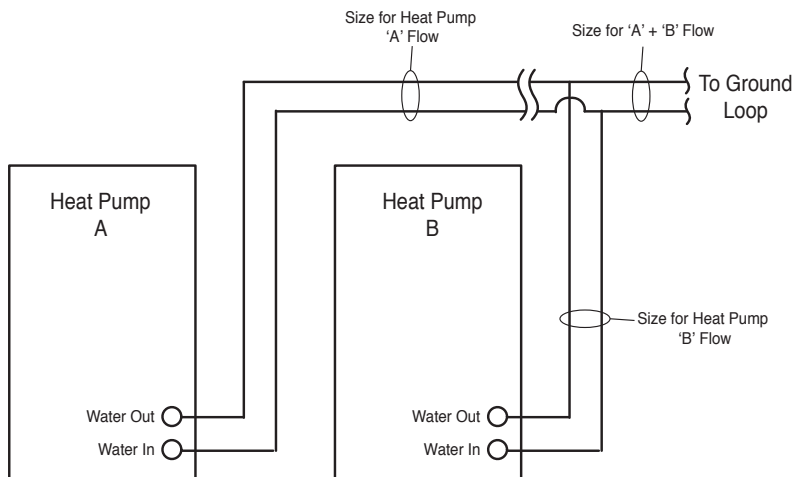

When the number of units or flushing requirements reaches a point where it is no longer feasible to flush through the internal valves (generally systems of more than 12 tons depending on loop design), external flushing valves should be installed. In this case, three-way flushing valves should be used or additional isolation valves must be installed to be able to isolate the loop during flushing.

Figure 9b: Multiple Units with Internal Flow Controllers and External Flushing Valves

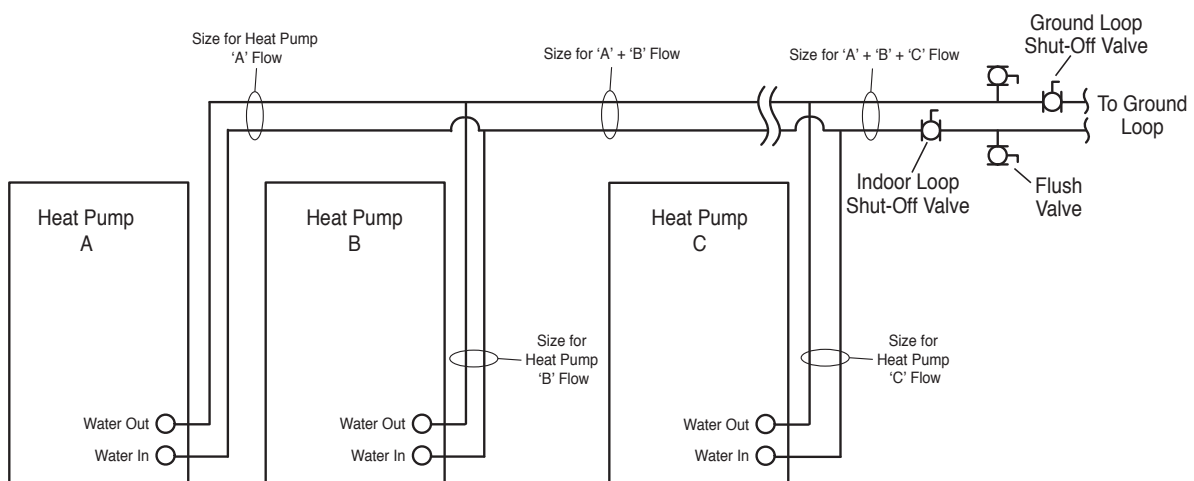

First, flush the ground loop. The installer should close the indoor loop shut-off valve (or the internal flushing valves in all units) and open the ground loop shut-off valve to prevent flow through the indoor loop while flushing the ground loop.


Once the ground loop is flushed, close the ground loop shut-off valve and open the indoor loop valve(s) to flush the units and indoor piping. Remember that there is an internal check valve in the variable speed pump and that backward flow through the unit is not possible.

Multiple Unit Piping and Flushing – Indoor Split (TES Only)

MULTIPLE UNITS WITH INTERNAL MODULATING VALVES AND CENTRAL PUMP

This is an application where multiple units are used in conjunction with a central, variable speed pump. In this case, units with closed loop modulating valves are used (do not use open loop modulating valves on a closed loop system). External flushing valves are required. This application is for larger systems, including commercial.

Figure 9c: Multiple Units with Internal Modulating Valves and Central Pump

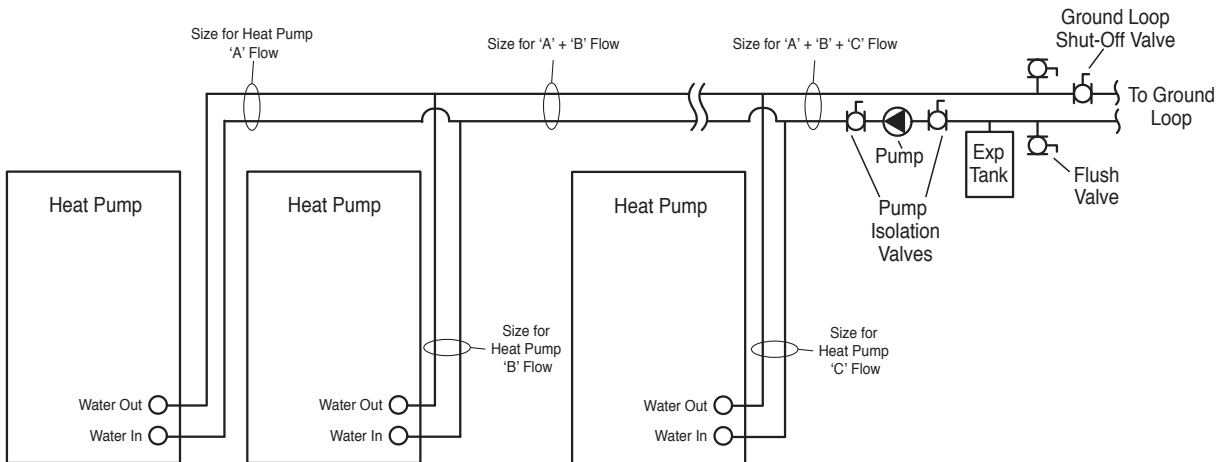

Before flushing, the installer should manually open all modulating valves as detailed in Closed Loop – External Central Pumping section of this manual. Next, flush the ground loop. The installer should close a pump isolation valve and open the ground loop shut-off valve to prevent flow through the indoor loop while flushing the ground loop.

Once the ground loop is flushed, close the ground loop shut-off valve and open the pump isolation valve to flush the units and indoor piping. Once the system is flushed remember to return the modulating valves to their normal operating position.

Ground Loop Heat Pump Applications

ANTIFREEZE SELECTION – GENERAL

In areas where minimum entering loop temperatures drop below 40°F [4.4°C] or where piping will be routed through areas subject to freezing, antifreeze is needed. Alcohols and glycols are commonly used as antifreeze solutions. Your local representative should be consulted for the antifreeze best suited to your area. Freeze protection should be maintained to 15°F [8.5°C] below the lowest expected entering loop temperature.

Initially calculate the total volume of fluid in the piping system using Table 4. Then use the percentage by volume shown in Table 5 for the amount of antifreeze. Antifreeze concentration should be checked from a well mixed sample using a hydrometer to measure specific gravity.

Table 4: Fluid Volume

Fluid Volume (gal [liters] per 100' [30 meters] Pipe)		
Pipe	Size	Volume (gal) [liters]
Copper	1"	4.1 [15.3]
	1.25"	6.4 [23.8]
	2.5"	9.2 [34.3]
Polyethylene	3/4" IPS SDR11	2.8 [10.4]
	1" IPS SDR11	4.5 [16.7]
	1.25" IPS SDR11	8.0 [29.8]
	1.5" IPS SDR11	10.9 [40.7]
	2" IPS SDR11	18.0 [67.0]
Unit Heat Exchanger	Typical	1.0 [3.8]
Flush Cart Tank	10" Dia x 3ft tall [25.4cm x 91.4cm tall]	10 [37.9]

⚠ WARNING! ⚠

WARNING! Always dilute alcohols with water (at least 50% solution) before using. Alcohol fumes are flammable and can cause serious injury or death if not handled properly.

When handling methanol (or any alcohol), always wear eye protection and rubber gloves as alcohols are easily absorbed through the skin.

Table 5: Antifreeze Percentages by Volume

Type	Minimum Temperature for Low Temperature Protection			
	10°F [-12.2°C]	15°F [-9.4°C]	20°F [-6.7°C]	25°F [-3.9°C]
Methanol	21%	17%	13%	8%
Propylene Glycol	29%	24%	18%	12%
Ethanol*	23%	20%	16%	11%

* Must not be denatured with any petroleum based product

Contact your ClimateMaster distributor if you have any questions as to antifreeze selection.

⚠ WARNING! ⚠

WARNING! Always use properly marked vehicles (D.O.T. placards), and clean/suitable/properly identified containers for handling flammable antifreeze mixtures. Post and advise those on the jobsite of chemical use and potential dangers of handling and storage.

NOTICE: DO NOT use automotive windshield washer fluid as antifreeze. Washer fluid contains chemicals that will cause foaming.

⚠ CAUTION! ⚠

CAUTION! Always obtain MSDS safety sheets for all chemicals used in ground loop applications including chemicals used as antifreeze.

ANTIFREEZE CHARGING

It is highly recommended to utilize premixed antifreeze fluid where possible to alleviate many installation problems and extra labor.

The following procedure is based upon pure antifreeze and can be implemented during the Full Flush procedure with three way valves in the Figure 8c - Valve Position C. If a premixed mixture of 15°F [-9.4°C] freeze protection is used, the system can be filled and flushed with the premix directly to prevent handling pure antifreeze during the installation.

1. Flush loop until all air has been purged from system and pressurize to check for leaks before adding any antifreeze.
2. Run discharge line to a drain and hook up antifreeze drum to suction side of pump (if not adding below water level through approved container). Drain flush cart reservoir down to pump suction inlet so reservoir can accept the volume of antifreeze to be added.
3. Calculate the amount of antifreeze required by first calculating the total fluid volume of the loop from Table 4. Then calculate the amount of antifreeze needed using Table 5 for the appropriate freeze protection level. Many southern applications require freeze protection because of exposed piping to ambient conditions.
4. Isolate unit and prepare to flush only through loop (see Figure 8a). Start flush cart, and gradually introduce the required amount of liquid to the flush cart tank (always introduce alcohols under water or use suction of pump to draw in directly to prevent fuming) until attaining the proper antifreeze protection. The rise in flush reservoir level indicates amount of antifreeze added (some carts are marked with measurements in gallons or liters). A ten inch [25.4 cm] diameter cylinder, 3 foot [91.4 cm] tall holds approximately 8 gallons [30.3 liters] of fluid plus the hoses (approx. 2 gallons, [7.6 liters], which equals about 10 gallons [37.9 liters] total. If more than one tankful is required, the tank should be drained immediately by opening the waste valve of the flush cart noting the color of the discharge fluid. Adding food

Ground Loop Heat Pump Applications, Cont'd.

- coloring to the antifreeze can help indicate where the antifreeze is in the circuit and prevents the dumping of antifreeze out the waste port. Repeat if necessary.
- Be careful when handling methanol (or any alcohol). Always wear eye protection and rubber gloves. The fumes are flammable, and care should be taken with all flammable liquids. Open flush valves to flush through both the unit and the loop and flush until fluid is homogenous and mixed. It is recommended to run the unit in the heating and cooling mode for 15-20 minutes each to 'temper' the fluid temperature and prepare it for pressurization. Devoting this time to clean up can be useful. This procedure helps prevent the periodic "flat" loop condition.
 - Close the flush cart return valve; and immediately thereafter, close the flush cart supply valve, leaving a positive pressure in the loop of approximately 50 psi [345 kPa]. This is a good time to pressure check the system as well. Check the freeze protection of the fluid with the proper hydrometer to ensure that the correct amount of antifreeze has been added to the system. The hydrometer can be dropped into the flush reservoir and the reading compared to Chart 1a for Methanol, 1b for Propylene Glycol, and 1c for Ethanol to indicate the level of freeze protection. Do not antifreeze more than a +10°F [-12.2°C] freeze point. Specific gravity hydrometers are available in the residential price list. Repeat after reopening and flushing for a minute to ensure good second sample of fluid. Inadequate antifreeze protection can cause nuisance low temperature lockouts during cold weather.

⚠ WARNING! ⚠

WARNING! Always dilute alcohols with water (at least 50% solution) before using. Alcohol fumes are flammable and can cause serious injury or death if not handled properly.

When handling methanol (or any alcohol), always wear eye protection and rubber gloves as alcohols are easily absorbed through the skin.

- Close the flush cart return valve; immediately thereafter, close the flush cart supply valve, shut off the flush cart leaving a positive pressure in the loop of approximately 50-75 psi [345-517 kPa]. Refer to Figure 8d for more details.

LOW WATER TEMPERATURE CUTOUT SETTING – DXM2.5 CONTROL

When antifreeze is selected, the LT1 jumper (JW3) should be clipped to select the low temperature (antifreeze 10°F [-12.2°C]) set point and avoid nuisance faults (see "Low Water Temperature Cutout Selection" in this manual).

Chart 1a: Methanol Specific Gravity

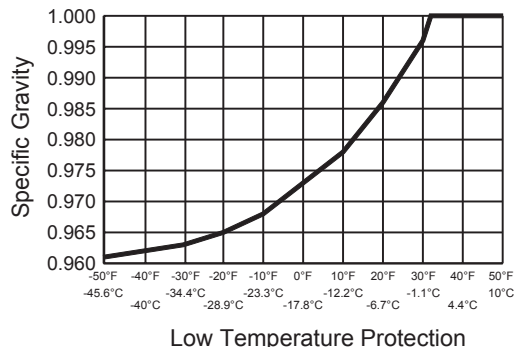


Chart 1b: Propylene Glycol Specific Gravity

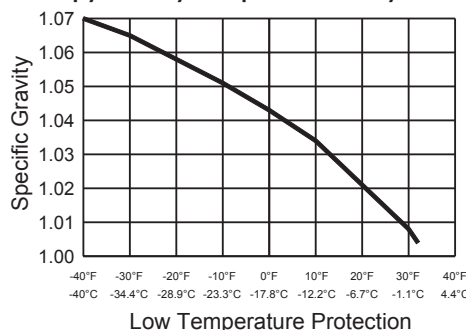


Chart 1c: Ethanol Specific Gravity


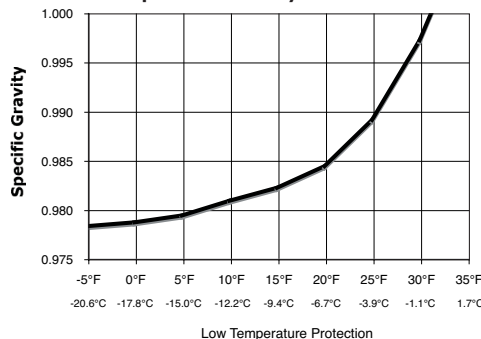



Figure 10: Low Temperature Cutout Selection

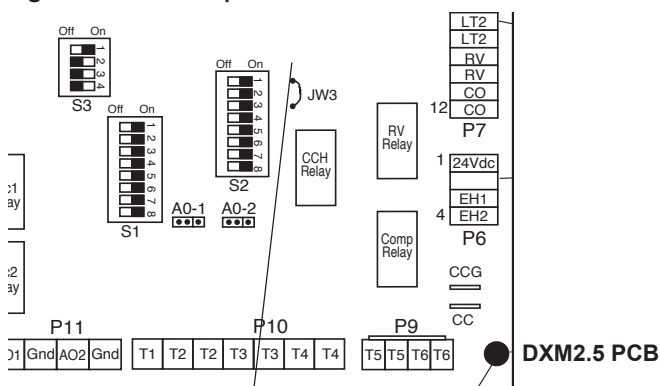

JW3-LT1 jumper should be clipped for low temperature operation. Do not clip JW3-LT1 in open loop applications

Closed Loop - External Central Pumping Applications (Indoor Split TES Only)

Figure 11: Typical Closed Loop with Central Pumping Application (with Internal Modulating Motorized Valve Shown)

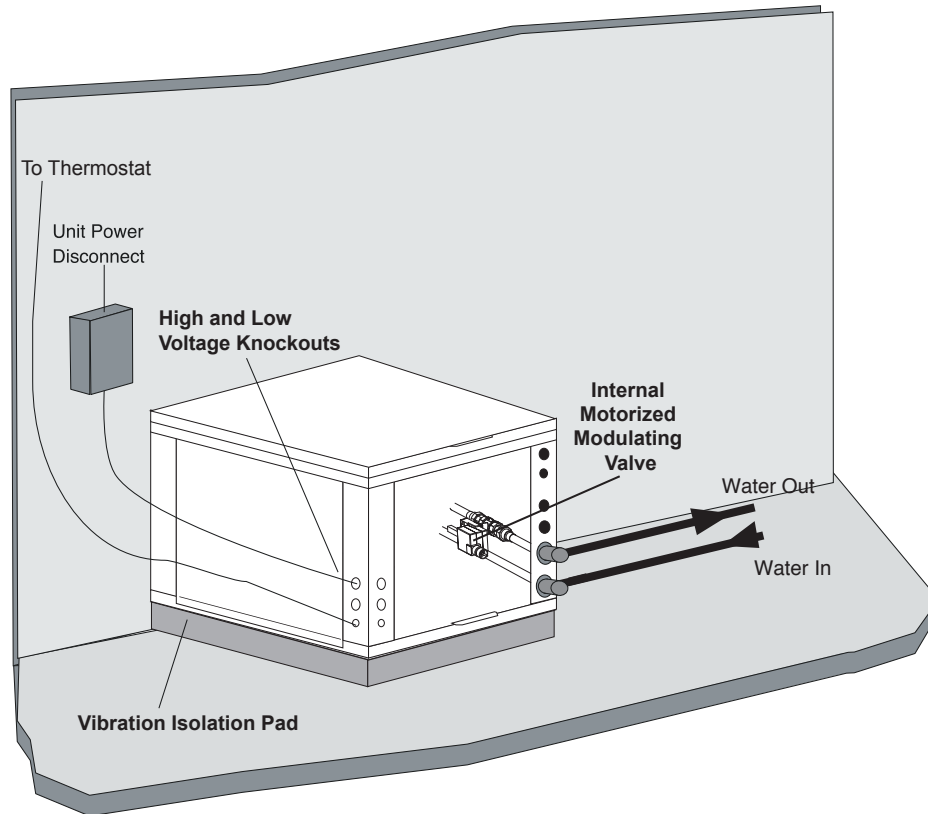


Tranquility® Digital units are available with a modulating water valve option for closed-loop applications with external central pumping (designated by a 5 in the 11th position of the unit model number). With this option, the Modulating Valve is regulated by the Communicating DXM2.5 board based on entering and leaving water temperature (ΔT). The DXM2.5 board outputs a 0-10v signal to determine valve position (flow rate). The modulating valve defaults to closed position if it loses signal but still has 24V power running to it. If the motorized modulating valve loses both signal from the DXM2.5 board AND 24V power, it will remain in the same position it was in when it lost 24V power.

NOTE: The Cv (flow coefficient) of the valve used in these units is DIFFERENT than the Cv of the valve used in the open loop unit. It is not advisable for use in open loop applications as sound/noise issues may result. Units with the water circuit for closed loop, central pumping option are only available with a copper water coil.

To manually open the internal modulating motorized water valve in TES026 – 049 push down on the handle to unlock it. Then rotate the handle to the open position as shown in Figure 12. This fully opens the valve for flushing. Once flushing is complete, return the valve handle to its normally closed position.


To manually open the internal modulating motorized water valve in TES064, push down on the lock release button while turning the handle to the open position as shown in Figure 12. This fully opens the valve for flushing. Once flushing is complete, press the lock release again and return the valve handle to its normally closed position.

Figure 12: Internal Modulating Motorized Valve Positions

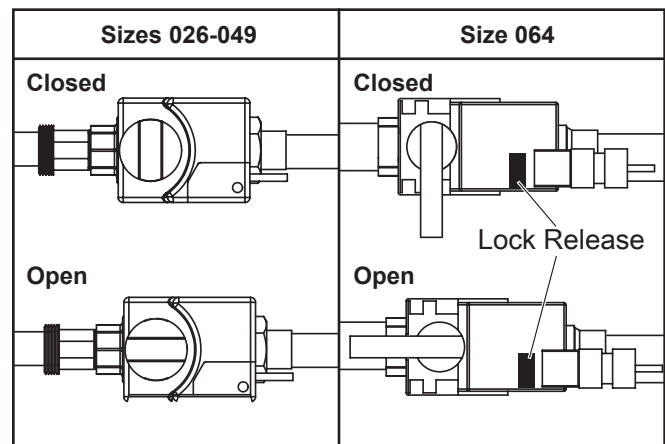

Open Loop or Ground-Water Heat Pump Applications

Figure 13: Typical Open Loop/Well Application

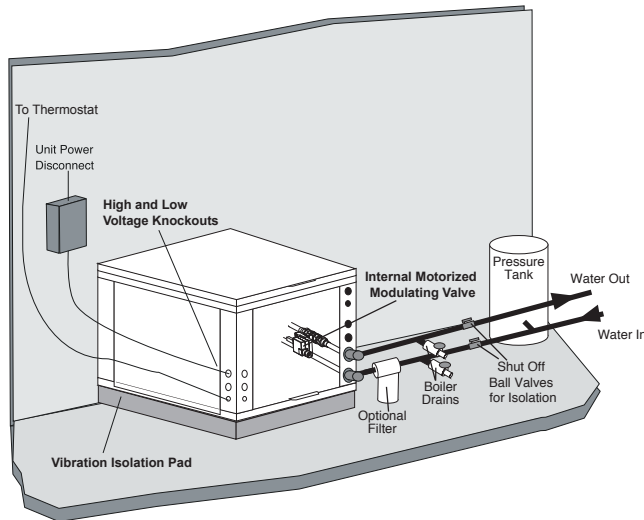

CAUTION! Refrigerant pressure activated water regulating valves should never be used with this equipment.

Tranquility® Digital Indoor Split (TES) units are available with a water circuit option for open loop applications (designated by a 6 in the 11th position of the unit model number).

The Motorized Modulating Valve is regulated by the Communicating DXM2.5 board based on entering and leaving water temperature (ΔT). The DXM2.5 board gives a 0-10v signal to determine flow rate. The motorized modulating valve defaults to closed position if it loses signal but still has 24V power running to it. If the motorized modulating valve loses both signal from the DXM2.5 board AND 24V power, it will remain in the same position it was in when it lost 24V power. **DO NOT USE** open loop units in closed loop applications due to significant pressure drop through the open loop motorized modulating valve. This option is only available with Cupro-Nickel Water Coil.

To manually open the internal modulating motorized water valve in TES026 – 049 push down on the handle to unlock it. Then rotate the handle to the open position as shown in Figure 12. This fully opens the valve for flushing. Once flushing is complete, return the valve handle to its normally closed position.

To manually open the internal modulating motorized water valve in TES064, push down on the lock release button while turning the handle to the open position as shown in Figure 12. This fully opens the valve for flushing. Once flushing is complete, press the lock release again and return the valve handle to its normally closed position.

OPEN LOOP - GROUND WATER SYSTEMS

Typical open loop piping is shown in Figure 13. Shut off valves should be included for ease of servicing. Boiler drains or other valves should be “tee’d” into the lines to allow acid flushing of the heat exchanger. Shut off valves should be positioned to allow flow through the coax via the boiler drains without allowing flow into the piping system. Schrader ports built into unit may be used to measure heat exchanger pressure drop. Water temperature can be viewed on the communicating thermostat. Supply and return water piping should be limited to copper, HPDE, or other acceptable high temperature material. Note that PVC or CPVC material is not recommended as they are not compatible with the polyolester oil used in HFC-410A products.

Water quantity should be plentiful and of good quality. Consult Table 6 for water quality requirements. vFlow® units for open loop applications always come with Cupro-Nickel coils. In ground water situations where scaling could be heavy or where biological growth such as iron bacteria will be present, an open loop system is not recommended. Heat exchanger coils may over time lose heat exchange capabilities due to build up of mineral deposits. Heat exchangers must only be serviced by a qualified technician, as acid and special pumping equipment is required. Desuperheater coils can likewise become scaled and possibly plugged. In areas with extremely hard water, the owner should be informed that the heat exchanger may require occasional acid flushing. In some cases, the desuperheater option should not be recommended due to hard water conditions and additional maintenance required.

WATER QUALITY STANDARDS

Table 6 should be consulted for water quality requirements. Scaling potential should be assessed using the pH/Calcium hardness method. If the pH < 7.5 and the Calcium hardness is less than 100 ppm, scaling potential is low. If this method yields numbers out of range of those listed, a monitoring plan should be implemented in these probable scaling situations. Other water quality issues such as iron fouling, corrosion prevention and erosion and clogging should be referenced in Table 6.

PRESSURE TANK AND PUMP

Use a closed, bladder-type pressure tank to minimize mineral formation due to air exposure. The pressure tank should be sized to provide at least one minute continuous run time of the pump using its drawdown capacity rating to prevent pump short cycling. Discharge water from the unit is not contaminated in any manner and can be disposed of in various ways, depending on local building codes (e.g. recharge well, storm sewer, drain field, adjacent stream or pond, etc.). Most local codes forbid the use of sanitary sewer for disposal. Consult your local building and zoning department to assure compliance in your area.

Open Loop or Ground-Water Heat Pump Applications, Cont'd.

The pump should be sized to handle the home's domestic water load (typically 5-9 gpm [23-41 l/m]) plus the flow rate required for the heat pump. Pump sizing and expansion tank must be chosen as complimentary items. For example, an expansion tank that is too small can cause premature pump failure due to short cycling. Variable speed pumping applications should be considered for the inherent energy savings and smaller pressure tank requirements.

WATER COIL LOW TEMPERATURE LIMIT SETTING

For all open loop systems the 30°F [-1.1°C] LT1 setting (factory setting-water) should be used to avoid freeze damage to the unit. See "Low Water Temperature Cutout Selection" (Figure 10) in this manual for details on the low limit setting.

Water Quality Standards

Table 6: Water Quality Standards

Clean water is essential to the performance and life span of water source heat pumps. Contaminants, chemicals, and minerals all have the potential to cause damage to the water heat exchanger if not treated properly. All closed water loop systems should undergo water quality testing and be maintained to the water quality standards listed in this table.

CLIMATEMASTER WATER QUALITY STANDARDS							
For Closed-Loop and Open-Loop Systems							
	Description	Symbol	Units	Heat Exchanger Type			
				Closed Loop Recirculating	Open Loop, Tower, Ground Source Well		
					All Heat Exchanger Types	COAXIAL HX Copper Tube in Tube	COAXIAL HX Cupronickel
Scaling Potential	pH - Chilled Water <85°F			7.0 to 9.0	7.0 to 9.0	7.0 to 9.0	7.0 to 9.0
	pH - Heated Water >85°F			8.0 to 10.0	8.0 to 10.0	8.0 to 10.0	8.0 to 10.0
	Alkalinity	(HCO ₃ ⁻)	ppm - CaCO ₃ equiv.	50 to 500	50 to 500	50 to 500	50 to 500
	Calcium	(Ca)	ppm	<100	<100	<100	<100
	Magnesium	(Mg)	ppm	<100	<100	<100	<100
	Total Hardness	(CaCO ₃)	ppm - CaCO ₃ equiv.	30 to 150	150 to 450	150 to 450	150 to 450
	Langelier Saturation Index	LSI		-0.5 to +0.5	-0.5 to +0.5	-0.5 to +0.5	-0.5 to +0.5
Ryznar Stability Index	RSI		6.5 to 8.0	6.5 to 8.0	6.5 to 8.0	6.5 to 8.0	
Corrosion Prevention	Total Dissolved Solids	(TDS)	ppm - CaCO ₃ equiv.	<1000	<1000	<1000	<1500
	Sulfate	(SO ₄ ²⁻)	ppm	<200	<200	<200	<200
	Nitrate	(NO ₃ ⁻)	ppm	<100	<100	<100	<100
	Chlorine (free)	(Cl)	ppm	<0.5	<0.5	<0.5	<0.5
	Chloride (water < 80°F)	(Cl ⁻)	ppm	<20	<20	<150	<150
	Chloride (water > 120°F)	(Cl ⁻)	ppm	<20	<20	<125	<125
	Hydrogen Sulfide ^a	(H ₂ S)	ppb	<0.5	<0.5	<0.5	<0.5
	Carbon Dioxide	(CO ₂)	ppm	0	<50	10 to 50	10 to 50
	Iron Oxide	(Fe)	ppm	<1.0	<1.0	<1.0	<0.2
	Manganese	(Mn)	ppm	< 0.4	<0.4	<0.4	<0.4
	Ammonia	(NH ₃)	ppm	<0.05	<0.1	<0.1	<0.1
	Chloramine	(NH ₂ CL)	ppm	0	0	0	0
	Fouling & Biological	Iron Bacteria		cells/mL	0	0	0
Slime Forming Bacteria			cells/mL	0	0	0	0
Sulfate reducing bacteria			cells/mL	0	0	0	0
Suspended Solids ^b		(TSS)	ppm	<10	<10	<10	<10
Electrolysis All HX types	Earth Ground Resistance ^c		Ohms	0	Consult NEC & local electrical codes for grounding requirements		
	Electrolysis Voltage ^d		mV	<300	Measure voltage internal water loop to HP ground		
	Leakage Current ^d		mA	<15	Measure current in water loop pipe		
	Building Primary Electrical Ground to unit, must meet local diameter and penetration length requirements Do not connect heat pump to steel pipe unless dissimilar materials are separated by using Di-electric unions. Galvanic corrosion of heat pump water pipe will occur.						

Water Quality Standards, Cont'd.


1. The ClimateMaster Water Quality Table provides water quality requirements for coaxial & brazed plate heat exchangers.
2. The water must be evaluated by an independent testing facility comparing site samples against this Table. When water properties are outside of these parameters, the water must either be treated by a professional water treatment specialist to bring the water quality within the boundaries of this specification, or an external secondary heat exchanger must be used to isolate the heat pump water system from the unsuitable water. Failure to do so will void the warranty of the heat pump system and will limit liability for damage caused by leaks or system failure.
3. Regular sampling, testing and treatment of the water is necessary to assure that the water quality remains within acceptable levels thereby allowing the heat pump to operate at optimum levels.
4. If closed-loop systems are turned off for extended periods, water samples must be tested prior to operating the system.
5. For optimal performance, it is recommended that the closed-loop piping systems are initially filled with de-ionized water.
6. Well water with chemistry outside of these boundaries, and salt water or brackish water requires an external secondary heat exchanger. Surface/Pond water should not be used.
7. If water temperature is expected to fall below 40°F, antifreeze is required. Refer to the heat pump IOM for the correct solution ratios to prevent freezing.
 - α Hydrogen Sulfide has an odor of rotten eggs. If one detects this smell, a test for H₂S must be performed. If H₂S is detected above the limit indicated, remediation is necessary (Consult with your Water Testing/Treatment Professional) or a secondary heat exchanger is required using appropriate materials as recommended by the heat exchanger supplier.
 - β Suspended solids and particulates must be filtered to prevent fouling and failure of heat exchangers. Strainers or particulate filters must be installed to provide a maximum particle size of 600 micron (0.60 mm, 0.023 in.) using a 20 to 30 mesh screen size. When a loop is installed in areas with fine material such as sand or clay, further filtration is required to a maximum of 100 micron. Refer to the Strainer / Filter Sizing Chart to capture the particle sizes encountered on the site.
 - χ An electrical grounding system using a dedicated ground rod meeting NEC and Local Electrical codes must be installed. Building Ground must not be connected the WSHP piping system or other plumbing pipes.
 - δ Refer to IOM for instructions on measuring resistance and leakage currents within water loops.

Do not use PVC pipe for water loop (compressor POE oil and glycols damage PVC) use of HDPE pipe is recommended.


Strainer / Filter Sizing			
Mesh Size	Particle Size		
	Microns	MM	Inch
20	840	0.840	0.0340
30	533	0.533	0.0210
60	250	0.250	0.0100
100	149	0.149	0.0060
150	100	0.100	0.0040
200	74	0.074	0.0029

ppm = parts per million
ppb = parts per billion

Water Quality Standards, Cont'd.

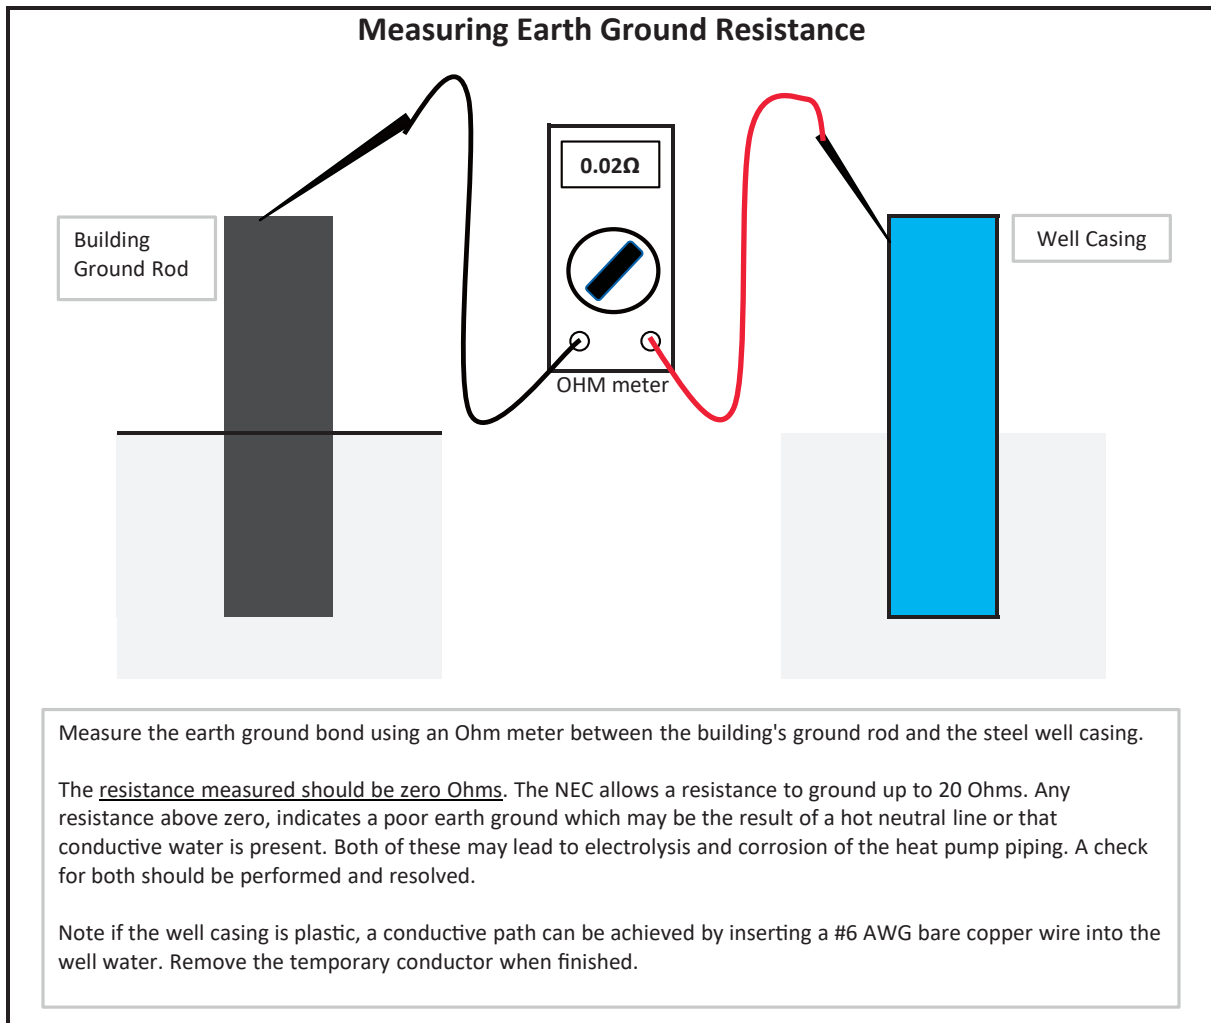

Water Quality Standards, Cont'd.

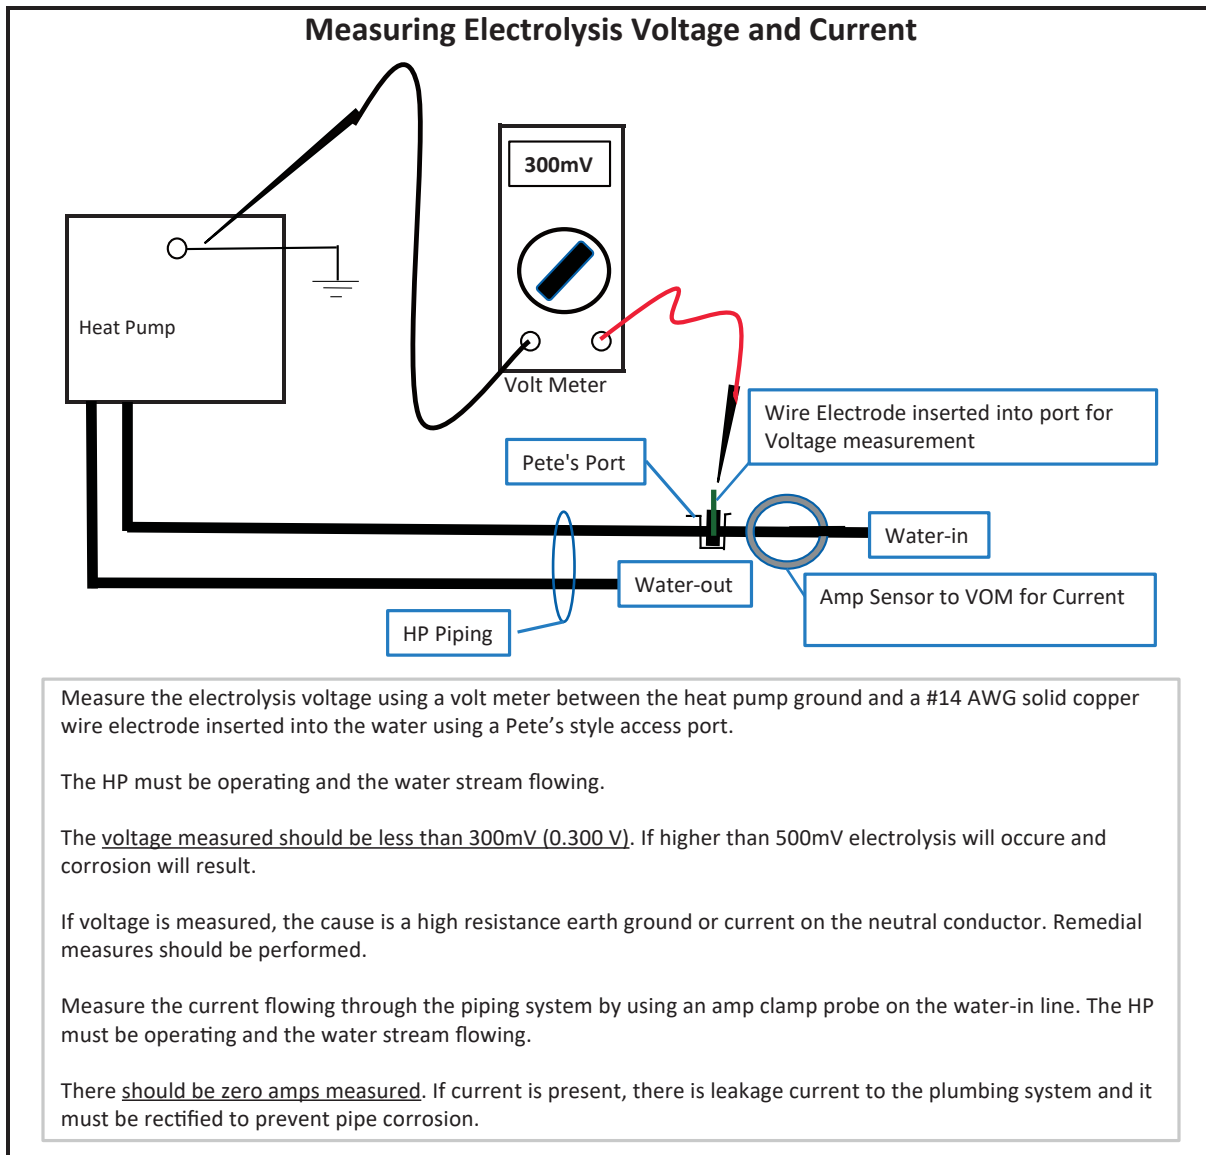

Refrigeration Installation

⚠ CAUTION! ⚠

CAUTION! HFC-410A systems operate at higher pressures than R-22 systems. Be certain that service equipment (gauges, tools, etc.) is rated for HFC-410A. Some R-22 service equipment may not be acceptable.

⚠ CAUTION! ⚠

CAUTION! Installation of a factory supplied liquid line bi-directional filter drier is required. Never install a suction line filter in the liquid line.

LINE SET INSTALLATION

Figures 16a and 16b illustrate typical installations of a compressor section matched to either an air handler (fan coil) or add-on furnace coil. Table 7 shows typical line set diameters at various lengths. Line set lengths should be kept to a minimum and should always be installed with care to avoid kinking. Line sets are limited to 60 feet in length (one way). Line sets over 60 feet void the equipment warranty. If the line set is kinked or distorted, and it cannot be formed back into its original shape, the damaged portion of the line should be replaced. A restricted line set will effect the performance of the system.

Split units are shipped with a filter drier (loose) inside the cabinet that must be installed in the liquid line at the line set.

All brazing should be performed using nitrogen circulating at 2-3 psi [13.8-20.7 kPa] to prevent oxidation inside the tubing. All line sets should be insulated with a minimum of 1/2" [13mm] thick closed cell insulation. Liquid lines should be insulated for sound control purposes. All insulation tubing should be sealed using a UV resistant paint or covering to prevent deterioration from sunlight.

When passing refrigerant lines through a wall, seal opening with silicon-based caulk. Avoid direct contact with water pipes, duct work, floor joists, wall studs, floors or other structural components that could transmit compressor vibration. Do not suspend refrigerant tubing from joists with rigid straps. Do not attach line set to the wall. When necessary, use hanger straps with isolation sleeves to minimize transmission of line set vibration to the structure.

INSTALLING THE LINE SET AT THE COMPRESSOR SECTION

Braze the line set to the service valve stubs as shown in Figure 14. Remove the Schrader cores and heat trap the valves to avoid overheating and damage. Nitrogen should be circulated through the system at 2-3 psi [13.8-20.7 kPa] to prevent oxidation contamination. Use a low silver phosphor-copper braze alloy on all brazed connections. Compressor section is shipped with a factory charge. Therefore, service valves should not be opened until the line set has been leak tested, purged and evacuated. See "Charging the System."

INSTALLING THE INDOOR COIL AND LINE SET

Figure 15 shows the installation of the line set and TXV to a typical indoor coil. An indoor coil or air handler (fan coil) with a TXV is required. Coils with cap tubes may not be used. If coil includes removable fixed orifice, the orifice must be removed and a TXV must be installed as shown in Figure 15. Fasten the copper line set to the coil. Nitrogen should be circulated through the system at 2-3 psi [13.8-20.7 kPa] to prevent oxidation inside the refrigerant tubing. Use a low silver phosphor-copper braze alloy on all brazed connections.

Use a brazing shield to protect all heat sensitive and painted parts.

Table 7: Line set Diameters and Charge Information

Model	Factory† Charge (oz) [kg]	Basic** Charge (oz) [kg]	20 Feet [6 meters]		40 Feet [12 meters]		60 Feet* [18 meters]	
			Liquid	Suction	Liquid	Suction	Liquid	Suction
TES/TEP Series								
026	96 [2.72]	81 [2.30]	3/8"	3/4"	3/8"	3/4"	3/8"	3/4"
038	104 [2.95]	89 [2.52]	3/8"	7/8"	3/8"	7/8"	3/8"	7/8"
049	126 [3.75]	111 [3.15]	3/8"	7/8"	3/8"	7/8"	3/8"	7/8"
064	192 [5.44]	162 [4.59]	1/2"	7/8"	1/2"	7/8"	1/2"	7/8"

* 60 Feet is the maximum line set length.

** Basic charge includes only the amount required for the condensing unit and the evaporating coil.

An additional amount should be added allowing 0.6oz per ft. for 3/8" [0.6g per cm] and 1.2oz per ft. for 1/2" [1.1g per cm] of line set used.

† Factory charge is preset for 25' [7.6 meters] line set.

Refrigeration Installation, Cont'd.

Figure 14: Braze Instructions

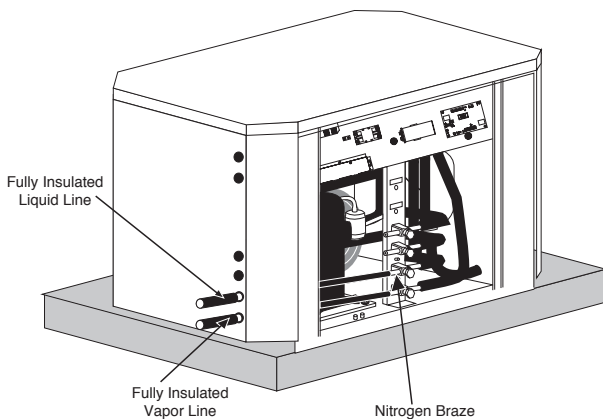
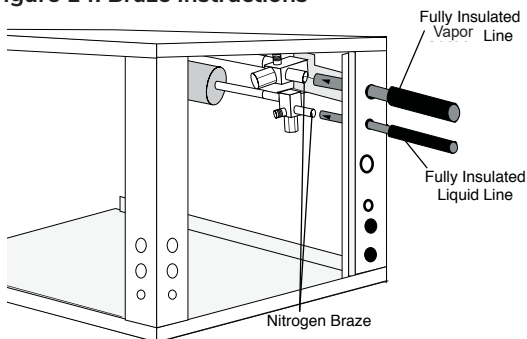


Table 8: Service Valve Positions


Position	Description	System	Service Port
CCW-Full Out	Operation Position	Open	Open
CW-Full In	Shipping Position	Closed	Open

RE-USING EXISTING LINE SET – R-22 TO HFC-410A CONVERSION

New line sets are always recommended, but are required if:

- The previous system had a compressor burn out.
- The existing line set has oil traps.
- The existing line set is larger or smaller than the recommended line set for the HFC-410A system.
- The existing line set is damaged, corroded, or shows signs of abrasion/fatigue

Figure 15: Air Coil Connection

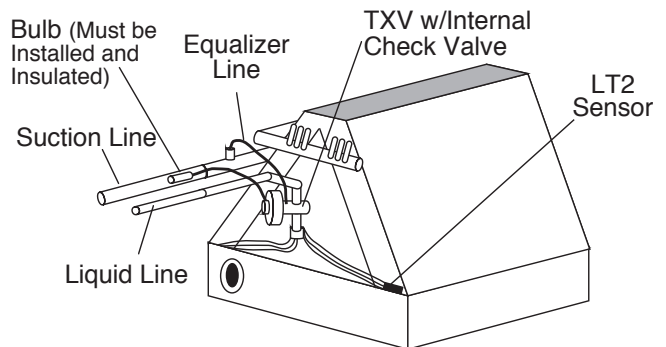

IMPORTANT: DO NOT perform any brazing with the TXV bulb attached to any line. After brazing operations have been completed, clamp the TXV bulb securely on the suction line at the 10 to 2 o'clock position with the strap provided. Insulate the bulb and line with pressure sensitive tape.

IMPORTANT: TXV sensing bulb should be located on a horizontal section of copper suction line, just outside of coil box. The copper sensing bulb must never be placed on any aluminum tube as this will result in galvanic corrosion and eventual failure of the aluminum tube.

⚠ WARNING! ⚠

WARNING! If at all possible, it is recommended that a new line set be used when replacing an existing R-22 system with an HFC-410A system. In rare instances where replacing the line set is not possible, the line set must be flushed prior to installation of the HFC-410A system. It is also important to empty all existing traps. Polyolester (POE) oils are used in units charged with HFC-410A refrigerant. Residual mineral oil can act as an insulator on the wall of the coil tubing, hindering proper heat transfer and thus reducing system efficiency and capacity. Another important reason to thoroughly flush the line set is remove any trash and other contaminants that may be present which could clog the thermal expansion valve.

Failure to properly flush the system per the instructions below will void the warranty.


⚠ WARNING! ⚠

WARNING! The Environmental Protection Agency prohibits the intentional venting of HCFC and HFC refrigerants during maintenance, service, repair and disposal of appliance. Approved methods of recovery, recycling or reclaiming must be followed.

⚠ CAUTION! ⚠

CAUTION! This procedure should not be performed on systems which contain containments (Example: compressor burn out).

Refrigeration Installation, Cont'd.

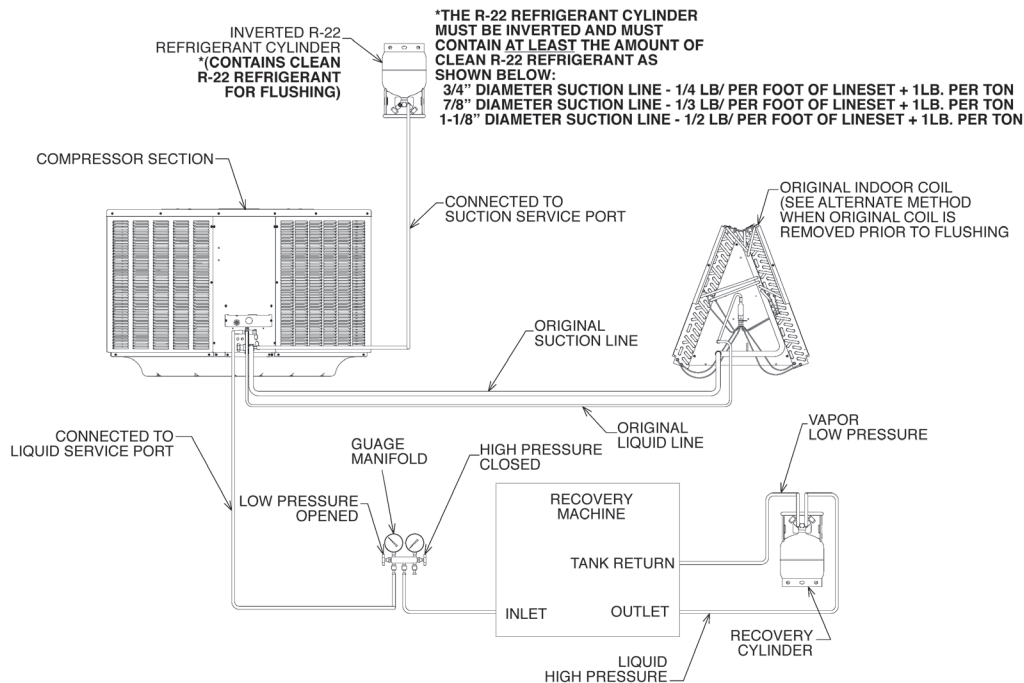**REQUIRED EQUIPMENT**

The following equipment will be required in order to flush the indoor coil and existing line set:

- Two R-22 recovery cylinders
- Refrigerant recovery machine with a pump down feature
- Two sets of gauges (one used for R-22 and one used with the HFC-410A).
- Cylinder of clean R-22 (minimum amount required to adequately flush shown below)
 - 3/4" Diameter suction lines: 1/4 lb. per foot of line set + 1 lb. per ton for indoor coil.
 - 7/8" diameter suction lines: 1/3 lb. per foot of line set + 1 lb. per ton for indoor coil
 - 1-1/8" diameter suction lines: 1/2 lb. per foot of line set + 1 lb. per ton for indoor coil.

Example: 3-ton system with 40 ft. long line set and 3/4" suction line.

Line set: 1/4 lb./ft. x 40 ft. = 10 lb.

Indoor coil: 1 lb./ton x 3 tons = 3 lbs. (not required if coil is removed and lines are connected together)

Total: 10 lbs. + 3 lbs. = 13 lbs. to adequately flush line set and indoor coil.

THE FLUSHING PROCEDURE

1. Remove the existing R-22 refrigerant by selecting the appropriate procedure stated below.

If the unit is not operational, follow steps A-E.

- A. First, disconnect all power supply to the existing outdoor unit.
- B. Connect a clean refrigerant recovery cylinder and the refrigerant recovery machine to the existing unit according to the instructions provided with the recovery machine.

- C. Remove all R-22 refrigerant from the existing system.
- D. Check the gauges after shutdown to confirm all refrigerant has been completely removed from the entire system.
- E. Disconnect the liquid and vapor lines from the existing outdoor unit.

If the unit is operational, follow steps F- L.

- F. First, start the existing R-22 system in the cooling mode and close the liquid line valve.
 - G. Completely pump all existing R-22 refrigerant into the outdoor unit. It will be necessary to bypass the low pressure switch if the unit is so equipped to ensure that the refrigerant is completely evacuated.)
 - H. The low side system pressures will eventually reach 0 psig. When this happens, close the vapor line valve and immediately shut the outdoor unit off.
 - I. Check the gauges after shutdown to confirm that the valves are not allowing refrigerant to leak back into the low side of the system.
 - J. Disconnect power to the indoor furnace or air-handler to kill low voltage to the outdoor unit.
 - K. Disconnect the power supply wiring from the existing outdoor unit.
 - L. Unsweat the liquid and vapor lines from the existing outdoor unit.
2. Remove the existing outdoor unit.
 3. Set the new HFC-410A unit in place and braze the liquid and vapor lines to the unit connections. Connect the low voltage and line voltage to the new outdoor unit. Do not turn on power supply to the unit and do not open the outdoor unit service valves at this time.
 4. The indoor coil can be left in place for the flushing process or removed.

Refrigeration Installation, Cont'd.

5. If the indoor coil is removed, the suction and liquid line must be connected together on the indoor coil end. See illustration for recommended method for connecting these together.
6. If the indoor coil is left in place during flushing, removing the existing refrigerant flow control orifice or thermal expansion valve prior to flushing is highly recommended to assure proper flushing. Use a field-provided fitting or piece of copper tubing to reconnect the lines where the thermal expansion valve was removed.
7. Remove the pressure tap valve cores from the outdoor unit's service valves.
8. Connect an R-22 cylinder of clean R-22 refrigerant to the vapor service valve. (See "Required Equipment Section" for minimum required amount of R-22 for adequate flushing.)
9. Connect the low pressure side of an R-22 gauge set to the liquid line valve.
10. Connect a hose from the recovery machine with an empty recovery drum to the common port of the gauge set.
11. Set the recovery machine for liquid recovery and start the machine.
12. Open the gauge set low side valve. This will allow the recovery machine to pull a vacuum on the existing system line set.
13. Make sure to invert the cylinder of clean R-22 refrigerant and open the cylinder's valve to allow liquid refrigerant to flow into the system through the vapor line valve. (This should allow the refrigerant to flow from the cylinder and through the line set before it enters the recovery machine.) The cylinder should not be inverted if it is the type with separate liquid and vapor valves. Use the liquid valve on the cylinder in this case, keeping the cylinder upright.


14. Once the liquid refrigerant has been completely recovered, switch the recovery machine to vapor recovery so that the R-22 vapor can be completely recovered.

IMPORTANT! Always remember, every time the system is flushed you must always pull a vacuum with a recovery machine on the system at the end of each procedure. (If desired, a second flushing with clean refrigerant may be performed if insufficient amounts of mineral oil were removed during the initial flush.)

15. Tightly close the valve on the inverted R-22 cylinder and the gauge set valves.
16. Completely pump all remaining R22 refrigerant out of the recovery machine and turn the machine off.
17. Before removing the recovery machine, R-22 refrigerant cylinder and gauges, break the vacuum on the refrigerant lines and indoor coil using dry-nitrogen.
18. Unsweat the liquid and vapor lines from the old indoor coil or from each other and install a new matched HFC-410A indoor coil, connecting the flushed refrigerant lines to the new coil using field supplied connectors and tubing.
19. Reinstall pressure tap valve cores into unit service valves.
20. Pressurize the lines and coil and check for leaks in the line set connection points using a soap solution.
21. Thoroughly evacuate the line set and indoor coil per the instructions found in this manual.
22. Open the liquid and vapor service valves, releasing the HFC-410A refrigerant contained in the outdoor unit into the evacuated line set and indoor coil.
23. Energize the system and adjust the refrigerant charge according to the charging procedures found in this manual.

ALTERNATE METHOD

ORIGINAL LIQUID LINE OR
LIQUID LINE EXTENSION
WITH 180° BEND

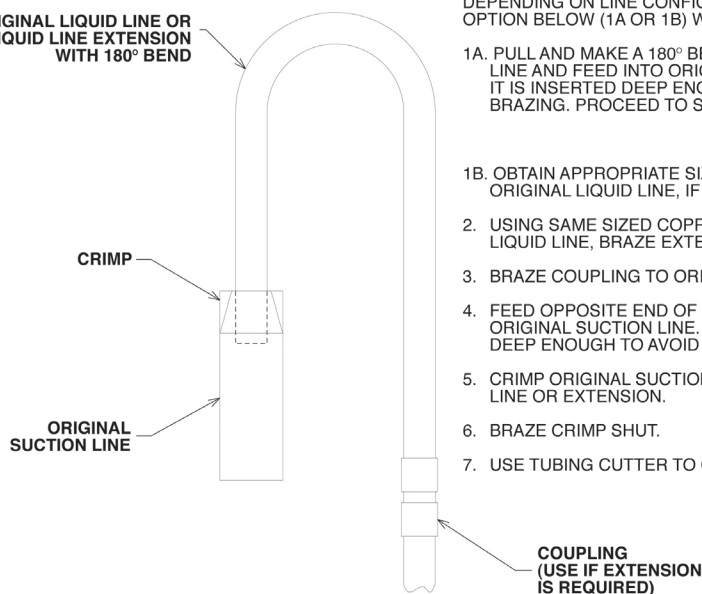

DEPENDING ON LINE CONFIGURATION, CHOOSE THE APPROPRIATE OPTION BELOW (1A OR 1B) WHICH BEST FITS THE SYSTEM.

- 1A. PULL AND MAKE A 180° BEND IN THE ORIGINAL LIQUID LINE AND FEED INTO ORIGINAL SUCTION LINE. MAKE SURE IT IS INSERTED DEEP ENOUGH TO AVOID PLUGGING DURING BRAZING. PROCEED TO STEP 5.

OR

- 1B. OBTAIN APPROPRIATE SIZED COUPLING FOR ORIGINAL LIQUID LINE, IF EXTENSION IS REQUIRED.
2. USING SAME SIZED COPPER TUBING AS THE ORIGINAL LIQUID LINE, BRAZE EXTENSION TO COUPLING.
3. BRAZE COUPLING TO ORIGINAL LIQUID LINE.
4. FEED OPPOSITE END OF LIQUID LINE EXTENSION INTO ORIGINAL SUCTION LINE. MAKE SURE IT IS INSERTED DEEP ENOUGH TO AVOID PLUGGING DURING BRAZING.
5. CRIMP ORIGINAL SUCTION LINE ONTO ORIGINAL LIQUID LINE OR EXTENSION.
6. BRAZE CRIMP SHUT.
7. USE TUBING CUTTER TO CUT TUBES.

Refrigeration Installation, Cont'd.

FP2 Sensor Installation

SENSOR INSTALLATION

An LT2 air coil low temperature protection sensor is factory installed on the TAH air handler and is available as an option for the TAC cased coils. Install the LT2 sensor on the cased coil as indicated in Figure 15 of this manual using thermal compound and the supplied mounting clip. Ensure that the sensor makes good thermal contact and insulate the sensor. Optional LT2 sensor kit may be ordered using part number S17S0031N12.

Air coil low temperature protection will not be active if this sensor is installed incorrectly or is not installed.

ADD-ON HEAT PUMP APPLICATIONS

The indoor coil should be located in the supply side of the furnace to avoid condensation damage to the furnace heat exchanger for add-on heat pump applications. A high temperature limit switch should be installed as shown in Figure 16b just upstream of the coil to de-energize the compressor any time the furnace is energized to avoid blowing hot air directly into the coil, elevating refrigerant pressures during operation. The heat pump will trip out on high pressure lockout without some method of disengaging the compressor during furnace operation. Alternatively, some thermostats with "dual fuel" mode will automatically de-energize the compressor when second stage (backup) heat is required.

NOTICE! To obtain maximum performance of a newly manufactured air coil it should be cleaned before start-up. A 10% solution of dishwasher detergent and water is recommended for both sides of the coil. A thorough water rinse should follow.

Evacuation and Charging the Unit

LEAK TESTING

The refrigeration line set must be pressurized and checked for leaks before evacuating and charging the unit. To pressurize the line set, attach refrigerant gauges to the service ports and add an inert gas (nitrogen or dry carbon dioxide) until pressure reaches 60-90 psig [413-620 kpa]. Never use oxygen or acetylene to pressure test. Use a halogen leak tester or a good quality bubble solution to detect leaks on all connections made in the field. Check the service valve ports and stem for leaks. If a leak is found, repair it and repeat the above steps. For safety reasons do not pressurize system above 150 psig [1034 kpa]. System is now ready for evacuation and charging.

Turn service valves full out CCW (see Table 8) and then turn back in one-half turn to open service ports. Add the required refrigerant so that the total charge calculated for the unit and line set is now in the system. Open the service valve fully counter clockwise so that the stem will backseat and

prevent leakage through the Schrader port while it is not in use. Start unit in the heating mode and measure superheat and subcooling values after 5 minutes of run time. See Tables 17a-d for superheat and sub-cooling values. Superheat is measured using suction temperature and pressure at the compressor suction line. Subcooling should be measured using the liquid line temperature immediately outside the compressor section cabinet and either the liquid line service valve pressure or the compressor discharge pressure. Note that different values from Tables 17a-d will be obtained due to the pressure losses through the condenser heat exchanger. Adding refrigerant will increase sub-cooling while superheat should remain fairly constant allowing for a slight amount of hunting in TXV systems. This increase in subcooling will require 5 minutes or so of operation before it should be measured. After values are measured, compare to the chart and go to "FINAL EVALUATION."

PARTIAL CHARGE METHOD

Open service valve fully counterclockwise and then turn back in one-half turn to open service port. Add vaporized (Gas) into the suction side of the compressor until the pressure in the system reaches approximately 100-120 psig [689-827 kpa]. Never add liquid refrigerant into the suction side of a compressor. Start the unit in heating and add gas to the suction port at a rate not to exceed five pounds [2.27 kg] per minute. Keep adding refrigerant until the complete charge has been entered. Superheat is measured using suction temperature and pressure at the compressor suction line. Subcooling should be measured using the liquid line temperature immediately outside the compressor section cabinet and either the liquid line service valve pressure or the compressor discharge pressure. Note that different values from Tables 17a-d will be obtained due to the pressure losses through the condenser heat exchanger. Adding refrigerant will increase sub-cooling while superheat should remain fairly constant allowing for a slight amount of hunting in TXV systems. This increase in subcooling will require 5 minutes or so of operation before it should be measured. After values are measured, compare to the chart and go to "FINAL EVALUATION."

FINAL EVALUATION

In a split system, cooling subcooling values can be misleading depending on the location of the measurement. Therefore, it is recommended that charging be monitored in the heating mode. Charge should be evaluated by monitoring the subcooling in the heating mode. After initial check of heating sub-cooling, shut off unit and allow to sit 3-5 minutes until pressures equalize. Restart unit in the cooling mode and check the cooling superheat against Tables 17a-d. If unit runs satisfactorily, charging is complete. If unit does not perform to specifications the cooling TXV (air coil side) may need to be readjusted (if possible) until the cooling superheat values are met.

Refrigeration Installation, Cont'd.

Checking Superheat and Subcooling

DETERMINING SUPERHEAT

1. Measure the temperature of the suction line at a point near the expansion valve bulb.
2. Determine the suction pressure by attaching refrigeration gauges to the suction Schrader connection at the compressor.
3. Convert the pressure obtained in step 2 to saturation temperature (boiling point) by using the pressure/temperature conversion table on the gauge set.
4. Subtract the temperature obtained in step 3 from step 1. The difference will be the superheat of the unit or the total number of degrees above saturation temperature. Refer to Tables 17a-d for superheat ranges at specific entering water conditions.

EXAMPLE:

The temperature of the suction line at the sensing bulb is 50°F [10°C]. The suction pressure at the compressor is 110 psig [758 kpa] which is equivalent to 36°F [2°C] saturation temperature from the HFC-410A press/temp conversion table on the gauge set. 36°F [2°C] subtracted from 50°F [10°C] = 14°F [8°C] Superheat.

DETERMINING SUB-COOLING

1. Measure the temperature of the liquid line on the smaller refrigerant line (liquid line) just outside of the cabinet. This location will be adequate for measurement in both modes unless a significant temperature drop in the liquid line is anticipated.
2. Determine the condenser pressure (high side) by attaching refrigerant gauges to the Schrader connection on the liquid line service valve. If the hot gas discharge line of the compressor is used, refer to the appropriate column in Tables 17a-d.
3. Convert the pressure obtained in step 2 to the saturation temperature by using the press/temp conversion table on the gauge set.
4. Subtract the temperature of Step 3 from the temperature of Step 1. The difference will be the sub-cooling value for that unit (total degrees below the saturation temperature). Refer to Tables 17a-d for sub-cooling values at specific entering water temperatures.

EXAMPLE:

The condenser pressure at the service port is 335 psig [2310 kpa], which is equivalent to 104°F [40°C] saturation temperature. Discharge pressure is 365 psig [2517 kpa] at the compressor (109°F [43°C] saturation temperature). Measured liquid line temperature is 100°F [38°C]. 100°F [38°C] subtracted from 104°F [40°C] = 4°F [2°C] sub-cooling (9°F [5°C] if using the compressor discharge pressure).

Refrigeration Installation, Cont'd.

Figure 16a: Typical Split/Air Handler Installation


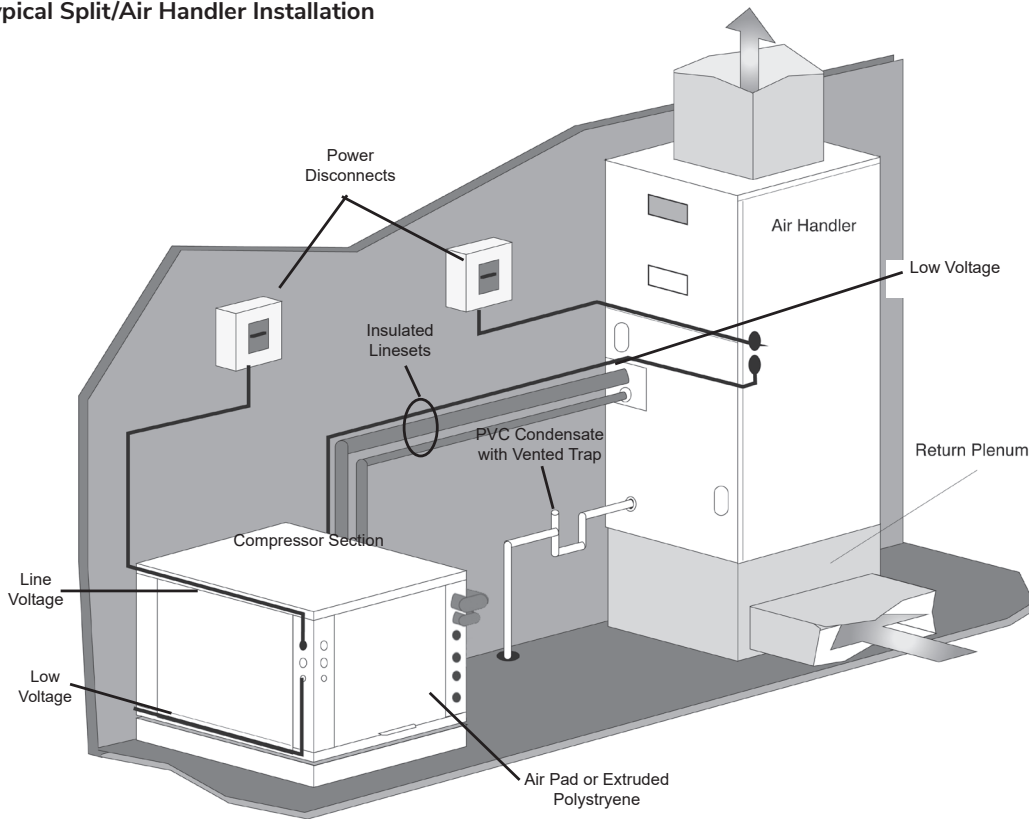


Figure 16b: Typical Split/Add-on Coil Fossil Fuel Furnace Installation

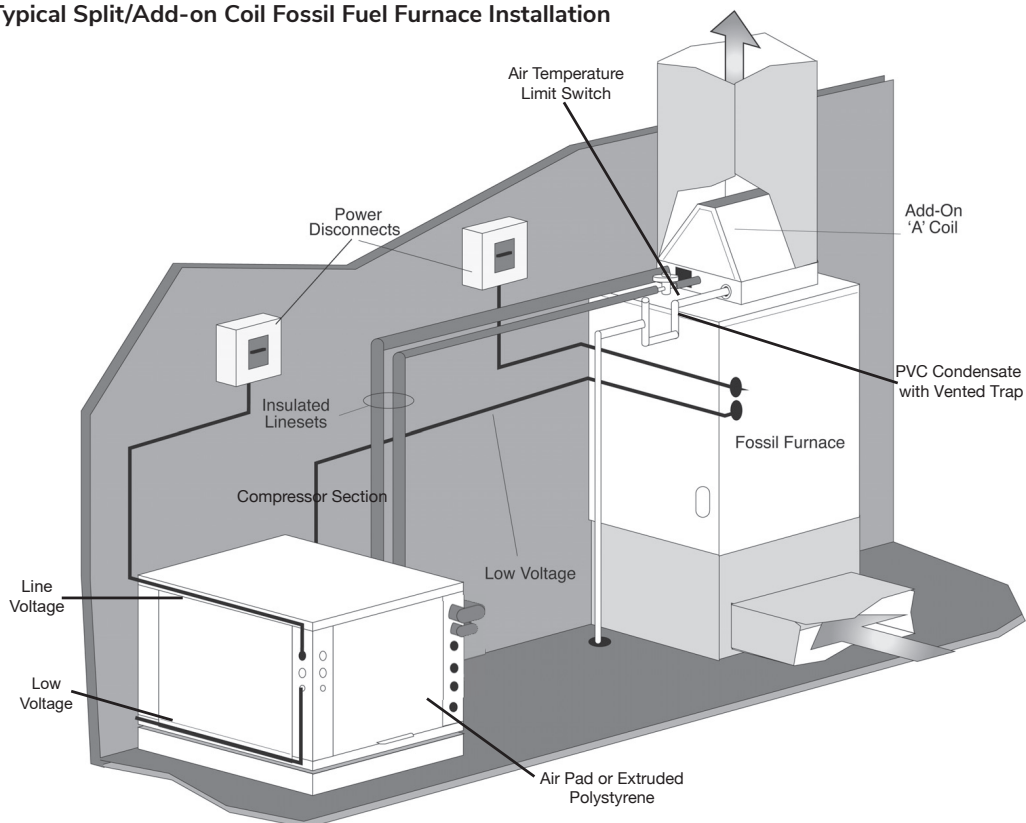


Refrigeration Installation, Cont'd.

EVACUATION OF THE LINESET AND COIL

The line set and coil must be evacuated to at least 500 microns to remove any moisture and noncondensables. Evacuate the system through both service ports in the shipping position (full CW in - see Table 8) to prevent false readings on the gauge because of pressure drop through service ports. A vacuum gauge or thermistor capable of accurately measuring the vacuum depth is crucial in determining if the system is ready for charging. If the system meets the requirements in Figure 17, it is ready for charging.

Figure 17: Evacuation Graph

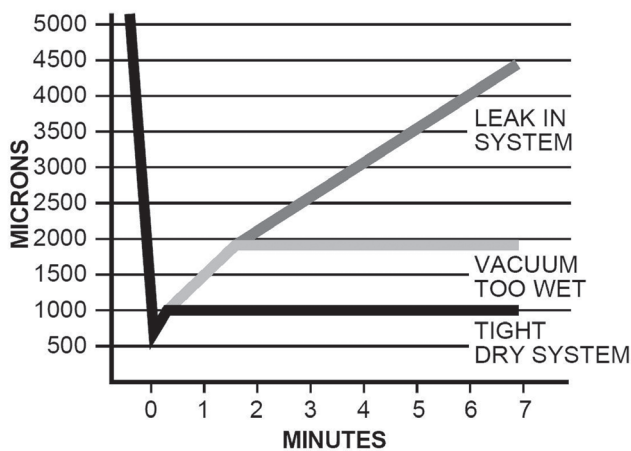

⚠ NOTICE! ⚠

NOTICE! Use Tables 17a-d for superheat/subcooling values. These tables use discharge pressure (converted to saturation temperature) and liquid line temperature for subcooling calculations. If using liquid line pressure, subtract 3°F from the table values.

CHARGING THE SYSTEM

There are two methods of charging a refrigerant system. One method is the total charge method, where the volume of the system is determined and the refrigerant is measured and added into the evacuated system. The other method is the partial charge method where a small initial charge is added to an evacuated system, and remaining refrigerant added during operation.

Total Charge Method - See Table 7 for the compressor section basic charge. For line sets with 3/8" liquid lines add 0.6 ounces of refrigerant to the basic charge for every installed foot of liquid line [0.6 grams per cm]. Add 1.2 oz. per foot [1.1 grams per cm] if using 1/2" line. Once the total charge is determined, the factory pre-charge (Table 7) is subtracted and the remainder is the amount needed to be added to the system. This method should be used with the AHRI matched air handler or cased coil.

Hot Water Generator


The HWG (Hot Water Generator) or desuperheater option provides considerable operating cost savings by utilizing excess heat energy from the heat pump to help satisfy domestic hot water requirements. The HWG is active throughout the year, providing virtually free hot water when the heat pump operates in the cooling mode or hot water at the COP of the heat pump during operation in the heating mode. Actual HWG water heating capacities are provided in the appropriate heat pump performance data.

Heat pumps equipped with the HWG option (indoor model only) include a built-in water to refrigerant heat exchanger that eliminates the need to tie into the heat pump refrigerant circuit in the field. The control circuit and pump are also built in for residential equipment. Figure 18 shows a typical example of HWG water piping connections on a unit with built-in circulating pump. This piping layout reduces scaling potential.

The temperature set point of the HWG is field selectable on DXM2.5 to 125°F or 150°F. The 150°F set point allows more heat storage from the HWG. For example, consider the amount of heat that can be generated by the HWG when using the 125°F set point, versus the amount of heat that can be generated by the HWG when using the 150°F set point.

In a typical 50 gallon two-element electric water heater the lower element should be turned down to 100°F, or the lowest setting, to get the most from the HWG. The tank will eventually stratify so that the lower 80% of the tank, or 40 gallons, becomes 100°F (controlled by the lower element). The upper 20% of the tank, or 10 gallons, will be maintained at 125°F (controlled by the upper element).

**Figure 18: Typical HWG Installation
(Indoor Compressor Section)**

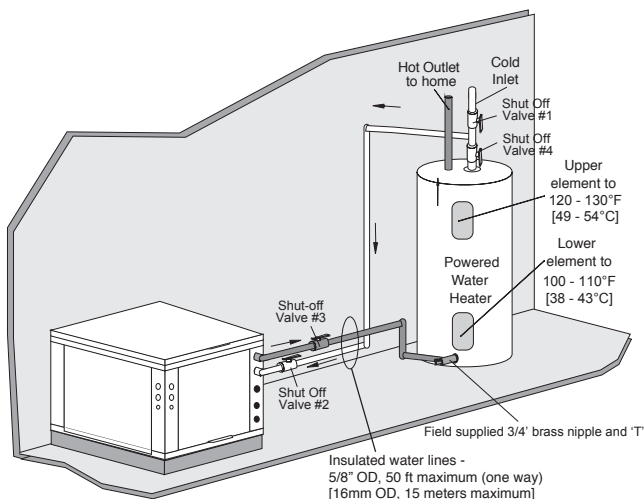

Using a 125°F set point, the HWG can heat the lower 40 gallons of water from 100°F to 125°F, providing up to 8,330 btu's of heat. Using the 150°F set point, the HWG can heat the same 40 gallons of water from 100°F to 150°F and the remaining 10 gallons of water from 125°F to 150°F, providing a total of up to 18,743 btu's of heat, or more than twice as much heat as when using the 125°F set point.

This example ignored standby losses of the tank. When those losses are considered the additional savings are even greater.

Electric water heaters are recommended. If a natural gas, propane, or oil water heater is used, a second preheat tank must be installed (Figure 19). If the electric water heater has only a single center element, the dual tank system is recommended to insure a usable entering water temperature for the HWG.


Typically a single tank of at least 52 gallons (235 liters) is used to limit installation costs and space. However, a dual tank, as shown in Figure 19, is the most efficient system, providing the maximum storage and temperate source water to the HWG.

It is always advisable to use water softening equipment on domestic water systems to reduce the scaling potential and lengthen equipment life. In extreme water conditions, it may be necessary to avoid the use of the HWG option since the potential cost of frequent maintenance may offset or exceed any savings. Consult Table 6 for scaling potential tests.

⚠ WARNING! ⚠

WARNING! A 150°F setpoint may lead to scalding or burns. The 150°F setpoint must only be used on systems that employ an approved anti-scald valve.

**Figure 19: HWG Double Tank Installation
(Indoor Compressor Section)**

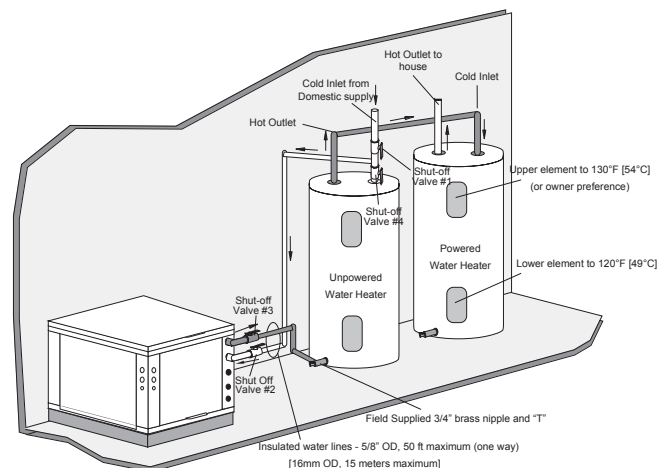

Hot Water Generator, Cont'd.

INSTALLATION

The HWG is controlled by two sensors and the DXM2.5 microprocessor control. One sensor is located on the compressor discharge line to sense the discharge refrigerant temperature. The other sensor is located on the HWG heat exchanger's "Water In" line to sense the potable water temperature.

⚠ WARNING! ⚠

WARNING! Under no circumstances should the sensors be disconnected or removed. Full load conditions can drive hot water tank temperatures far above safe temperature levels if sensors are disconnected or removed.

The DXM2.5 microprocessor control monitors the refrigerant and water temperatures to determine when to operate the HWG. The HWG will operate any time the refrigerant temperature is sufficiently above the water temperature. Once the HWG has satisfied the water heating demand during a heat pump run cycle, the controller will cycle the pump at regular intervals to determine if an additional HWG cycle can be utilized.

When the control is powered and the HWG pump output is active for water temperature sampling or HWG operation, the DXM2.5 status LED will slowly flash (On 1 second, Off 1 second).

If the control has detected a HWG fault, the DXM2.5 status LED will flash a numeric fault code as follows:


High Water Temperature (> 160°F)	5 flashes
Hot Water Sensor Fault	6 flashes
Compressor Discharge Sensor Fault	6 flashes

Fault code flashes have a duration of 0.3 seconds with a 10 second pause between fault codes. For example, a "Compressor Discharge sensor fault" will be six flashes 0.3 seconds long, then a 10 second pause, then six flashes again, etc.

⚠ WARNING! ⚠

WARNING! Using a 150°F setpoint on the HWG will result in water temperatures sufficient to cause severe physical injury in the form of scalding or burns, even when the hot water tank temperature setting is visibly set below 150°F. The 150°F HWG setpoint must only be used on systems that employ an approved anti-scald valve (part number AVAS4) at the hot water storage tank with such valve properly set to control water temperatures distributed to all hot water outlets at a temperature level that prevents scalding or burns.

Figure 20a: Anti-Scald Valve Piping Connections

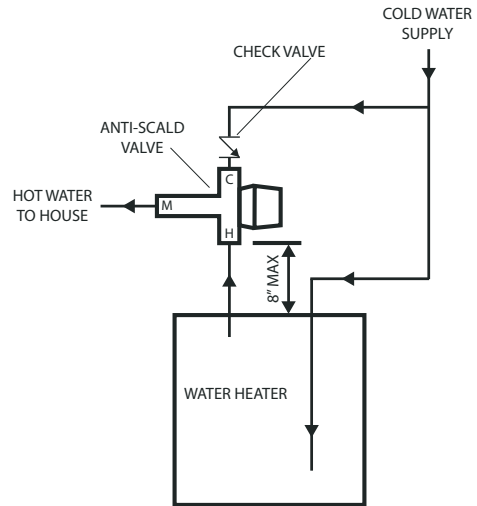

Hot Water Generator settings are determined by DIP switches 3-2, 3-3, and 3-4.

DIP 3-2 controls the HWG Test Mode. It provides for forced operation of the HWG output, activating the HWG pump for up to five minutes.

ON = HWG test mode, OFF = normal HWG operation.

The control will revert to standard operation after five minutes regardless of switch position.

DIP 3-3 determines HWG set point temperature. It provides for selection of the HWG operating set point.


ON = 150°F (66°C), OFF = 125°F (52°C).

DIP 3-4 is for the HWG status. It provides HWG operation control.

ON = HWG mode enabled, OFF = HWG mode disabled.

Units are shipped from the factory with this switch in the OFF position.

Figure 20b: Hot Water Generator Settings

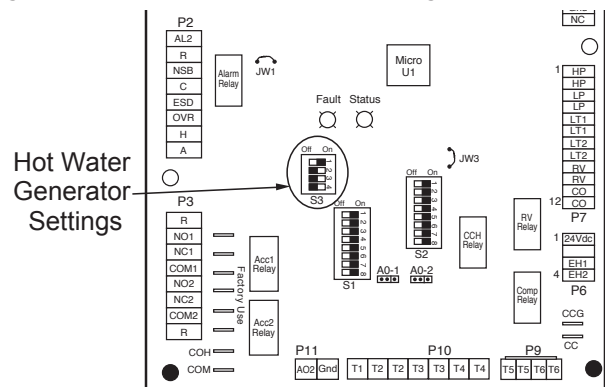

Hot Water Generator: For Indoor and Outdoor Compressor Section Only

WARNING! The HWG pump is fully wired from the factory. Use extreme caution when working around the microprocessor control as it contains line voltage connections that presents a shock hazard that can cause severe injury or death!

The heat pump, water piping, pump, and hot water tank should be located where the ambient temperature does not fall below 50°F [10°C]. Keep water piping lengths at a minimum. DO NOT use a one way length greater than 50 ft. (one way) [15 m]. See Table 9 for recommended piping sizes and maximum lengths.

All installations must be in accordance with local codes. The installer is responsible for knowing the local requirements, and for performing the installation accordingly. DO NOT energize the pump until “water tank refill” section, below is completed. Powering the pump before all installation steps are completed may damage the pump.

WATER TANK PREPARATION

1. Turn off power or fuel supply to the hot water tank.
2. Connect a hose to the drain valve on the water tank.
3. Shut off the cold water supply to the water tank.
4. Open the drain valve and open the pressure relief valve or a hot water faucet to drain tank.
5. When using an existing tank, it should be flushed with cold water after it is drained until the water leaving the drain hose is clear and free of sediment.
6. Close all valves and remove the drain hose.
7. Install HWG water piping.

HWG WATER PIPING

1. Using at least 5/8" [16 mm] O.D. copper, route and install the water piping and valves as shown in Figures 18 or 19. Install an approved anti-scald valve if the 150°F HWG setpoint is or will be selected. An appropriate method must be employed to purge air from the HWG piping. This may be accomplished by flushing water through the HWG (as in Figures 18 and 19) or by installing an air vent at the high point of the HWG piping system.
2. Insulate all HWG water piping with no less than 3/8" [10 mm] wall closed cell insulation.
3. Open both shut off valves and make sure the tank drain valve is closed.

WATER TANK REFILL

1. Close valve #4. Ensure that the HWG valves (valves #2 and #3) are open. Open the cold water supply (valve #1) to fill the tank through the HWG piping. This will purge air from the HWG piping.
2. Open a hot water faucet to vent air from the system until water flows from faucet; turn off faucet. Open valve #4.
3. Depress the hot water tank pressure relief valve handle to ensure that there is no air remaining in the tank.
4. Inspect all work for leaks.
5. Before restoring power or fuel supply to the water heater, adjust the temperature setting on the tank thermostat(s) to insure maximum utilization of the heat

available from the refrigeration system and conserve the most energy. On tanks with both upper and lower elements and thermostats, the lower element should be turned down to 100°F [38°C] or the lowest setting; the upper element should be adjusted to 120-130°F [49-54°C]. Depending upon the specific needs of the customer, you may want to adjust the upper element differently. On tanks with a single thermostat, a preheat tank should be used (Figure 19).

6. Replace access cover(s) and restore power or fuel supply.

INITIAL START-UP

1. Make sure all valves in the HWG water circuit are fully open.
2. Turn the heat pump power and remote HWG power “on” and switch dip switch DIP 3.4 on the HWG controller to the “on” (enabled) position to activate the HWG.
3. The HWG pump should not run if the compressor is not running.
4. The temperature difference between the water entering and leaving the HWG should be approximately 5-10°F [3-6°C].
5. Allow the unit to operate for 20 to 30 minutes insure that it is functioning properly.
6. Always turn dip switch DIP 3.4 on the HWG controller to the “off” (disabled) position to deactivate the HWG when servicing the outdoor compressor section.

Table 9: HWG Water Piping Size and Length

Unit Nominal Tonnage	Nominal HWG Flow (gpm)	1/2" Copper (max length*)	3/4" Copper (max length*)
1.5	0.6	50	-
2.0	0.8	50	-
2.5	1.0	50	-
3.0	1.2	50	-
3.5	1.4	50	-
4.0	1.6	45	50
5.0	2.0	25	50
6.0	2.4	10	50

*Maximum length is equivalent length (in feet) one way of type L copper.

CAUTION!

CAUTION! Use only copper piping for HWG piping due to the potential of high water temperatures for water that has been in the HWG heat exchanger during periods of no-flow conditions (HWG pump not energized). Piping other than copper may rupture due to high water temperature and potable water pressure.

Hot Water Generator Module Refrigeration Installation: For Outdoor Compressor Section Only

GENERAL INFORMATION

The HWG Module consists of an all-copper, vented double wall heat exchanger and a water-cooled water circulating pump. The pump is controlled by a microprocessor in the HWG module. Power for the pump is provided from a remote 115 vac power source.

LOCATION/MOUNTING

The HWG module should be mounted as close to the heat pump outdoor section as possible, in order to minimize the length of refrigerant run. Indoor mounting is preferred, where practical, to reduce the likelihood of freezing ambient temperature. It is recommended that the HWG module be mounted above the system compressor in order to promote proper oil movement and drain-down. This means that the HWG module can be wall mounted in any orientation except for stubs up. Mounting should be accomplished by fastening the HWG module cabinet to the wall or other selected vertical surface. Mounting holes are provided at the rear of the unit. Any fastener suitable for supporting a 12 pound [5.4] vertical load is acceptable.

The HWG, water piping and hot water tank should be located where the ambient temperature does not fall below 50°F [10°C]. Keep water piping lengths at a minimum. DO NOT use a one-way length greater than 50 ft. (one way) [15 m]. See Table 9 for maximum water piping lengths.

All installations must be in accordance with local codes. The installer is responsible for knowing the local requirements, and for performing the installation accordingly.

SPECIAL NOTE: The selected mounting location and orientation must allow the circulator pump to be positioned with the motor shaft horizontal. **DO NOT install the Heat Recovery Unit flat on its back.**

REFRIGERANT LINE INSTALLATION

Before starting the installation into the refrigerant circuit, inspect and note the condition and performance of the heat pump. Disconnect power to the heat pump outdoor unit. Any system deficiencies must be corrected prior to installing the HWG module. Addition of the unit will not correct system problems. Record the suction and discharge pressures and compressor amperage draw. These will be used for comparison with system operation after the refrigerant line installation is complete and before the water line installation is performed.

INSTALL THE ADD-ON HWG KIT

Locate the HWG as close to the water heater as possible. Install the lineset to the desuperheater valves in the outdoor compressor section and the refrigerant line connections on the HWG. Maximum length should be 30 feet one way. Evacuate the lineset to 500 microns through the hot gas valves in the outdoor unit. Open the HWG valves in the compressor section up fully (and close the desuperheater bypass valve). See Figures 21a-d. Check the lineset for leaks. Verify that lineset tubing is completely insulated with

a minimum 1/2" thick closed cell and painted to prevent deterioration of the insulation due to ultra violet light and weather. Make the connections with high temperature solder or brazing rod. The recommended refrigerant line size is dependent on the one way distance between the Heat Recovery Unit and the compressor; and the size of the system. Use Table 10 as a guideline.

WIRING

Refer to Wire Diagrams for Remote HWG Wiring.

NOTICE! Make sure the compressor discharge line is connected to the "Hot Gas In" stub on the Heat Recovery Unit.

WARNING!

WARNING! The HWG module is an appliance that operates in conjunction with the heat pump system, the hot water system and the electrical system. Installation should only be performed by skilled technicians with appropriate training and experience. The installation must be in compliance with local codes and ordinances. Local plumbing and electrical building codes take precedence over instructions contained herein. The Manufacturer accepts no liability for equipment damaged and/or personal injury arising from improper installation of the HWG module.

CAUTION!

CAUTION! The HWG module must be installed in an area that is not subject to freezing temperatures.

CAUTION!

CAUTION! Locate Refrigerant lines to avoid accidental damage by lawn mowers or children.

Hot Water Generator Module Refrigeration Installation: For Outdoor Compressor Section Only, Cont'd.

Figure 21a: Outdoor Compressor Section HWG Installation

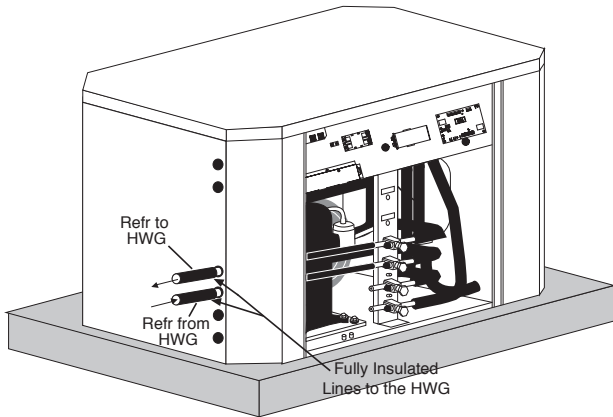


Figure 21d: HWG Service Valves

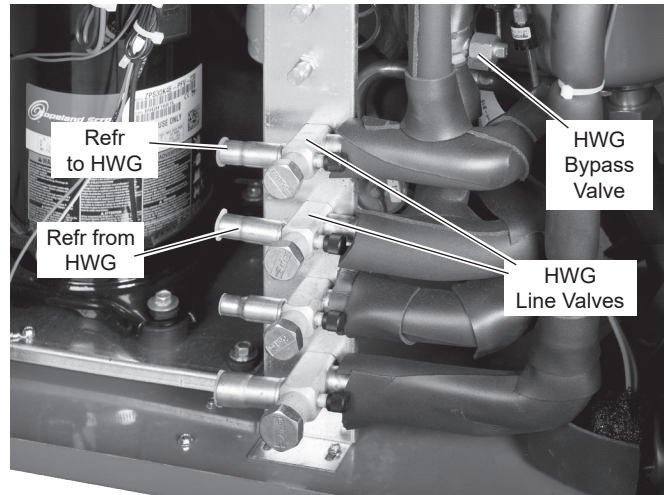


Figure 21b: Remote HWG Module


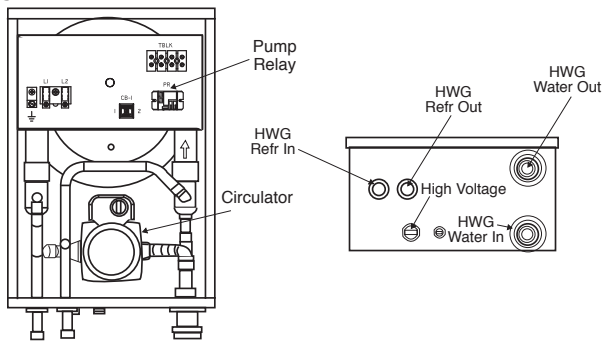


Table 10: HWG Refrigerant Line Sizing

Capacity	Line Set Size		
	1/2" OD	5/8" OD	3/4" OD
2 Ton	Up to 16 ft. [4.9 m]	Up to 30 ft. [9.1 m]	N/A
3 Ton	Up to 9 ft. [2.7 m]	Up to 25 ft. [7.6 m]	Up to 30 ft. [9.1 m]
4 Ton	Up to 5 ft. [1.5 m]	Up to 13 ft. [4.0 m]	Up to 30 ft. [9.1 m]
5 Ton	N/A	Up to 9 ft. [2.7 m]	Up to 25 ft. [7.6 m]

Figure 21c: HWG Bypass Valve

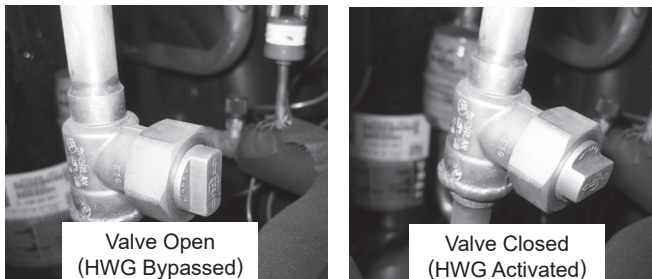

Electrical – Line Voltage

⚠ WARNING! ⚠

WARNING! To avoid possible injury or death due to electrical shock, open the power supply disconnect switch and secure it in an open position during installation.

⚠ CAUTION! ⚠

CAUTION! Use only copper conductors for field installed electrical wiring. Unit terminals are not designed to accept other types of conductors.

ELECTRICAL – LINE VOLTAGE

All field installed wiring, including electrical ground, must comply with the National Electrical Code as well as all applicable local codes. Refer to the unit electrical data for fuse sizes. Consult wiring diagram for field connections that must be made by the installing (or electrical) contractor.

All final electrical connections must be made with a length of flexible conduit to minimize vibration and sound transmission to the building.

Table 11a: Electrical Data (TES Standard or w/Modulating Valve)

Model	Compressor			HWG FLA	Total Unit FLA	Min Circuit Amps	Max Fuse/HACR
	RLA	LRA	QTY				
026	11.7	58.3	1	0.5	12.2	15.1	25
038	15.3	83.0	1	0.5	15.8	19.6	30
049	21.2	104.0	1	0.5	21.7	27.0	45
064	27.1	152.9	1	0.5	27.6	34.3	60

Rated Voltage of 208/230/60/1
All fuses Class RK-5

Min/Max Voltage of 197/252

Table 11b: Electrical Data (TES w/High Head Flow Controller)

Model	Compressor			Loop Pump FLA	Total Unit FLA	Min Circuit Amps	Max Fuse/HACR
	RLA	LRA	QTY				
026	11.7	58.3	1	1.44	13.1	16.1	25
038	15.3	83.0	1	1.44	16.7	20.6	35
049	21.2	104.0	1	1.44	22.6	27.9	45
064	27.1	152.9	1	1.44	28.5	35.3	60

Rated Voltage of 208/230/60/1
All fuses Class RK-5

Min/Max Voltage of 197/252

Table 11c: Electrical Data (TES w/Standard Head Flow Controller)

Model	Compressor			HWG Pump FLA	Loop Pump FLA	Total Unit FLA	Min Circuit Amps	Max Fuse/HACR
	RLA	LRA	QTY					
026	11.7	58.3	1	0.5	0.7	12.9	15.8	25
038	15.3	83.0	1	0.5	0.7	16.5	20.3	35

Rated Voltage of 208/230/60/1
All fuses Class RK-5

Min/Max Voltage of 197/252

GENERAL LINE VOLTAGE WIRING

Be sure the available power is the same voltage and phase shown on the unit serial plate. Line and low voltage wiring must be done in accordance with local codes or the National Electric Code, whichever is applicable.

POWER CONNECTION

Line voltage connection is made by connecting the incoming line voltage wires to the "L" side of the contactor as shown in Figures 18 and 19. Consult Tables 11a-f for correct fuse size.

208/230 VOLT OPERATION

Verify transformer tap with air handler wiring diagram to ensure that the transformer tap is set to the correct voltage, 208V or 230V.

Table 11d: Electrical Data (TEP w/High Head Flow Controller)

Model	Compressor			Loop Pump FLA	Total Unit FLA	Min Circuit Amps	Max Fuse/HACR
	RLA	LRA	QTY				
026	11.7	58.3	1	1.44	13.1	16.1	25
038	15.3	83.0	1	1.44	16.7	20.6	35
049	21.2	104.0	1	1.44	22.6	27.9	45
064	27.1	152.9	1	1.44	28.5	35.3	60

Rated Voltage of 208/230/60/1
All fuses Class RK-5

Min/Max Voltage of 197/252

Table 11e: Electrical Data (TEP w/Standard Head Flow Controller)

Model	Compressor			Loop Pump FLA	Total Unit FLA	Min Circuit Amps	Max Fuse/HACR
	RLA	LRA	QTY				
026	11.7	58.3	1	0.7	12.4	15.3	25
038	15.3	83.0	1	0.7	16.0	19.8	35

Rated Voltage of 208/230/60/1
All fuses Class RK-5

Min/Max Voltage of 197/252

Table 11f: Electrical Data – Hot Water Generator

HWG Module	Voltage	Pump FLA	Total FLA	Min Circuit Amps
AHWG1AARS	115/60/1	0.52	0.52	1.20
AHWG1AGRS	208/230/60/1	0.40	0.40	0.90

Electrical – Power Wiring

Figure 22: Indoor Compressor Section (TES) Line Voltage Field Wiring


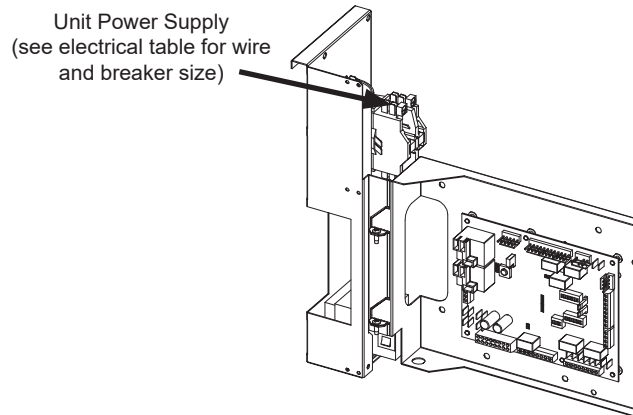


Figure 23: Outdoor Compressor Section (TEP) Line Voltage Field Wiring

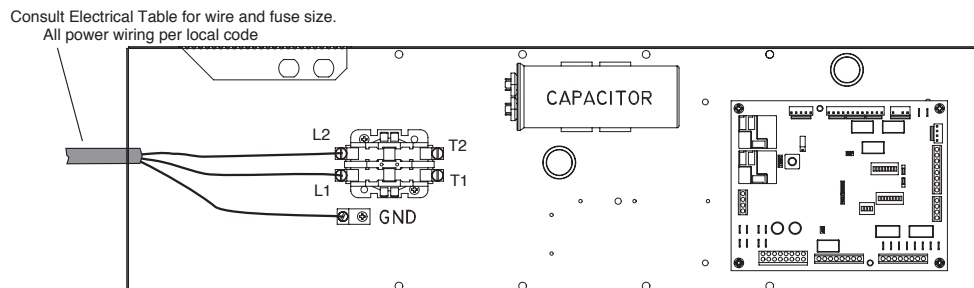

ELECTRICAL – HWG WIRING

208-230 VOLT OPERATION

Verify transformer tap with air handler wiring diagram to insure that the transformer tap is set to the correct voltage, 208V or 230V.


See wire diagrams for 115 and 230V.

HWG MODULE WIRING – FOR “OUTDOOR” COMPRESSOR SECTION

The HWG module should be wired to a 115 vac power supply as shown in the wire diagrams. A safety disconnect should be installed at the HWG module as required by code to allow servicing of the module. DO NOT energize the pump until all HWG piping is completed and air is purged from the water piping to avoid running the pump “dry”.

Electrical – Low Voltage Wiring


Figure 24: TES Low Voltage Field Wiring

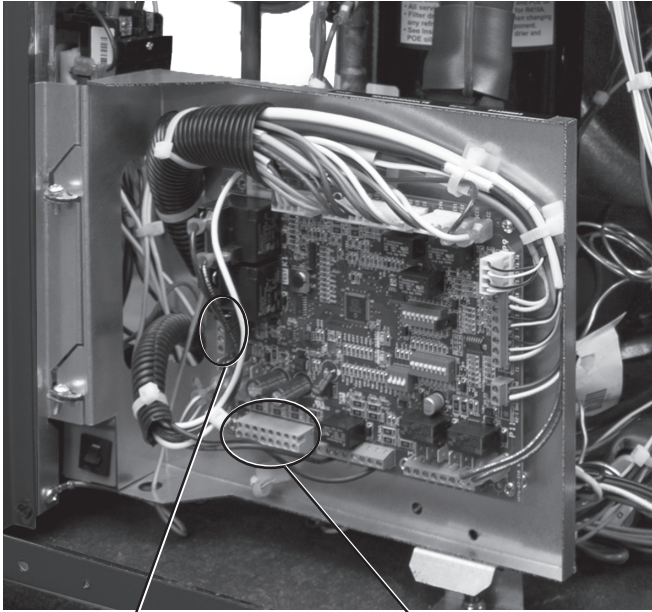

Low Voltage Field Wiring
When Using Tranquility
Digital Air Handler

Low Voltage Field Wiring
When Using Non-Communicating
Air Handler or Furnace

Figure 25: TEP Low Voltage Field Wiring

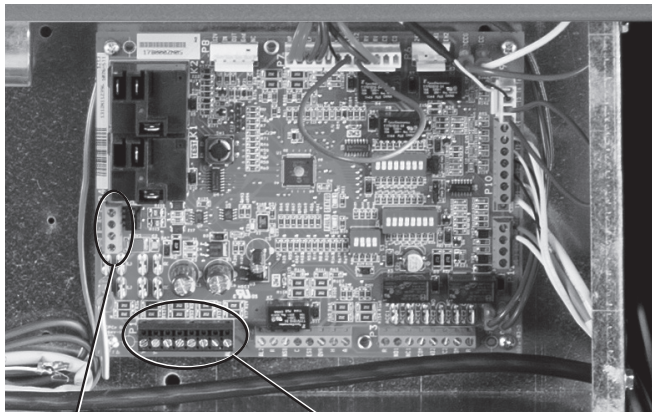


Low Voltage Field Wiring
When Using Tranquility
Digital Air Handler

Low Voltage Field Wiring
When Using Non-Communicating
Air Handler or Furnace

CONNECTION TO AWC COMMUNICATING THERMOSTAT AND AXM COMMUNICATING CONTROL IN TRANQUILITY DIGITAL AIR HANDLER

AXM control in Tranquility Digital Air Handler allows 4-wire connection with Communicating DXM2.5 board and AWC Communicating Thermostat.

Figure 26a: Connection to iGate® 2 Communicating Thermostat and AXM Communicating Control in Tranquility Digital Air Handler

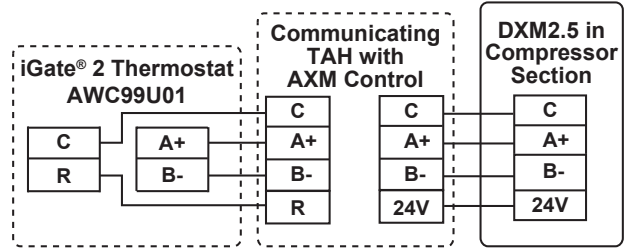


Thermostat Connections

- C 24V Common for Control Circuit
- R 24V Supply for Control Circuit
- A+ Communications (Positive)
- B- Communications (Negative)

NOTE: 4-wire connections can ONLY be used when communicating air handler and iGate 2 Communicating Thermostat is used. Thermostat can be connected either to the air handler (AXM) control or compressor section (DXM2.5) control, when all are communicating.


Figure 26b: Connection to Non-Communicating Thermostat and AXM Communicating Control in Tranquility Digital Air Handler

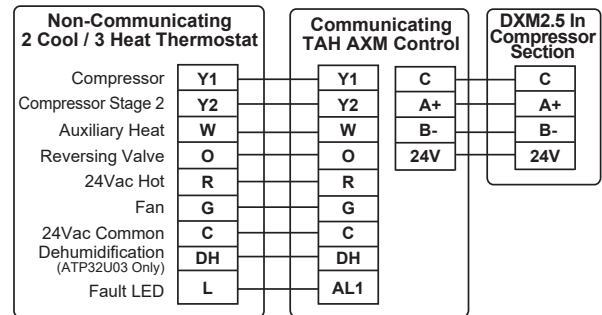

When a non-communicating thermostat will be used to control the system a ClimateMaster AWC Communicating Thermostat must be connected so that proper system communications and operation are maintained. The AWC Communicating Thermostat may be installed at an inconspicuous location near the air handler and wired to the TB1 terminal strip of the AXM control board. The AWC Communicating Thermostat should be set to the OFF mode.

Electrical – Thermostat Wiring

Figure 26c: Connection to non-Communicating Thermostat and Non-communicating Air Handler/Furnace

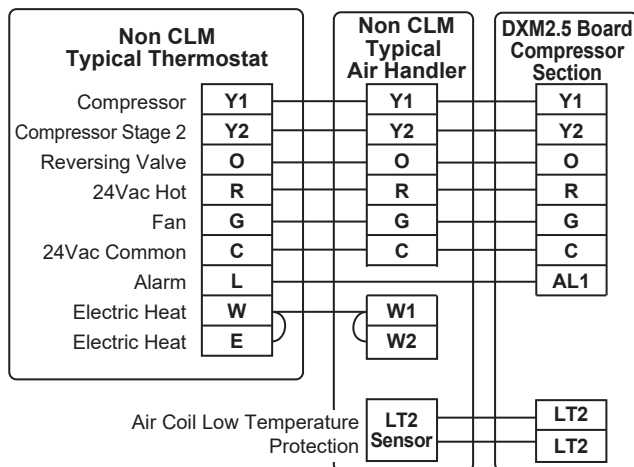


NOTE: Air coil low temperature protection will not be active if LT2 sensor is not installed or is not installed correctly.

LT2 SENSOR

An LT2 air coil low temperature protection sensor is factory installed on the TAH air handler and is available as an option for the TAC cased coils. Install the LT2 sensor on the cased coil as indicated in Figure 15 of this manual using thermal compound and the supplied mounting clip. Ensure that the sensor makes good thermal contact and insulate the sensor. Optional LT2 sensor kit may be ordered using part number S17S0031N12.

Mount the LT2 sensor to the cased coil. On the DXM2.5 in the compressor section, clip the VIO wires (see diagram) and wire the violet leads from LT2 sensor to the violet leads clipped on the DXM2.5 board.

Figure 27: DXM2.5 LT2 VIO Connection

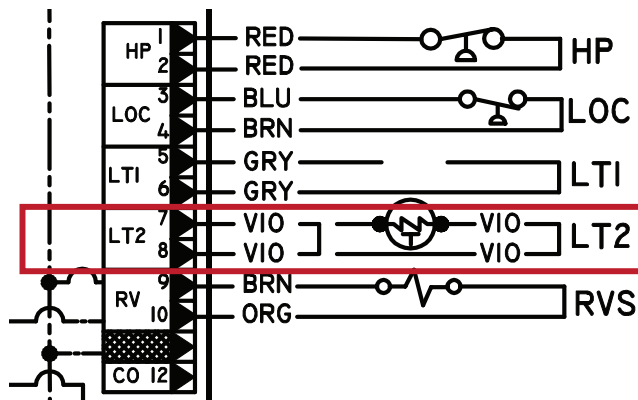

THERMOSTAT INSTALLATION

The thermostat should be located on an interior wall in a larger room, away from supply duct drafts. DO NOT locate the thermostat in areas subject to sunlight, drafts or on external walls. The wire access hole behind the thermostat may in certain cases need to be sealed to prevent erroneous temperature measurement due to air infiltration through the wall cavity. Thermostat wire must be 18 AWG or larger wire. Wire the appropriate thermostat as shown in Figures 26a-c. Practically any heat pump thermostat will work with these units, provided it has the correct number of heating and cooling stages. However, using the AWC Communicating Thermostat is highly recommended for on-site, easier configuration, monitoring and diagnosis.

⚠ CAUTION! ⚠

CAUTION! Refrigerant pressure activated water regulating valves should never be used with ClimateMaster equipment.

⚠ CAUTION! ⚠

CAUTION! If communicating thermostat is not installed, a communicating service tool must be used to configure and diagnose this system.


Controls – DXM2.5




DXM2.5 Controls

For detailed control information, see the DXM2.5 Application, Operation, and Maintenance (AOM) manual (part # 97B0142N01).

115V Hot Water Generator Wiring Diagram – 96B0141N11

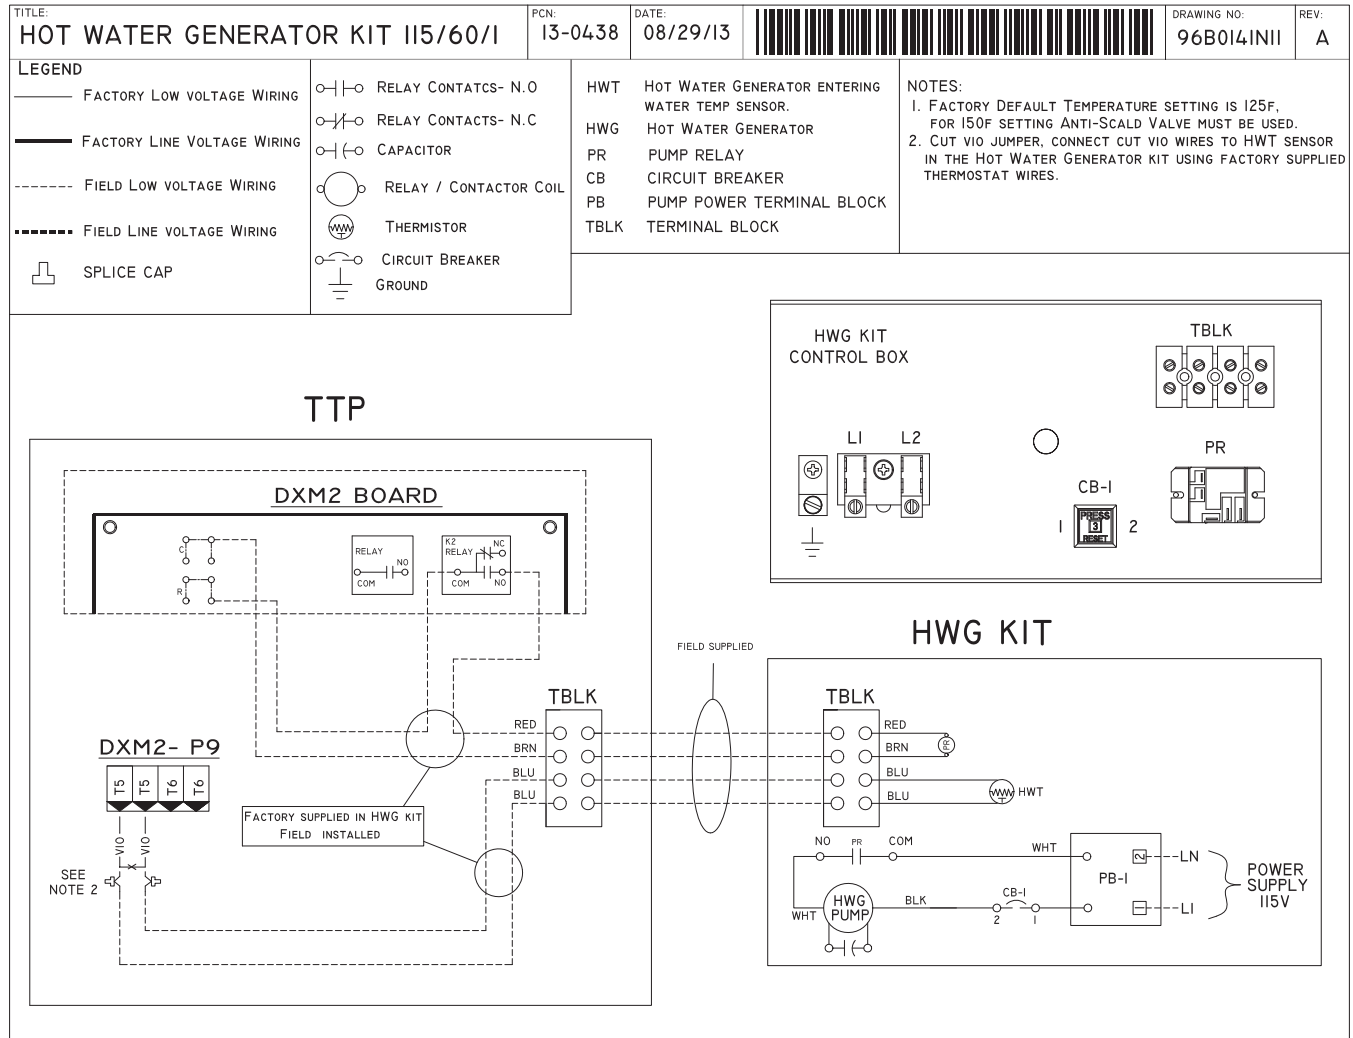

230V Hot Water Generator Wiring Diagram – 96B0141N12

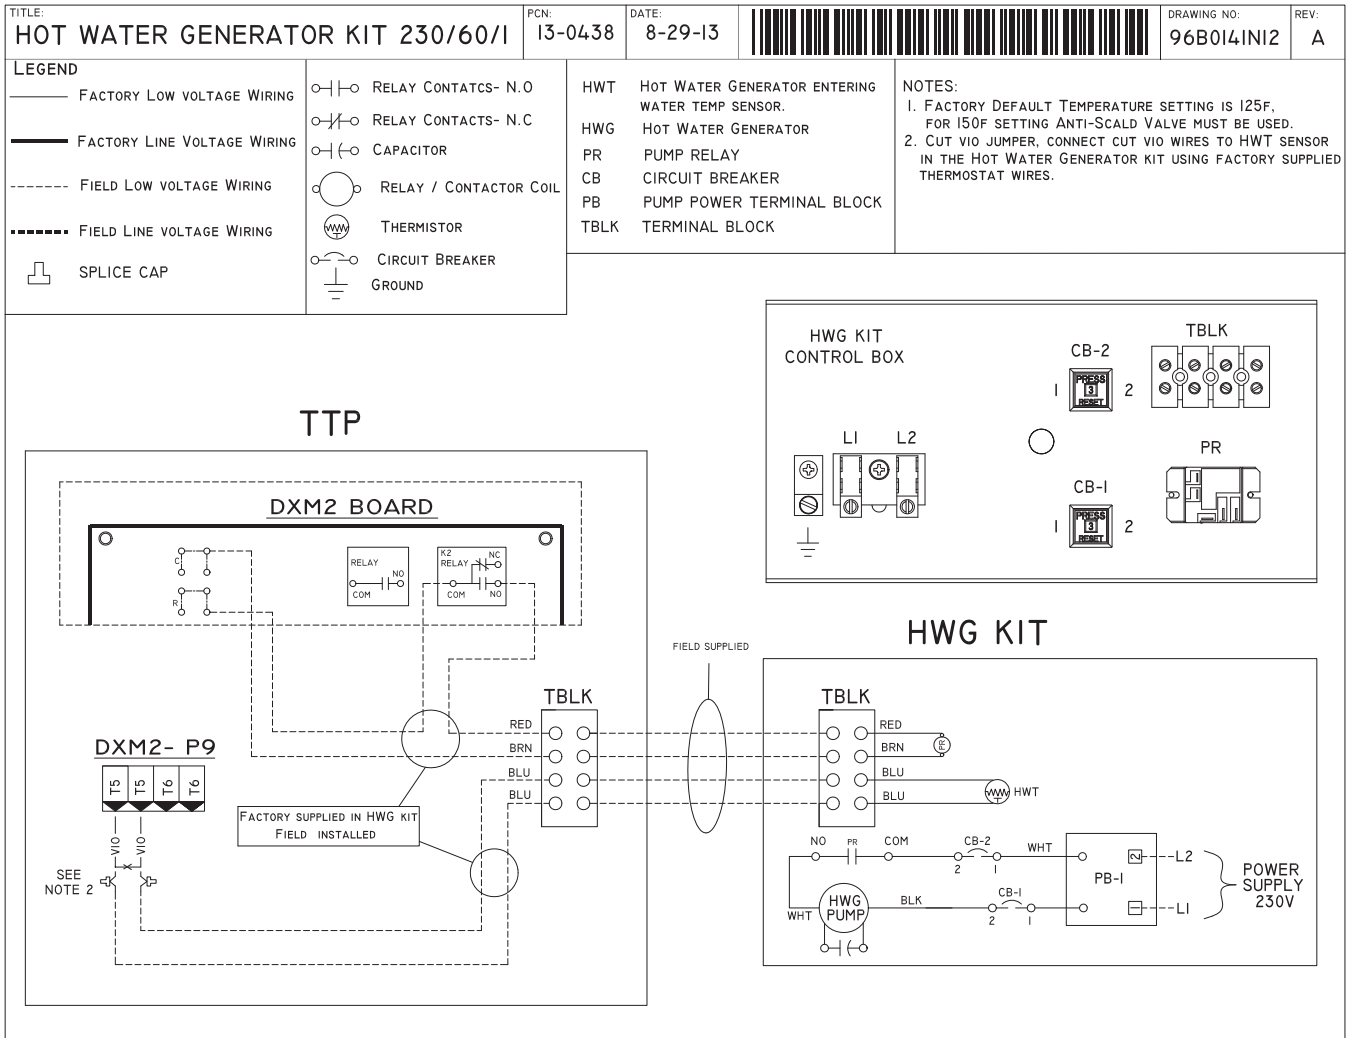

Unit Starting and Operating Conditions

OPERATING LIMITS

Environment – TES Units are designed for indoor installation only. Never install in areas subject to freezing or where humidity levels could cause cabinet condensation (such as unconditioned spaces subject to 100% outside air). Power Supply – A voltage variation of +/- 10% of nameplate utilization voltage is acceptable.

Determination of operating limits is dependent primarily upon three factors: 1) return air temperature. 2) water temperature, and 3) ambient temperature. When any one of these factors is at minimum or maximum levels, the other two factors should be at normal levels to insure proper unit operation. Extreme variations in temperature and humidity and/or corrosive water or air will adversely affect unit performance, reliability, and service life. Consult Tables 12a-b for operating limits.

COMMISSIONING LIMITS

Consult Tables 13c-d for the particular model. Starting conditions vary depending upon model and are based upon the following notes:

NOTES:

1. Commissioning limits in Tables 13c-d are not normal or continuous operating conditions. Minimum/maximum limits are start-up conditions to bring the building space up to occupancy temperatures. Units are not designed to operate under these conditions on a regular basis.
2. Voltage utilization range complies with AHRI Standard 110.

Table 13a: Building Operating Limits – TES

Operating Limits	TES	
	Cooling	Heating
Air Limits		
Min. Ambient Air, DB	45°F [7°C]	39°F [4°C]
Rated Ambient Air, DB	80.6°F [27°C]	68°F [20°C]
Max. Ambient Air, DB	130°F [54°C]	85°F [29°C]
Min. Entering Air, DB/WB	65/45°F [18/7°C]	50°F [10°C]
Rated Entering Air, DB/WB	80.6/66.2°F [27/19°C]	68°F [20°C]
Max. Entering Air, DB/WB	100/75°F [38/24°C]	80°F [27°C]
Water Limits		
Min. Entering Water	30°F [-1°C]	20°F [-6.7°C]
Normal Entering Water	50-110°F [10-43°C]	30-70°F [-1 to 21°C]
Max. Entering Water	120°F [49°C]	90°F [32°C]
Normal Water Flow	1.5 to 3.0 gpm/ton [1.6 to 3.2 l/m per kW]	

Table 13c: Building Commissioning Limits – TES

Commissioning Limits	TES	
	Cooling	Heating
Air Limits		
Min. Ambient Air, DB	45°F [7°C]	39°F [4°C]
Rated Ambient Air, DB	80.6°F [27°C]	68°F [20°C]
Max. Ambient Air, DB	130°F [54°C]	85°F [29°C]
Min. Entering Air, DB/WB	60°F [16°C]	40°F [4.4°C]
Rated Entering Air, DB/WB	80.6/66.2°F [27/19°C]	68°F [20°C]
Max. Entering Air, DB/WB	110/83°F [43/28°C]	80°F [27°C]
Water Limits		
Min. Entering Water	30°F [-1°C]	20°F [-6.7°C]
Normal Entering Water	50-110°F [10-43°C]	30-70°F [-1 to 21°C]
Max. Entering Water	120°F [49°C]	90°F [32°C]
Normal Water Flow	1.5 to 3.0 gpm/ton [1.6 to 3.2 l/m per kW]	

Table 13b: Building Operating Limits – TEP

Operating Limits	TEP	
	Cooling	Heating
Air Limits		
Min. Ambient Air, DB	-10°F [-23°C]	-10°F [-23°C]
Rated Ambient Air, DB	80.6°F [27°C]	68°F [20°C]
Max. Ambient Air, DB	130°F [54°C]	85°F [29°C]
Min. Entering Air, DB/WB	65/45°F [18/7°C]	50°F [10°C]
Rated Entering Air, DB/WB	80.6/66.2°F [27/19°C]	68°F [20°C]
Max. Entering Air, DB/WB	100/75°F [38/24°C]	80°F [27°C]
Water Limits		
Min. Entering Water	30°F [-1°C]	20°F [-6.7°C]
Normal Entering Water	50-110°F [10-43°C]	30-70°F [-1 to 21°C]
Max. Entering Water	120°F [49°C]	90°F [32°C]
Normal Water Flow	1.5 to 3.0 gpm/ton [1.6 to 3.2 l/m per kW]	

Table 13d: Building Commissioning Limits – TEP

Commissioning Limits	TEP	
	Cooling	Heating
Air Limits		
Min. Ambient Air, DB	-10°F [-23°C]	-10°F [-23°C]
Rated Ambient Air, DB	80.6°F [27°C]	68°F [20°C]
Max. Ambient Air, DB	130°F [54°C]	85°F [29°C]
Min. Entering Air, DB/WB	60°F [16°C]	40°F [4.4°C]
Rated Entering Air, DB/WB	80.6/66.2°F [27/19°C]	68°F [20°C]
Max. Entering Air, DB/WB	110/83°F [43/28°C]	80°F [27°C]
Water Limits		
Min. Entering Water	30°F [-1°C]	20°F [-6.7°C]
Normal Entering Water	50-110°F [10-43°C]	30-70°F [-1 to 21°C]
Max. Entering Water	120°F [49°C]	90°F [32°C]
Normal Water Flow	1.5 to 3.0 gpm/ton [1.6 to 3.2 l/m per kW]	

Unit Start-Up and Operating Conditions, Cont'd.

WARNING!

WARNING! Polyolester Oil, commonly known as POE oil, is a synthetic oil used in many refrigeration systems including those with HFC-410A refrigerant. POE oil, if it ever comes in contact with PVC or CPVC piping, may cause failure of the PVC/CPVC. PVC/CPVC piping should never be used as supply or return water piping with water source heat pump products containing HFC-410A as system failures and property damage may result.

Unit and System Checkout

BEFORE POWERING SYSTEM, please check the following:

UNIT CHECKOUT

- Shutoff valves:** Insure that all isolation valves are open.
- Line voltage and wiring:** Verify that voltage is within an acceptable range for the unit and wiring and fuses/breakers are properly sized. Verify that low voltage wiring is complete.
- Unit control transformer:** Insure that transformer has the properly selected voltage tap. Residential 208/230V units are factory wired for 230V operation unless specified otherwise.
- Loop/water piping is complete and purged of air. Water piping is clean.
- Antifreeze has been added if necessary.
- Entering water and air:** Insure that entering water and air temperatures are within operating limits of Tables 12a-b
- Low water temperature cutout:** Verify that low water temperature cut-out on the DXM2.5 control is properly set.
- HWG is switched off at SW 3-4 unless piping is completed and air has been purged from the system.
- Unit air coil and filters:** Insure that filter is clean and accessible and that air coil is clean of all manufacturing oils
- Unit controls:** Verify that DXM2.5 field selection options are properly set.
- Blower CFM and Water Ω T is set on communicating thermostats or diagnostic tool.
- Service/access panels are in place.

CAUTION!

CAUTION! Verify that ALL water valves are open and allow water flow prior to engaging the compressor. Freezing of the coax or water lines can permanently damage the heat pump.

CAUTION!

CAUTION! To avoid equipment damage, DO NOT leave system filled in a building without heat during the winter unless antifreeze is added to the water loop. Heat exchangers never fully drain by themselves and will freeze unless winterized with antifreeze.

SYSTEM CHECKOUT

- System water temperature:** Check water temperature for proper range and also verify heating and cooling set points for proper operation.
- System pH:** Check and adjust water pH if necessary to maintain a level between 6 and 8.5. Proper pH promotes system longevity (see Table 6).
- System flushing:** Verify that all air is purged from the system. Air in the system can cause poor operation or system corrosion. Water used in the system must be potable quality initially and clean of dirt, piping slag, and strong chemical cleaning agents. Some antifreeze solutions may require distilled water.
- Internal Flow Controller:** Verify that it is purged of air and in operating condition.
- Low water temperature cutout:** Verify that low water temperature cut-out controls are set properly (LT1 - JW3).
- Miscellaneous:** Note any questionable aspects of the installation.

Unit Start-Up Procedure

Unit Start-up Procedure

1. Turn the thermostat fan position to "ON." System blower should start.
2. Turn blower off.
3. Ensure all valves are adjusted to their full open position. Ensure line power to the heat pump is on.
4. Room temperature should be within the minimum-maximum ranges listed in the unit IOM. During start-up checks, loop water temperature entering the heat pump should be between 30°F [-1°C] and 95°F [35°C].
5. It is recommended that water-to-air units be first started in the cooling mode, when possible. This will allow liquid refrigerant to flow through the filter-drier before entering the TXV, allowing the filter-drier to catch any debris that might be in the system before it reaches the TXV.
6. Two factors determine the operating limits of geothermal heat pumps, (a) return air temperature, and (b) entering water temperature. When either of the factors is at a minimum or maximum level, the other factor must be at normal levels to insure proper unit operation.
 - a. Place the unit in Manual Operation. When in manual mode activate Y1,Y2, and O to initiate the cooling mode. Also manually increase CFM until desired cooling CFM is achieved. Next adjust pump speed % until desired loop temperature difference (leaving water temperature minus entering water temperature) is achieved. (For modulating valve adjust valve %).

INSTALLER SETTINGS
THERMOSTAT CONFIG
SYSTEM CONFIG
ACCESSORY CONFIG
INPUT DEALER INFO
HUMIDITY CONFIG
TEMPERATURE ALGORITHM
DEMAND REDUCTION CNFG
SERVICE MODE
RESTORE DEFAULTS
AWC99U01
SELECT OPTION ▲ ▼
◀ PREVIOUS

SERVICE MODE
MANUAL OPERATION
CONTROL DIAGNOSTICS
DIPSWITCH CONFIG
FAULT HISTORY
CLEAR FAULT HISTORY
SELECT OPTION ▲ ▼
◀ PREVIOUS
SELECT ▶

MANUAL OPERATING MODE			
Y1	COMM	OUTPUT	OFF
Y2	COMM	OUTPUT	OFF
W	COMM	OUTPUT	OFF
O	COMM	OUTPUT	OFF
G	COMM	OUTPUT	OFF
H	COMM	OUTPUT	OFF
DH	COMM	OUTPUT	OFF
ECM	AIRFLOW		0
PUMP	SPEED		0%
TEST	MODE		OFF
SELECT OPTION ▲ ▼			
◀ PREVIOUS		SELECT ▶	

- b. Check for cool air delivery at the unit grille within a few minutes after the unit has begun to operate.

NOTE: Units have a five minute time delay in the control circuit that can be bypassed on the DXM2.5 control board by placing the unit in the "Test" mode as shown in the unit IOM. Check for normal air temperature drop of 15°F to 25°F (cooling mode).

- c. Verify that the compressor is on and that the water temperature rise (cooling mode) is within normal range.

Table 14a: Water-Temperature Rise

Water Flow, gpm (l/m)	Rise, Cooling °F
For Closed Loop: Ground Source or Closed Loop Systems at 3 gpm per ton (3.9 l/m per kw)	9 - 12
For Open Loop: Ground Water Systems at 1.5 gpm per ton (2.0 l/m per kw)	20 - 26

- d. Check the elevation and cleanliness of the condensate lines. Dripping may be a sign of a blocked line. Check that the condensate trap is filled to provide a water seal.
- e. Turn thermostat to "OFF" position. A hissing noise indicates proper functioning of the reversing valve.
7. Allow five (5) minutes between tests for pressure to equalize before beginning heating test.
 - a. Go into Manual Mode activate Y1, and Y2 for Heating. Also manually increase CFM until desired heating CFM is achieved. Next adjust pump speed % until desired loop temperature difference (entering water temperature minus leaving water temperature) is achieved. (For modulating valve adjust valve %).
 - b. Check for warm air delivery at the unit grille within a few minutes after the unit has begun to operate.

NOTE: Units have a five minute time delay in the control circuit that can be bypassed on the DXM2.5 control board by placing the unit in the "Test" mode as shown in the unit IOM. Check for normal air temperature rise of 20°F to 30°F (heating mode).

Unit Start-Up Procedure

- c. Verify that the compressor is on and that the water temperature fall (heating mode) is within normal range.
- d. Check for vibration, noise, and water leaks.

Table 14b: Water-Temperature Fall

Water Flow, gpm (l/m)	Drop, Heating °F
For Closed Loop: Ground Source or Closed Loop Systems at 3 gpm per ton (3.9 l/m per kw)	4 - 8
For Open Loop: Ground Water Systems at 1.5 gpm per ton (2.0 l/m per kw)	10 - 17

8. If unit fails to operate properly, perform troubleshooting analysis (see troubleshooting section in the unit IOM). If the check described fails to reveal the problem and the unit still does not operate, contact a trained service technician to insure proper diagnosis and repair of the equipment.
9. When testing is complete, exit the Installer Menu and set thermostat to maintain desired comfort level for normal operation.

Unit performance may be verified by calculating the unit heat of rejection and heat of extraction. Heat of Rejection (HR) can be calculated and compared to the performance data pages in this IOM. The formula for HR is as follows: $HR = TD \times GPM \times 500$ (or 485 for anti-freeze solutions), where TD is the temperature difference between the entering and leaving water, and GPM is the flow rate in U.S. GPM determined by comparing the unit heat exchanger pressure drop to Table 15.

Heat of Extraction (HE) can also be calculated and compared to the performance data pages in this IOM. The formula for HE is as follows: $HE = TD \times GPM \times 500$ (or 485 for anti-freeze solutions), where TD is the temperature difference between the entering and leaving water, and GPM is the flow rate in U.S. GPM determined by comparing the unit heat exchanger pressure drop to Table 15.

If performance during any mode appears abnormal, refer to the DXM2.5 section or troubleshooting section of this manual.

AIR COIL

To obtain maximum performance of a newly manufactured air coil it should be cleaned before startup. A 10% solution of dishwasher detergent and water is recommended for both sides of the coil. A thorough water rinse should follow.



WARNING!

WARNING! When the disconnect switch is closed, high voltage is present in some areas of the electrical panel. Exercise caution when working with energized equipment.

Unit Operating Conditions

Table 15: Coax Water Pressure Drop

Model	GPM	Pressure Drop (psi)			
		30°F	50°F	70°F	90°F
026	2.3	0.5	0.4	0.4	0.4
	3.0	0.7	0.6	0.6	0.6
	3.4	0.8	0.7	0.7	0.7
	4.5	1.1	1.0	1.0	0.9
038	6.0	1.7	1.6	1.5	1.4
	3.0	0.9	0.8	0.8	0.8
	4.5	1.5	1.3	1.2	1.2
	6.0	2.2	1.9	1.8	1.7
049	6.8	2.6	2.2	2.1	2.0
	9.0	3.9	3.4	3.1	3.0
	4.5	0.2	0.1	0.1	0.1
	6.0	0.9	0.7	0.7	0.7
064	6.8	1.2	1.0	0.9	0.9
	9.0	2.1	1.9	1.7	1.7
	12.0	3.8	3.5	3.3	3.2
	6.0	0.9	0.2	0.2	0.3
064	7.5	1.7	0.9	0.7	0.8
	9.0	2.5	1.5	1.3	1.4
	11.3	3.7	2.6	2.3	2.3
	12.0	4.1	3.0	2.6	2.6
	15.0	6.1	4.7	4.1	4.0

Table 16: Water Temperature Change Through Heat Exchanger

Water Flow, gpm (l/m)	Rise, Cooling °F	Drop, Heating °F
For Closed Loop: Ground Source or Closed Loop Systems at 3 gpm per ton (3.9 l/m per kw)	9 - 12	4 - 9
For Open Loop: Ground Water Systems at 1.5 gpm per ton (2.0 l/m per kw)	18 - 24	7 - 19

Table 17a: Size 026 Two-Stage HFC-410A Typical Unit Operating Pressures and Temperatures

Entering Water Temp °F	Water Flow GPM	Full Load Cooling - without HWG active						Full Load Heating - without HWG active					
		Suction Pressure PSIG	Discharge Pressure PSIG	Super-heat	Sub-cooling	Water Temp Rise °F	Air Temp Drop °F DB	Suction Pressure PSIG	Discharge Pressure PSIG	Super-heat	Sub-cooling	Water Temp Drop °F	Air Temp Rise °F DB
30*	1.7	128-138	214-234	14-19	15-20	40.0	18-24	70-80	280-300	2-7	6-11	7.3-9.3	14-20
	1.7	128-138	214-234	14-19	15-20	40.0	18-24	72-82	280-300	3-8	6-11	6.0-8.0	14-20
	1.7	128-138	214-234	14-19	15-20	40.0	18-24	75-85	280-300	3-8	6-11	4.7-6.7	14-20
50	3	128-138	216-236	13-18	15-20	18.0-20.0	18-24	105-115	310-330	4-9	6-11	10.1-12.1	19-25
	3.4	128-138	214-234	14-19	15-20	20.0	18-24	105-115	310-330	5-10	6-11	8.4-10.4	19-25
	3.4	128-138	214-234	14-19	15-20	20.0	18-24	110-120	310-330	6-11	6-11	6.6-8.6	19-25
70	3	131-141	290-310	12-17	15-20	17.3-19.3	17-23	130-140	340-360	11-16	7-12	12.8-14.8	23-28
	4.5	131-141	290-310	12-17	14-19	14.3-16.3	17-23	130-140	340-360	13-18	7-12	10.6-12.6	23-28
	6	131-141	275-295	12-17	13-18	11.3-13.3	17-23	132-142	340-360	15-20	8-13	8.3-10.3	23-28
90	3	138-148	410-430	11-16	18-23	16.5-18.5	16-22	145-155	360-380	22-27	10-15	25.0	26-32
	4.5	138-148	410-430	11-16	16-21	13.6-15.6	16-22	145-155	360-380	22-27	10-15	25.0	26-32
	6	138-148	390-410	11-16	15-20	10.7-12.7	16-22	145-155	360-380	22-27	10-15	25.0	26-32
110	3	142-152	480-500	10-15	19-24	15.0-17.0	16-22	145-155	360-380	22-27	10-15	45.0	45.0
	4.5	142-152	465-485	11-16	17-22	13.1-15.1	16-22	145-155	360-380	22-27	10-15	45.0	45.0
	6	142-152	451-471	11-16	16-21	10.3-12.3	16-22	145-155	360-380	22-27	10-15	45.0	45.0

*Based on 15% methanol antifreeze solution

Table 17b: Size 038 Two-Stage HFC-410A Typical Unit Operating Pressures and Temperatures

Entering Water Temp °F	Water Flow GPM	Full Load Cooling - without HWG active						Full Load Heating - without HWG active					
		Suction Pressure PSIG	Discharge Pressure PSIG	Super-heat	Sub-cooling	Water Temp Rise °F	Air Temp Drop °F DB	Suction Pressure PSIG	Discharge Pressure PSIG	Super-heat	Sub-cooling	Water Temp Drop °F	Air Temp Rise °F DB
30*	2.5	125-135	210-230	15-20	13-18	40.0	17-23	67-77	274-294	8-13	1-6	8.3-10.3	15-21
	2.5	125-135	210-230	15-20	13-18	40.0	17-23	71-81	278-298	9-14	1-6	6.2-8.2	16-22
	2.5	125-135	210-230	15-20	13-18	40.0	17-23	75-85	282-302	9-14	1-6	4.0-6.0	16-22
50	4.5	125-135	216-236	15-20	13-18	21.0-23.0	17-23	95-105	304-324	11-16	1-6	10.7-12.7	21-27
	4.9	125-135	210-230	15-20	13-18	20.0	17-23	100-110	308-328	12-17	1-6	7.9-8.9	21-27
	4.9	125-135	210-230	15-20	13-18	20.0	17-23	104-114	311-331	12-17	1-6	5.2-7.2	21-27
70	4.5	130-140	290-310	14-19	15-20	20.4-22.4	17-23	123-133	331-351	14-19	1-6	13.5-15.5	26-32
	6.75	130-140	274-294	14-19	12-18	15.1-17.1	17-23	127-137	335-355	16-21	1-6	10.1-12.1	26-32
	9	129-139	256-276	14-19	9-14	9.7-11.7	17-23	132-142	340-360	17-22	1-6	6.7-8.7	26-32
90	4.5	137-147	410-430	14-19	17-22	19.6-21.6	15-21	142-152	350-370	20-25	1-6	25.0	30-36
	6.75	137-147	390-410	14-19	14-19	14.5-16.5	15-21	142-152	350-370	20-25	1-6	25.0	30-36
	9	137-147	370-390	13-18	11-16	9.3-11.3	15-21	142-152	350-370	20-25	1-6	25.0	30-36
110	4.5	141-151	476-496	13-18	17-22	19.2-21.2	15-21	142-152	350-370	20-25	1-6	45.0	30-36
	6.75	141-151	457-477	13-18	14-19	14.1-16.1	15-21	142-152	350-370	20-25	1-6	45.0	30-36
	9	141-151	439-459	13-18	11-16	9.0-11.0	15-21	142-152	350-370	20-25	1-6	45.0	30-36

*Based on 15% methanol antifreeze solution

Unit Operating Conditions

Table 17c: Size 049 Two-Stage HFC-410A Typical Unit Operating Pressures and Temperatures

Entering Water Temp °F	Water Flow GPM	Full Load Cooling - without HWG active						Full Load Heating - without HWG active					
		Suction Pressure PSIG	Discharge Pressure PSIG	Super-heat	Sub-cooling	Water Temp Rise °F	Air Temp Drop °F DB	Suction Pressure PSIG	Discharge Pressure PSIG	Super-heat	Sub-cooling	Water Temp Drop °F	Air Temp Rise °F DB
30*	3.1	117-127	222-242	16-21	12-17	40.0	17-23	63-73	277-297	9-14	2-7	8.2-10.2	15-21
	3.1	117-127	222-242	16-21	12-17	40.0	17-23	66-76	280-300	10-15	2-7	6.1-8.1	15-21
	3.1	117-127	222-242	16-21	12-17	40.0	17-23	68-78	285-305	11-16	2-7	4.0-6.0	16-22
50	6	118-128	224-244	16-21	12-17	19.9-21.9	17-23	96-106	312-332	16-21	2-7	10.9-12.9	20-26
	6.2	117-127	222-242	16-21	12-17	20.0	17-23	100-110	316-336	16-21	2-7	8.1-10.1	21-27
	6.2	117-127	222-242	16-21	12-17	20.0	17-23	103-113	320-340	17-22	2-7	5.4-7.4	21-27
70	6	125-130	300-320	15-20	13-18	19.5-21.5	16-22	120-130	339-359	27-32	3-8	13.6-15.6	25-31
	9	125-130	280-300	15-20	10-15	14.4-16.4	16-22	122-132	341-361	27-32	3-8	10.1-12.1	25-31
	12	123-133	260-180	15-20	7-12	9.3-11.3	16-22	124-134	344-364	27-32	3-8	6.5-8.5	25-31
90	6	132-142	419-439	15-20	15-20	19.0-21.0	15-21	138-148	359-379	40-45	4-9	25.0	27-33
	9	130-140	396-419	15-20	12-17	13.8-15.8	15-21	138-148	359-379	40-45	4-9	25.0	27-33
	12	129-139	374-394	15-20	9-14	8.8-10.8	15-21	138-148	359-379	40-45	4-9	25.0	27-33
110	6	137-147	490-510	15-20	16-21	16-21	14-20	138-148	359-379	40-45	4-9	45.0	27-33
	9	135-145	464-484	15-20	13-18	13-18	14-20	138-148	359-379	40-45	4-9	45.0	27-33
	12	133-143	442-462	15-20	10-15	10-15	14-20	138-148	359-379	40-45	4-9	45.0	27-33

*Based on 15% methanol antifreeze solution

Table 17d: Size 064 Two-Stage HFC-410A Typical Unit Operating Pressures and Temperatures

Entering Water Temp °F	Water Flow GPM	Full Load Cooling - without HWG active						Full Load Heating - without HWG active					
		Suction Pressure PSIG	Discharge Pressure PSIG	Super-heat	Sub-cooling	Water Temp Rise °F	Air Temp Drop °F DB	Suction Pressure PSIG	Discharge Pressure PSIG	Super-heat	Sub-cooling	Water Temp Drop °F	Air Temp Rise °F DB
30*	3.8	118-128	222-242	15-20	10-15	40.0	20-26	65-75	286-306	7-12	2-8	8.0-10.0	18-24
	3.8	118-128	222-242	15-20	10-15	40.0	20-26	69-79	290-310	7-12	2-8	7.0-9.0	18-24
	3.8	118-128	222-242	15-20	10-15	40.0	20-26	71-81	290-310	7-12	2-8	4.0-6.0	18-24
50	7.5	118-128	223-243	15-20	10-15	19.4-21.4	20-26	98-108	323-343	6-11	3-8	10.6-12.6	24-30
	7.6	118-128	222-242	15-20	10-15	20.0	20-26	102-112	323-343	7-12	3-8	7.9-9.9	24-30
	7.6	118-128	222-242	15-20	10-15	20.0	20-26	105-115	330-350	8-13	3-8	5.2-7.2	24-30
70	7.5	125-135	290-310	11-16	14-19	19.0-21.0	19-25	126-136	355-375	11-16	4-9	13.4-15.4	29-35
	11.25	125-135	280-300	11-16	11-16	13.9-15.9	19-25	130-140	360-380	13-18	4-9	10.0-12.0	29-35
	15	124-134	260-280	13-18	8-13	9.0-11.0	19-25	134-144	367-387	15-20	4-9	6.5-8.5	29-35
90	7.5	132-142	420-440	10-15	19-24	18.3-20.3	18-24	142-152	370-390	20-25	4-9	25.0	32-38
	11.25	131-141	410-430	10-15	16-21	13.4-15.4	18-24	142-152	370-390	20-25	4-9	25.0	32-38
	15	130-140	400-420	11-16	14-19	9.0-11.0	18-24	142-152	370-390	20-25	4-9	25.0	32-38
110	7.5	18-24	490-510	8-13	22-27	17.9-19.9	18-24	142-152	370-390	20-25	4-9	45.0	32-38
	11.25	18-24	490-510	9-14	20-25	13.1-15.1	18-24	142-152	370-390	20-25	4-9	45.0	32-38
	15	18-24	490-510	10-15	18-23	8.3-10.3	18-24	142-152	370-390	20-25	4-9	45.0	32-38

*Based on 15% methanol antifreeze solution

Table 18: Antifreeze Correction Table

Antifreeze Type	Antifreeze %	Cooling			WPD Corr. Fct. EWT 40°F
		EWT 40°F			
		Total Cap	Sens Cap	Power	
Propylene Glycol	15	0.968	0.968	0.990	1.210
	25	0.947	0.947	0.983	1.360
Methanol	15	0.968	0.968	0.990	1.160
	25	0.949	0.949	0.984	1.220
Ethanol	15	0.944	0.944	0.983	1.300
	25	0.917	0.917	0.974	1.360
Ethylene Glycol	15	0.980	0.980	0.994	1.120
	25	0.966	0.966	0.990	1.200

Table 19a: Performance Data – TES/TEP Model 026 w/TAH - Full Load

950 CFM Nominal (Rated) Airflow Heating, 850 CFM Nominal (Rated) Airflow Cooling

Performance capacities shown in thousands of Btuh

EWT °F	Cooling - EAT 80/67°F												Heating - EAT 70°F											
	WPD			CFM	TC	SC	kW	HR	EER	LWT	TTS HWC	TTP HWC	WPD			CFM	HC	kW	HE	COP	LAT	LWT	TTS HWC	TTP HWC
GPM	PSI	FT	GPM										PSI	FT										
20	1.4	0.6	1.4	690	28.9	17.9	1.16	32.9	25.0	70.0	1.4	1.3	6.0	3.7	8.6	770	15.8	1.54	10.5	3.0	89.0	16.5	1.5	1.5
	1.4	0.6	1.4	850	29.8	20.0	1.22	33.9	24.4	70.0	1.4	1.3	6.0	3.7	8.6	950	16.1	1.46	11.2	3.2	85.7	16.3	1.6	1.5
30	1.7	0.5	1.1	690	28.9	17.9	1.16	32.9	25.0	70.0	1.3	1.3	3.0	1.1	2.5	770	18.0	1.58	12.6	3.3	91.6	21.6	1.6	1.6
	1.7	0.5	1.2	850	29.8	20.0	1.22	33.9	24.4	70.0	1.4	1.3	3.0	1.1	2.5	950	18.4	1.50	13.3	3.6	88.0	21.1	1.7	1.6
	1.7	0.5	1.2	690	28.9	17.9	1.16	32.9	25.0	70.0	1.3	1.3	4.5	2.0	4.6	770	19.1	1.59	13.6	3.5	92.9	23.9	1.8	1.7
	1.7	0.5	1.2	850	29.8	20.0	1.22	33.9	24.4	70.0	1.4	1.3	4.5	2.0	4.6	950	19.5	1.51	14.4	3.8	89.0	23.6	1.9	1.8
	1.7	0.5	1.2	690	28.9	17.9	1.16	32.9	25.0	70.0	1.3	1.3	6.0	3.1	7.1	770	19.6	1.60	14.2	3.6	93.6	25.3	1.8	1.7
	1.7	0.5	1.2	850	29.8	20.0	1.22	33.9	24.4	70.0	1.4	1.3	6.0	3.1	7.1	950	20.1	1.52	14.9	3.9	89.6	25.0	1.9	1.8
40	2.3	0.5	1.2	690	28.9	17.9	1.16	32.9	25.0	70.0	1.3	1.2	3.0	0.9	2.0	770	21.2	1.62	15.7	3.8	95.5	29.6	2.0	1.9
	2.3	0.5	1.2	850	29.8	20.0	1.22	33.9	24.4	70.0	1.4	1.3	3.0	0.9	2.0	950	21.7	1.54	16.4	4.1	91.1	29.0	2.1	2.0
	2.3	0.5	1.2	690	28.9	17.9	1.16	32.9	25.0	70.0	1.3	1.2	4.5	1.6	3.8	770	22.3	1.64	16.7	4.0	96.9	32.6	2.1	2.0
	2.3	0.5	1.2	850	29.8	20.0	1.22	33.9	24.4	70.0	1.4	1.3	4.5	1.6	3.8	950	22.9	1.56	17.5	4.3	92.3	32.2	2.2	2.1
	2.3	0.5	1.2	690	28.9	17.9	1.16	32.9	25.0	70.0	1.3	1.2	6.0	2.6	6.0	770	22.9	1.65	17.3	4.1	97.6	34.2	2.2	2.1
	2.3	0.5	1.2	850	29.8	20.0	1.22	33.9	24.4	70.0	1.4	1.3	6.0	2.6	6.0	950	23.5	1.57	18.1	4.4	92.9	34.0	2.3	2.2
50	3.0	0.7	1.6	690	28.7	17.8	1.20	32.8	24.0	71.8	1.5	1.4	3.0	0.7	1.6	770	24.0	1.67	18.3	4.2	98.9	37.8	2.4	2.3
	3.0	0.7	1.6	850	29.5	19.9	1.26	33.8	23.4	72.5	1.5	1.4	3.0	0.7	1.6	950	24.6	1.59	19.1	4.5	93.9	37.2	2.5	2.4
	3.4	0.8	1.8	690	28.9	17.9	1.16	32.9	25.0	70.0	1.3	1.3	4.5	1.4	3.2	770	25.1	1.70	19.3	4.3	100.2	41.4	2.5	2.4
	3.4	0.8	1.8	850	29.8	20.0	1.22	33.9	24.4	70.0	1.4	1.3	4.5	1.4	3.2	950	25.7	1.61	20.2	4.7	95.1	41.0	2.6	2.5
	3.4	0.8	1.8	690	28.9	17.9	1.16	32.9	25.0	70.0	1.3	1.3	6.0	2.3	5.2	770	24.4	1.68	18.6	4.2	99.3	43.8	2.6	2.5
	3.4	0.8	1.8	850	29.8	20.0	1.22	33.9	24.4	70.0	1.4	1.3	6.0	2.3	5.2	950	25.0	1.60	19.5	4.6	94.3	38.5	2.7	2.6
60	3.0	0.7	1.6	690	27.6	17.4	1.32	32.1	20.9	81.4	1.8	1.7	3.0	0.7	1.5	770	26.4	1.73	20.5	4.5	101.8	46.3	2.7	2.6
	3.0	0.7	1.6	850	28.4	19.5	1.39	33.1	20.4	82.1	1.9	1.8	3.0	0.7	1.5	950	27.1	1.64	21.5	4.8	96.4	45.7	2.8	2.7
	4.5	1.3	3.0	690	28.4	17.7	1.23	32.6	23.2	74.5	1.5	1.5	4.5	1.3	2.9	770	27.5	1.75	21.6	4.6	103.1	50.4	2.9	2.8
	4.5	1.3	3.0	850	29.3	19.8	1.29	33.7	22.7	75.0	1.6	1.5	4.5	1.3	2.9	950	28.2	1.66	22.5	5.0	97.5	50.0	3.0	2.9
	6.0	2.0	4.6	690	28.8	17.8	1.18	32.8	24.5	70.9	1.4	1.3	6.0	2.0	4.7	770	28.1	1.76	22.1	4.7	103.8	52.6	3.0	2.9
	6.0	2.0	4.6	850	29.6	19.9	1.24	33.9	23.9	71.3	1.4	1.3	6.0	2.0	4.7	950	28.8	1.67	23.1	5.1	98.0	52.3	3.1	2.9
70	3.0	0.6	1.4	690	26.3	17.0	1.47	31.3	17.9	90.9	2.3	2.2	3.0	0.6	1.5	770	28.6	1.77	22.6	4.7	104.4	55.0	3.1	2.9
	3.0	0.6	1.4	850	27.1	19.0	1.55	32.4	17.5	91.6	2.4	2.3	3.0	0.6	1.5	950	29.3	1.68	23.5	5.1	98.5	54.3	3.2	3.0
	4.5	1.2	2.8	690	27.3	17.3	1.36	31.9	20.1	84.2	1.9	1.8	4.5	1.2	2.7	770	29.7	1.80	23.5	4.8	105.7	59.5	3.3	3.1
	4.5	1.2	2.8	850	28.1	19.3	1.43	32.9	19.6	84.6	2.0	1.9	4.5	1.2	2.7	950	30.4	1.71	24.5	5.2	99.6	59.1	3.4	3.2
	6.0	1.9	4.4	690	27.7	17.5	1.31	32.2	21.1	80.7	1.8	1.7	6.0	1.9	4.4	770	30.2	1.81	24.1	4.9	106.4	62.0	3.4	3.2
	6.0	1.9	4.4	850	28.5	19.5	1.38	33.2	20.7	81.1	1.9	1.8	6.0	1.9	4.4	950	30.9	1.72	25.1	5.3	100.2	61.6	3.5	3.3
80	3.0	0.7	1.6	690	25.0	16.5	1.64	30.6	15.2	100.4	3.0	2.9	3.0	0.7	1.5	770	30.5	1.82	24.3	4.9	106.7	63.8	3.4	3.2
	3.0	0.7	1.6	850	25.7	18.4	1.73	31.6	14.8	101.0	3.1	2.9	3.0	0.7	1.5	950	31.3	1.73	25.4	5.3	100.5	63.1	3.5	3.3
	4.5	1.2	2.8	690	25.9	16.8	1.52	31.1	17.1	93.8	2.5	2.4	3.4	0.8	1.8	770	31.0	1.83	24.7	5.0	107.2	65.0	3.5	3.3
	4.5	1.2	2.8	850	26.7	18.8	1.60	32.1	16.7	94.3	2.6	2.5	3.4	0.8	1.8	950	31.7	1.74	25.8	5.3	100.9	65.0	3.6	3.4
	6.0	1.8	4.2	690	26.4	17.0	1.45	31.4	18.2	90.5	2.3	2.2	3.4	0.8	1.8	770	31.0	1.83	24.7	5.0	107.2	65.0	3.5	3.3
	6.0	1.8	4.2	850	27.2	19.0	1.53	32.4	17.8	90.8	2.4	2.3	3.4	0.8	1.8	950	31.7	1.74	25.8	5.3	100.9	65.0	3.6	3.4
90	3.0	0.7	1.6	690	23.6	15.9	1.84	29.9	12.8	110.0	3.7	3.5	2.1	0.5	1.2	770	31.0	1.83	24.7	5.0	107.2	65.0	3.5	3.3
	3.0	0.7	1.6	850	25.3	18.2	1.79	31.4	14.1	110.6	3.3	3.1	2.1	0.5	1.2	950	31.7	1.74	25.8	5.3	100.9	65.0	3.6	3.4
	4.5	1.2	2.8	690	24.5	16.3	1.70	30.3	14.4	103.5	3.2	3.0	2.1	0.5	1.2	770	31.0	1.83	24.7	5.0	107.2	65.0	3.5	3.3
	4.5	1.2	2.8	850	25.3	18.2	1.79	31.4	14.1	103.9	3.3	3.1	2.1	0.5	1.2	950	31.7	1.74	25.8	5.3	100.9	65.0	3.6	3.4
	6.0	1.8	4.2	690	25.0	16.5	1.63	30.6	15.3	100.2	2.9	2.8	2.1	0.5	1.2	770	31.0	1.83	24.7	5.0	107.2	65.0	3.5	3.3
	6.0	1.8	4.2	850	25.7	18.4	1.72	31.6	15.0	100.5	3.0	2.9	2.1	0.5	1.2	950	31.7	1.74	25.8	5.3	100.9	65.0	3.6	3.4
100	3.0	0.7	1.6	690	22.5	15.4	2.08	29.6	10.8	119.8	4.5	4.2	1.5	0.4	0.9	770	31.0	1.83	24.7	5.0	107.2	65.0	3.5	3.3
	3.0	0.7	1.6	850	23.2	17.2	2.19	30.7	10.6	120.4	4.6	4.4	1.5	0.4	0.9	950	31.7	1.74	25.8	5.3	100.9	65.0	3.6	3.4
	4.5	1.2	2.8	690	23.3	15.8	1.91	29.8	12.2	113.2	3.9	3.7	1.5	0.4	0.9	770	31.0	1.83	24.7	5.0	107.2	65.0	3.5	3.3
	4.5	1.2	2.8	850	23.9	17.6	2.01	30.8	11.9	113.7	4.0	3.8	1.5	0.4	0.9	950	31.7	1.74	25.8	5.3	100.9	65.0	3.6	3.4
	6.0	1.8	4.2	690	23.7	15.9	1.83	29.9	12.9	110.0	3.7	3.5	1.5	0.4	0.9	770	31.0	1.83	24.7	5.0	107.2	65.0	3.5	3.3
	6.0	1.8	4.2	850	24.4	17.8	1.93	31.0	12.6	110.3	3.8	3.6	1.5	0.4	0.9	950	31.7	1.74	25.8	5.3	100.9	65.0	3.6	3.4
110	3.0	0.7	1.6	690	21.8	15.1	2.37	29.8	9.2	129.9	5.3	5.1	1.1	0.3	0.7	770	31.0	1.83	24.7	5.0	107.2	65.0	3.5	3.3
	3.0	0.7	1.6	850	22.4	16.8	2.49	30.9	9.0	130.6	5.5	5.2	1.1	0.3	0.7	950	31.7	1.74	25.8	5.3	100.9	65.0	3.6	3.4
	4.5	1.1	2.5	690	22.2	15.3	2.17	29.6	10.3	123.2	4.7	4.5	1.1	0.3	0.7	770	31.0	1.83	24.7	5.0	107.2	65.0	3.5	3.3
	4																							

Table 19b: Performance Data – TES/TEP Model 038 w/TAH - Full Load

1000 CFM Nominal Airflow Heating, 1000 CFM Nominal Airflow Cooling

Performance capacities shown in thousands of Btuh

EWT °F	Cooling - EAT 80/67°F												Heating - EAT 70°F											
	GPM	WPD		CFM	TC	SC	kW	HR	EER	LWT	TTS HWC	TTP HWC	GPM	WPD		CFM	HC	kW	HE	COP	LAT	LWT	TTS HWC	TTP HWC
		PSI	FT											PSI	FT									
20	2.0	1.4	3.3	1010	41.9	25.8	1.68	47.6	24.9	70.0	1.8	1.7	9.0	8.3	19.2	1010	23.9	2.12	16.7	3.3	91.9	16.3	2.0	1.9
	2.0	1.4	3.3	1250	43.1	28.8	1.77	49.1	24.3	70.0	1.9	1.8	9.0	8.3	19.2	1250	24.5	2.01	17.6	3.6	88.1	16.1	2.1	2.0
30	2.5	1.2	2.7	1010	41.9	25.8	1.68	47.6	24.9	70.0	1.8	1.7	4.5	2.6	6.0	1010	26.0	2.15	18.7	3.6	93.9	21.7	2.3	2.2
	2.5	1.2	2.7	1250	43.1	28.8	1.77	49.1	24.3	70.0	1.9	1.8	4.5	2.6	6.0	1250	26.6	2.04	19.7	3.8	89.7	21.3	2.4	2.3
	2.5	1.2	2.7	1010	41.9	25.8	1.68	47.6	24.9	70.0	1.8	1.7	6.8	4.6	10.6	1010	27.1	2.17	19.7	3.7	94.9	24.2	2.5	2.4
	2.5	1.2	2.7	1250	43.1	28.8	1.77	49.1	24.3	70.0	1.9	1.8	6.8	4.6	10.6	1250	27.7	2.06	20.7	3.9	90.6	23.9	2.6	2.5
	2.5	1.2	2.7	1010	41.9	25.8	1.68	47.6	24.9	70.0	1.8	1.7	9.0	6.9	16.0	1010	27.7	2.18	20.2	3.7	95.4	25.5	2.5	2.4
	2.5	1.2	2.7	1250	43.1	28.8	1.77	49.1	24.3	70.0	1.9	1.8	9.0	6.9	16.0	1250	28.3	2.07	21.3	4.0	91.0	25.3	2.6	2.5
40	3.3	1.3	2.9	1010	41.9	25.8	1.68	47.6	24.9	70.0	1.8	1.7	4.5	2.0	4.7	1010	29.5	2.21	21.9	3.9	97.0	30.2	2.8	2.7
	3.3	1.3	2.9	1250	43.1	28.8	1.77	49.1	24.3	70.0	1.9	1.8	4.5	2.0	4.7	1250	30.2	2.10	23.0	4.2	92.4	29.8	2.9	2.8
	3.3	1.3	2.9	1010	41.9	25.8	1.68	47.6	24.9	70.0	1.8	1.7	6.8	3.8	8.8	1010	30.7	2.24	23.1	4.0	98.2	33.2	3.0	2.9
	3.3	1.3	2.9	1250	43.1	28.8	1.77	49.1	24.3	70.0	1.9	1.8	6.8	3.8	8.8	1250	31.5	2.13	24.2	4.3	93.3	32.9	3.1	2.9
	3.3	1.3	2.9	1010	41.9	25.8	1.68	47.6	24.9	70.0	1.8	1.7	9.0	5.9	13.6	1010	31.4	2.25	23.7	4.1	98.8	34.7	3.1	2.9
	3.3	1.3	2.9	1250	43.1	28.8	1.77	49.1	24.3	70.0	1.9	1.8	9.0	5.9	13.6	1250	32.1	2.14	24.8	4.4	93.8	34.5	3.2	3.0
50	4.5	1.7	3.9	1010	41.9	25.7	1.70	47.5	24.5	71.1	1.8	1.7	4.5	1.7	3.9	1010	32.9	2.29	25.1	4.2	100.2	38.8	3.3	3.1
	4.5	1.7	3.9	1250	42.9	28.8	1.79	49.0	24.0	71.8	1.9	1.8	4.5	1.7	3.9	1250	33.7	2.17	26.3	4.6	95.0	38.3	3.4	3.2
	4.9	1.9	4.5	1010	41.9	25.8	1.68	47.6	24.9	70.0	1.8	1.7	6.8	3.3	7.6	1010	34.3	2.32	26.4	4.3	101.5	42.2	3.5	3.3
	4.9	1.9	4.5	1250	43.1	28.8	1.77	49.1	24.3	70.0	1.9	1.8	6.8	3.3	7.6	1250	35.1	2.20	27.6	4.7	96.0	41.9	3.6	3.4
	4.9	1.9	4.5	1010	41.9	25.8	1.68	47.6	24.9	70.0	1.8	1.7	9.0	5.2	11.9	1010	35.0	2.34	27.0	4.4	102.1	44.0	3.6	3.4
	4.9	1.9	4.5	1250	43.1	28.8	1.77	49.1	24.3	70.0	1.9	1.8	9.0	5.2	11.9	1250	35.8	2.22	28.3	4.7	96.6	43.7	3.7	3.5
60	4.5	1.5	3.5	1010	40.5	25.5	1.87	46.9	21.7	80.9	2.5	2.4	4.5	1.5	3.5	1010	36.2	2.36	28.2	4.5	103.2	47.5	3.8	3.6
	4.5	1.5	3.5	1250	41.7	28.5	1.97	48.4	21.2	81.5	2.6	2.5	4.5	1.5	3.5	1250	37.1	2.24	29.4	4.9	97.5	46.9	3.9	3.7
	6.8	2.9	6.8	1010	41.4	25.7	1.75	47.4	23.7	74.0	2.0	1.9	6.8	2.9	6.8	1010	37.7	2.40	29.5	4.6	104.6	51.2	4.0	3.8
	6.8	2.9	6.8	1250	42.6	28.7	1.84	48.9	23.2	74.5	2.1	2.0	6.8	2.9	6.8	1250	38.6	2.28	30.8	5.0	98.6	50.9	4.1	3.9
	9.0	4.7	10.8	1010	41.8	25.8	1.69	47.6	24.7	70.6	1.8	1.7	9.0	4.7	10.8	1010	38.5	2.41	30.2	4.7	105.3	53.3	4.1	3.9
	9.0	4.7	10.8	1250	43.0	28.8	1.78	49.1	24.2	70.9	1.9	1.8	9.0	4.7	10.8	1250	39.4	2.29	31.6	5.0	99.2	53.0	4.2	4.0
70	4.5	1.5	3.4	1010	39.1	25.1	2.07	46.2	18.9	90.5	3.3	3.1	4.5	1.5	3.4	1010	39.4	2.43	31.1	4.7	106.1	56.2	4.3	4.0
	4.5	1.5	3.4	1250	40.2	28.0	2.18	47.7	18.5	91.2	3.4	3.2	4.5	1.5	3.4	1250	40.3	2.31	32.4	5.1	99.9	55.6	4.4	4.2
	6.8	2.8	6.4	1010	40.2	25.4	1.93	46.7	20.8	83.8	2.7	2.6	6.8	2.8	6.4	1010	40.9	2.47	32.4	4.8	107.5	60.4	4.5	4.2
	6.8	2.8	6.4	1250	41.3	28.4	2.03	48.2	20.4	84.3	2.8	2.7	6.8	2.8	6.4	1250	41.9	2.35	33.8	5.2	101.0	60.0	4.6	4.4
	9.0	4.4	10.1	1010	40.7	25.5	1.86	47.0	21.8	80.4	2.4	2.3	9.0	4.4	10.1	1010	41.6	2.50	33.1	4.9	108.2	62.6	4.5	4.3
	9.0	4.4	10.1	1250	41.8	28.5	1.96	48.5	21.3	80.8	2.5	2.4	9.0	4.4	10.1	1250	42.6	2.37	34.5	5.3	101.6	62.3	4.7	4.5
80	4.5	1.5	3.4	1010	37.5	24.5	2.30	45.3	16.3	100.1	4.2	4.0	4.5	1.5	3.4	1010	42.3	2.51	33.7	4.9	108.8	65.0	4.6	4.4
	4.5	1.5	3.4	1250	38.6	27.4	2.42	46.8	15.9	100.8	4.3	4.1	4.5	1.5	3.4	1250	43.3	2.38	35.2	5.3	102.1	64.4	4.8	4.6
	6.8	2.7	6.2	1010	38.6	24.9	2.14	45.9	18.1	93.6	3.6	3.4	4.7	1.6	3.6	1010	42.5	2.52	33.9	4.9	108.9	65.0	4.7	4.5
	6.8	2.7	6.2	1250	39.8	27.8	2.25	47.4	17.7	94.1	3.7	3.5	4.7	1.6	3.6	1250	43.5	2.39	35.3	5.3	102.2	65.0	4.9	4.7
	9.0	4.2	9.7	1010	39.2	25.1	2.06	46.2	19.0	90.3	3.2	3.0	4.7	1.6	3.6	1010	42.5	2.52	33.9	4.9	108.9	65.0	4.7	4.5
	9.0	4.2	9.7	1250	40.3	28.0	2.17	47.7	18.6	90.6	3.3	3.1	4.7	1.6	3.6	1250	43.5	2.39	35.3	5.3	102.2	65.0	4.9	4.7
90	4.5	1.5	3.5	1010	35.7	23.9	2.57	44.5	13.9	109.8	5.2	5.0	2.8	0.9	2.0	1010	42.5	2.52	33.9	4.9	108.9	65.0	4.7	4.5
	4.5	1.5	3.5	1250	38.0	27.2	2.50	46.5	15.2	110.4	4.7	4.5	2.8	0.9	2.0	1250	43.5	2.39	35.3	5.3	102.2	65.0	4.9	4.7
	6.8	2.7	6.2	1010	36.9	24.3	2.38	45.0	15.6	103.3	4.5	4.3	2.8	0.9	2.0	1010	42.5	2.52	33.9	4.9	108.9	65.0	4.7	4.5
	6.8	2.7	6.2	1250	38.0	27.2	2.50	46.5	15.2	103.8	4.7	4.5	2.8	0.9	2.0	1250	43.5	2.39	35.3	5.3	102.2	65.0	4.9	4.7
	9.0	4.1	9.5	1010	37.5	24.6	2.29	45.4	16.4	100.1	4.2	4.0	2.8	0.9	2.0	1010	42.5	2.52	33.9	4.9	108.9	65.0	4.7	4.5
	9.0	4.1	9.5	1250	38.6	27.4	2.41	46.8	16.0	100.4	4.3	4.1	2.8	0.9	2.0	1250	43.5	2.39	35.3	5.3	102.2	65.0	4.9	4.7
100	4.5	1.5	3.4	1010	33.9	23.3	2.87	43.7	11.8	119.4	6.4	6.1	2.0	0.6	1.4	1010	42.5	2.52	33.9	4.9	108.9	65.0	4.7	4.5
	4.5	1.5	3.4	1250	34.9	26.1	3.02	45.2	11.5	120.1	6.6	6.3	2.0	0.6	1.4	1250	43.5	2.39	35.3	5.3	102.2	65.0	4.9	4.7
	6.8	2.7	6.1	1010	35.1	23.7	2.66	44.2	13.2	113.1	5.6	5.3	2.0	0.6	1.4	1010	42.5	2.52	33.9	4.9	108.9	65.0	4.7	4.5
	6.8	2.7	6.1	1250	36.1	26.5	2.80	45.7	12.9	113.5	5.8	5.5	2.0	0.6	1.4	1250	43.5	2.39	35.3	5.3	102.2	65.0	4.9	4.7
	9.0	4.1	9.4	1010	35.7	24.0	2.56	44.5	14.0	109.9	5.2	5.0	2.0	0.6	1.4	1010	42.5	2.52	33.9	4.9	108.9	65.0	4.7	4.5
	9.0	4.1	9.4	1250	36.8	26.8	2.69	46.0	13.7	110.2	5.4	5.1	2.0	0.6	1.4	1250	43.5	2.39	35.3	5.3	102.2	65.0	4.9	4.7
110	4.5	1.4	3.2	1010	32.1	22.8	3.21	43.0	10.0	129.1	7.8	7.4	1.6	0.3	0.8	1010	42.5	2.52	33.9	4.9	108.9	65.0	4.7	4.5
	4.5	1.4	3.2	1250	33.0	25.4	3.38	44.5	9.8	129.8	8.1	7.7	1.6	0.3	0.8	1250	43.5	2.39	35.3	5.3	102.2	65.0	4.9	4.7
	6.8	2.6	5.9	1010	33.3	23.1	2.98	43.4	11.2	122.9	6.9	6.5	1.6	0.3	0.8	1010	42.5	2.52	33.9	4.9	108.9	65.0	4.7	4.5
	6.8	2.6	5.9	1250	34.2	25.9	3.14	44.9	10.9	123.3	7.1	6.7	1.6	0.3	0.8	1250	43.5	2.39	35.3	5.3	102.2	65.0	4.9	4.7
	9.0	4.0	9.2	1010	33.9	23.3	2.87	43.7	11.8	119.7	6.5	6.2	1.6	0.3	0.8	1010	42.5	2.52	33.9	4.9	108.9	65.0	4.7	

Table 19c: Performance Data – TES/TEP Model 049 w/TAH - Full Load

1650 CFM Nominal (Rated) Airflow Heating, 1550 CFM Nominal (Rated) Airflow Cooling

Performance capacities shown in thousands of Btuh

EWT °F	Cooling - EAT 80/67°F											Heating - EAT 70°F												
	GPM	WPD		CFM	TC	SC	kW	HR	EER	LWT	TTS HWC	TTP HWC	GPM	WPD		CFM	HC	kW	HE	COP	LAT	LWT	TTS HWC	TTP HWC
		PSI	FT											PSI	FT									
20	2.5	0.2	0.5	1250	52.3	31.6	2.33	60.2	22.5	70.0	2.2	2.1	12.0	5.3	12.1	1340	33.0	3.15	22.2	3.1	92.8	16.3	3.2	3.0
	2.5	0.2	0.5	1550	53.8	35.3	2.45	62.1	22.0	70.0	2.3	2.2	12.0	5.3	12.1	1650	33.7	2.99	23.5	3.3	88.9	16.1	3.3	3.1
30	3.1	0.2	0.5	1250	52.3	31.6	2.33	60.2	22.5	70.0	2.2	2.1	6.0	1.2	2.8	1340	36.0	3.19	25.1	3.3	94.9	21.6	3.4	3.2
	3.1	0.2	0.4	1550	53.8	35.3	2.45	62.1	22.0	70.0	2.3	2.2	6.0	1.2	2.8	1650	36.9	3.03	26.5	3.6	90.7	21.2	3.5	3.3
	3.1	0.2	0.4	1250	52.3	31.6	2.33	60.2	22.5	70.0	2.2	2.1	9.0	2.8	6.4	1340	37.6	3.21	26.6	3.4	96.0	24.1	3.4	3.2
	3.1	0.2	0.4	1550	53.8	35.3	2.45	62.1	22.0	70.0	2.3	2.2	9.0	2.8	6.4	1650	38.5	3.05	28.1	3.7	91.6	23.8	3.5	3.3
	3.1	0.2	0.4	1250	52.3	31.6	2.33	60.2	22.5	70.0	2.2	2.1	12.0	4.7	10.8	1340	38.4	3.22	27.4	3.5	96.5	25.4	3.5	3.3
	3.1	0.2	0.4	1550	53.8	35.3	2.45	62.1	22.0	70.0	2.3	2.2	12.0	4.7	10.8	1650	39.3	3.06	28.9	3.8	92.1	25.2	3.6	3.4
40	4.1	0.3	0.8	1250	52.3	31.6	2.33	60.2	22.5	70.0	2.2	2.1	6.0	1.0	2.3	1340	40.9	3.25	29.8	3.7	98.3	30.1	3.6	3.4
	4.1	0.3	0.8	1550	53.8	35.3	2.45	62.1	22.0	70.0	2.3	2.2	6.0	1.0	2.3	1650	41.9	3.09	31.4	4.0	93.5	29.5	3.7	3.5
	4.1	0.3	0.8	1250	52.3	31.6	2.33	60.2	22.5	70.0	2.2	2.1	9.0	2.4	5.6	1340	42.7	3.29	31.5	3.8	99.5	33.0	3.7	3.5
	4.1	0.3	0.8	1550	53.8	35.3	2.45	62.1	22.0	70.0	2.3	2.2	9.0	2.4	5.6	1650	43.7	3.12	33.1	4.1	94.5	32.7	3.8	3.6
	4.1	0.3	0.8	1250	52.3	31.6	2.33	60.2	22.5	70.0	2.2	2.1	12.0	4.2	9.7	1340	43.6	3.30	32.4	3.9	100.2	34.6	3.8	3.6
	4.1	0.3	0.8	1550	53.8	35.3	2.45	62.1	22.0	70.0	2.3	2.2	12.0	4.2	9.7	1650	44.7	3.13	34.0	4.2	95.1	34.3	3.9	3.7
50	6.0	0.9	2.0	1250	52.3	31.6	2.34	60.2	22.3	70.1	2.3	2.2	6.0	0.9	2.0	1340	45.6	3.33	34.3	4.0	101.5	38.6	3.9	3.7
	6.0	0.9	2.0	1550	53.7	35.3	2.46	62.1	21.8	70.7	2.4	2.3	6.0	0.9	2.0	1650	46.7	3.16	35.9	4.3	96.2	38.0	4.0	3.8
	6.2	0.9	2.2	1250	52.3	31.6	2.33	60.2	22.5	70.0	2.2	2.1	9.0	2.2	5.1	1340	47.5	3.36	36.1	4.1	102.8	42.0	4.0	3.8
	6.2	0.9	2.2	1550	53.8	35.3	2.45	62.1	22.0	70.0	2.3	2.2	9.0	2.2	5.1	1650	48.6	3.19	37.8	4.5	97.3	41.6	4.1	3.9
	6.2	0.9	2.2	1250	52.3	31.6	2.33	60.2	22.5	70.0	2.2	2.1	12.0	3.9	9.0	1340	48.5	3.38	37.0	4.2	103.5	43.8	4.1	3.9
	6.2	0.9	2.2	1550	53.8	35.3	2.45	62.1	22.0	70.0	2.3	2.2	12.0	3.9	9.0	1650	49.7	3.21	38.7	4.5	97.9	43.6	4.2	4.0
60	6.0	0.8	1.8	1250	51.0	31.2	2.56	59.7	20.0	79.9	2.8	2.7	6.0	0.8	1.9	1340	50.0	3.41	38.4	4.3	104.6	47.2	4.3	4.0
	6.0	0.8	1.8	1550	52.5	34.9	2.69	61.7	19.5	80.6	2.9	2.8	6.0	0.8	1.9	1650	51.2	3.24	40.1	4.6	98.7	46.6	4.4	4.2
	9.0	2.0	4.7	1250	51.9	31.5	2.40	60.1	21.6	73.4	2.4	2.3	9.0	2.0	4.7	1340	51.9	3.45	40.1	4.4	105.9	51.1	4.4	4.1
	9.0	2.0	4.7	1550	53.4	35.2	2.53	62.0	21.1	73.8	2.5	2.4	9.0	2.0	4.7	1650	53.2	3.28	42.0	4.7	99.8	50.7	4.5	4.3
	12.0	3.6	8.4	1250	52.3	31.6	2.34	60.2	22.4	70.0	2.2	2.1	12.0	3.6	8.4	1340	52.9	3.47	41.1	4.5	106.6	53.2	4.5	4.2
	12.0	3.6	8.4	1550	53.8	35.3	2.46	62.2	21.9	70.4	2.3	2.2	12.0	3.6	8.4	1650	54.2	3.30	42.9	4.8	100.4	52.8	4.6	4.4
70	6.0	0.8	1.8	1250	49.3	30.6	2.82	59.0	17.5	89.7	3.6	3.4	6.0	0.8	1.8	1340	54.0	3.50	42.1	4.5	107.3	56.0	4.6	4.4
	6.0	0.8	1.8	1550	50.7	34.2	2.97	60.9	17.1	90.3	3.7	3.5	6.0	0.8	1.8	1650	55.3	3.32	43.9	4.9	101.0	55.4	4.8	4.6
	9.0	2.0	4.5	1250	50.5	31.1	2.64	59.5	19.1	83.2	3.0	2.9	9.0	2.0	4.5	1340	55.8	3.54	43.7	4.6	108.6	60.3	4.8	4.6
	9.0	2.0	4.5	1550	52.0	34.7	2.78	61.5	18.7	83.7	3.1	2.9	9.0	2.0	4.5	1650	57.1	3.36	45.7	5.0	102.1	59.9	5.0	4.8
	12.0	3.5	8.1	1250	51.1	31.3	2.56	59.8	20.0	80.0	2.8	2.7	12.0	3.5	8.1	1340	56.7	3.56	44.6	4.7	109.2	62.6	4.9	4.7
	12.0	3.5	8.1	1550	52.5	34.9	2.69	61.7	19.5	80.3	2.9	2.8	12.0	3.5	8.1	1650	58.0	3.38	46.5	5.0	102.6	62.2	5.1	4.8
80	6.0	0.8	1.8	1250	47.2	29.7	3.13	57.9	15.1	99.3	4.4	4.1	6.0	0.8	1.8	1340	57.4	3.58	45.2	4.7	109.7	64.9	5.0	4.8
	6.0	0.8	1.8	1550	48.6	33.2	3.29	59.8	14.8	99.9	4.5	4.3	6.0	0.8	1.8	1650	58.8	3.40	47.2	5.1	103.0	64.3	5.2	4.9
	9.0	1.9	4.4	1250	48.7	30.3	2.92	58.6	16.7	93.0	3.8	3.6	6.3	0.9	2.1	1340	57.7	3.58	45.4	4.7	109.8	65.0	5.2	5.0
	9.0	1.9	4.4	1550	50.1	33.9	3.07	60.6	16.3	98.6	3.9	3.7	6.3	0.9	2.1	1650	59.0	3.40	47.4	5.1	103.1	65.0	5.4	5.1
	12.0	3.4	7.9	1250	49.4	30.6	2.81	58.9	17.6	89.8	3.5	3.3	6.3	0.9	2.1	1340	57.7	3.58	45.4	4.7	109.8	65.0	5.2	5.0
	12.0	3.4	7.9	1550	50.8	34.2	2.96	60.9	17.2	90.1	3.6	3.4	6.3	0.9	2.1	1650	59.0	3.40	47.4	5.1	103.1	65.0	5.4	5.1
90	6.0	0.8	1.9	1250	44.8	28.6	3.49	56.7	12.8	108.9	5.4	5.1	3.8	0.3	0.7	1340	57.7	3.58	45.4	4.7	109.8	65.0	5.2	5.0
	6.0	0.8	1.9	1550	47.8	32.8	3.41	59.4	14.0	109.5	4.9	4.7	3.8	0.3	0.7	1650	59.0	3.40	47.4	5.1	103.1	65.0	5.4	5.1
	9.0	1.9	4.4	1250	46.4	29.3	3.24	57.5	14.3	102.8	4.7	4.5	3.8	0.3	0.7	1340	57.7	3.58	45.4	4.7	109.8	65.0	5.2	5.0
	9.0	1.9	4.4	1550	47.8	32.8	3.41	59.4	14.0	103.2	4.9	4.7	3.8	0.3	0.7	1650	59.0	3.40	47.4	5.1	103.1	65.0	5.4	5.1
	12.0	3.3	7.7	1250	47.2	29.7	3.13	57.9	15.1	99.6	4.5	4.2	3.8	0.3	0.7	1340	57.7	3.58	45.4	4.7	109.8	65.0	5.2	5.0
	12.0	3.3	7.7	1550	48.6	33.2	3.29	59.8	14.8	100.0	4.6	4.4	3.8	0.3	0.7	1650	59.0	3.40	47.4	5.1	103.1	65.0	5.4	5.1
100	6.0	0.8	1.9	1250	42.1	27.4	3.90	55.4	10.8	118.5	6.7	6.3	2.7	0.2	0.4	1340	57.7	3.58	45.4	4.7	109.8	65.0	5.2	5.0
	6.0	0.8	1.9	1550	43.3	30.6	4.11	57.3	10.5	119.1	6.9	6.6	2.7	0.2	0.4	1650	59.0	3.40	47.4	5.1	103.1	65.0	5.4	5.1
	9.0	1.9	4.3	1250	43.9	28.2	3.63	56.2	12.1	112.5	5.9	5.6	2.7	0.2	0.4	1340	57.7	3.58	45.4	4.7	109.8	65.0	5.2	5.0
	9.0	1.9	4.3	1550	45.1	31.5	3.82	58.2	11.8	112.9	6.1	5.8	2.7	0.2	0.4	1650	59.0	3.40	47.4	5.1	103.1	65.0	5.4	5.1
	12.0	3.3	7.6	1250	44.7	28.6	3.50	56.6	12.8	109.4	5.5	5.2	2.7	0.2	0.4	1340	57.7	3.58	45.4	4.7	109.8	65.0	5.2	5.0
	12.0	3.3	7.6	1550	46.0	31.9	3.68	58.6	12.5	109.8	5.7	5.4	2.7	0.2	0.4	1650	59.0	3.40	47.4	5.1	103.1	65.0	5.4	5.1
110	6.0	0.8	1.8	1250	39.2	26.2	4.38	54.2	9.0	128.1	8.2	7.8	2.1	0.1	0.3	1340	57.7	3.58	45.4	4.7	109.8	65.0	5.2	5.0
	6.0	0.8	1.8	1550	40.4	29.3	4.61	56.1	8.8	128.7	8.5	8.1	2.1	0.1	0.3	1650	59.0	3.40	47.4	5.1	103.1	65.0	5.4	5.1
	9.0	1.8	4.3	1250	41.1	27.0	4.08	55.0	10.1	122.2	7.3	6.9	2.1	0.1	0.3	1340	57.7	3.58	45.4	4.7	109.8	65.0	5.2	5.0
	9.0	1.8	4.3	1550	42.2	30.1	4.29	56.9	9.8	122.6	7.5	7.1	2.1	0.1	0.3	1650	59.0	3.40	47.4	5.1	103.1	65.0	5.4	5.1
	12.0	3.3	7.5	1250	42.0	27.4	3.92	55.4	10.7	119.2	6.8	6.4	2.1	0.1	0.3	1340	57.7	3.58	45.4	4.7	109.8	65.		

Table 19d: Performance Data – TES/TEP Model 064 - Full Load

2050 CFM Nominal (Rated) Airflow Heating, 1825 CFM Nominal (Rated) Airflow Cooling

Performance capacities shown in thousands of Btu/h

EWT °F	Cooling - EAT 80/67°F												Heating - EAT 70°F											
	GPM	WPD		CFM	TC	SC	kW	HR	EER	LWT	TTS HWC	TTP HWC	GPM	WPD		CFM	HC	kW	HE	COP	LAT	LWT	TTS HWC	TTP HWC
		PSI	FT											PSI	FT									
20	3.0	0.1	0.2	1480	63.4	39.5	2.92	73.3	21.7	70.0	2.7	2.6	15.0	7.3	16.8	1660	41.0	3.92	27.6	3.1	92.9	16.3	3.7	3.5
	3.0	0.1	0.2	1825	65.2	44.1	3.07	75.7	21.2	70.0	2.8	2.7	15.0	7.3	16.8	2050	42.0	3.72	29.3	3.3	89.0	16.1	3.8	3.6
30	3.8	0.1	0.2	1480	63.4	39.5	2.92	73.3	21.7	70.0	2.7	2.6	7.5	1.7	3.9	1660	44.6	3.99	31.0	3.3	94.9	21.7	3.9	3.7
	3.8	0.1	0.2	1825	65.2	44.1	3.07	75.7	21.2	70.0	2.8	2.7	7.5	1.7	3.9	2050	45.7	3.79	32.7	3.5	90.6	21.3	4.0	3.8
	3.8	0.1	0.2	1480	63.4	39.5	2.92	73.3	21.7	70.0	2.7	2.6	11.3	3.7	8.6	1660	46.5	4.03	32.7	3.4	95.9	24.2	4.0	3.8
	3.8	0.1	0.2	1825	65.2	44.1	3.07	75.7	21.2	70.0	2.8	2.7	11.3	3.7	8.6	2050	47.5	3.83	34.5	3.6	91.5	23.9	4.1	3.9
	3.8	0.1	0.2	1480	63.4	39.5	2.92	73.3	21.7	70.0	2.7	2.6	15.0	6.1	14.1	1660	47.4	4.06	33.6	3.4	96.5	25.5	4.0	3.8
	3.8	0.1	0.2	1825	65.2	44.1	3.07	75.7	21.2	70.0	2.8	2.7	15.0	6.1	14.1	2050	48.6	3.86	35.4	3.7	91.9	25.3	4.1	3.9
40	5.0	0.1	0.2	1480	63.4	39.5	2.92	73.3	21.7	70.0	2.7	2.6	7.5	1.2	2.7	1660	50.6	4.14	36.5	3.6	98.2	30.3	4.2	4.0
	5.0	0.1	0.2	1825	65.2	44.1	3.07	75.7	21.2	70.0	2.8	2.7	7.5	1.2	2.7	2050	51.8	3.93	38.4	3.9	93.4	29.8	4.3	4.1
	5.0	0.1	0.2	1480	63.4	39.5	2.92	73.3	21.7	70.0	2.7	2.6	11.3	3.1	7.1	1660	52.7	4.19	38.4	3.7	99.4	33.2	4.3	4.0
	5.0	0.1	0.2	1825	65.2	44.1	3.07	75.7	21.2	70.0	2.8	2.7	11.3	3.1	7.1	2050	54.0	3.98	40.4	4.0	94.4	32.8	4.4	4.2
	5.0	0.1	0.2	1480	63.4	39.5	2.92	73.3	21.7	70.0	2.7	2.6	15.0	5.3	12.2	1660	53.9	4.22	39.5	3.7	100.1	34.7	4.4	4.1
5.0	0.1	0.2	1825	65.2	44.1	3.07	75.7	21.2	70.0	2.8	2.7	15.0	5.3	12.2	2050	55.1	4.01	41.5	4.0	94.9	34.5	4.5	4.3	
50	7.5	0.9	2.0	1480	63.4	39.5	2.93	73.3	21.6	69.5	2.7	2.6	7.5	0.9	2.0	1660	56.5	4.29	41.8	3.9	101.5	38.8	4.5	4.2
	7.5	0.9	2.0	1825	65.1	44.1	3.08	75.7	21.2	70.2	2.8	2.7	7.5	0.9	2.0	2050	57.8	4.07	43.9	4.2	96.1	38.3	4.6	4.4
	7.6	0.9	2.1	1480	63.4	39.5	2.92	73.3	21.7	70.0	2.7	2.6	11.3	2.6	6.1	1660	58.8	4.35	44.0	4.0	102.8	42.2	4.6	4.4
	7.6	0.9	2.1	1825	65.2	44.1	3.07	75.7	21.2	70.0	2.8	2.7	11.3	2.6	6.1	2050	60.2	4.13	46.1	4.3	97.2	41.8	4.8	4.6
	7.6	0.9	2.1	1480	63.4	39.5	2.92	73.3	21.7	70.0	2.7	2.6	15.0	4.7	10.8	1660	60.0	4.38	45.1	4.0	103.5	44.0	4.7	4.5
	7.6	0.9	2.1	1825	65.2	44.1	3.07	75.7	21.2	70.0	2.8	2.7	15.0	4.7	10.8	2050	61.4	4.16	47.2	4.3	97.7	43.7	4.9	4.7
60	7.5	0.8	1.7	1480	61.5	39.0	3.20	72.4	19.2	79.3	3.3	3.1	7.5	0.8	1.7	1660	62.0	4.43	46.9	4.1	104.6	47.5	4.9	4.7
	7.5	0.8	1.7	1825	63.3	43.6	3.37	74.8	18.8	79.9	3.4	3.2	7.5	0.8	1.7	2050	63.5	4.21	49.1	4.4	98.7	46.9	5.1	4.8
	11.3	2.4	5.5	1480	62.7	39.4	3.01	73.0	20.8	72.9	2.8	2.7	11.3	2.4	5.5	1660	64.4	4.50	49.1	4.2	105.9	51.3	5.1	4.9
	11.3	2.4	5.5	1825	64.6	44.0	3.17	75.4	20.4	73.4	2.9	2.8	11.3	2.4	5.5	2050	65.9	4.27	51.4	4.5	99.8	50.9	5.3	5.0
	15.0	4.3	10.0	1480	63.3	39.5	2.92	73.3	21.7	69.8	2.6	2.5	15.0	4.3	10.0	1660	65.6	4.53	50.2	4.2	106.6	53.3	5.2	5.0
15.0	4.3	10.0	1825	65.2	44.1	3.07	75.6	21.2	70.1	2.7	2.6	15.0	4.3	10.0	2050	67.2	4.30	52.5	4.6	100.3	53.0	5.4	5.1	
70	7.5	0.7	1.7	1480	59.5	38.3	3.52	71.5	16.9	89.1	4.2	4.0	7.5	0.7	1.7	1660	67.1	4.57	51.5	4.3	107.4	56.3	5.3	5.1
	7.5	0.7	1.7	1825	61.2	42.8	3.71	73.8	16.5	89.7	4.3	4.1	7.5	0.7	1.7	2050	68.6	4.34	53.8	4.6	101.0	55.6	5.5	5.2
	11.3	2.3	5.3	1480	60.9	38.8	3.31	72.1	18.4	82.8	3.6	3.4	11.3	2.3	5.3	1660	69.3	4.62	53.5	4.4	108.6	60.5	5.6	5.3
	11.3	2.3	5.3	1825	62.6	43.4	3.48	74.5	18.0	83.2	3.7	3.5	11.3	2.3	5.3	2050	70.9	4.39	55.9	4.7	102.0	60.1	5.8	5.5
	15.0	4.1	9.5	1480	61.5	39.0	3.20	72.4	19.2	79.7	3.3	3.1	15.0	4.1	9.6	1660	70.4	4.65	54.5	4.4	109.2	62.7	5.7	5.4
	15.0	4.1	9.5	1825	63.3	43.6	3.37	74.8	18.8	80.0	3.4	3.2	15.0	4.1	9.6	2050	72.0	4.42	56.9	4.8	102.5	62.4	5.9	5.6
80	7.5	0.8	1.8	1480	57.1	37.3	3.92	70.4	14.5	98.8	5.2	5.0	7.5	0.8	1.8	1660	71.3	4.68	55.3	4.5	109.8	65.2	5.9	5.6
	7.5	0.8	1.8	1825	58.7	41.6	4.13	72.8	14.2	99.4	5.4	5.1	7.5	0.8	1.8	2050	73.0	4.44	57.8	4.8	103.0	64.6	6.1	5.8
	11.3	2.3	5.2	1480	58.7	37.9	3.66	71.2	16.0	92.6	4.5	4.3	7.7	0.9	2.0	1660	71.4	4.69	55.5	4.5	109.9	65.0	5.9	5.6
	11.3	2.3	5.2	1825	60.4	42.4	3.85	73.5	15.7	93.1	4.7	4.5	7.7	0.9	2.0	2050	73.1	4.45	57.9	4.8	103.0	65.0	6.1	5.8
	15.0	4.1	9.4	1480	59.4	38.3	3.53	71.5	16.8	89.5	4.2	4.0	7.7	0.9	2.0	1660	71.4	4.69	55.5	4.5	109.9	65.0	5.9	5.6
	15.0	4.1	9.4	1825	61.1	42.7	3.72	73.8	16.4	89.8	4.3	4.1	7.7	0.9	2.0	2050	73.1	4.45	57.9	4.8	103.0	65.0	6.1	5.8
90	7.5	0.8	1.9	1480	54.2	36.0	4.40	69.2	12.3	108.4	6.5	6.2	4.6	0.1	0.2	1660	71.4	4.69	55.5	4.5	109.9	65.0	5.9	5.6
	7.5	0.8	1.9	1825	57.7	41.2	4.29	72.3	13.5	109.1	5.8	5.5	4.6	0.1	0.2	2050	73.1	4.45	57.9	4.8	103.0	65.0	6.1	5.8
	11.3	2.3	5.3	1480	56.1	36.8	4.08	70.0	13.8	102.4	5.6	5.3	4.6	0.1	0.2	1660	71.4	4.69	55.5	4.5	109.9	65.0	5.9	5.6
	11.3	2.3	5.3	1825	57.7	41.2	4.29	72.3	13.5	102.9	5.8	5.5	4.6	0.1	0.2	2050	73.1	4.45	57.9	4.8	103.0	65.0	6.1	5.8
	15.0	4.0	9.3	1480	57.0	37.2	3.93	70.4	14.5	99.4	5.2	5.0	4.6	0.1	0.2	1660	71.4	4.69	55.5	4.5	109.9	65.0	5.9	5.6
	15.0	4.0	9.3	1825	58.6	41.6	4.14	72.7	14.2	99.7	5.4	5.1	4.6	0.1	0.2	2050	73.1	4.45	57.9	4.8	103.0	65.0	6.1	5.8
100	7.5	0.9	2.0	1480	50.7	34.5	4.98	67.7	10.2	118.1	7.8	7.4	3.3	0.1	0.2	1660	71.4	4.69	55.5	4.5	109.9	65.0	5.9	5.6
	7.5	0.9	2.0	1825	52.2	38.5	5.24	70.1	10.0	118.7	8.1	7.7	3.3	0.1	0.2	2050	73.1	4.45	57.9	4.8	103.0	65.0	6.1	5.8
	11.3	2.3	5.3	1480	53.0	35.5	4.60	68.7	11.5	112.2	7.0	6.6	3.3	0.1	0.2	1660	71.4	4.69	55.5	4.5	109.9	65.0	5.9	5.6
	11.3	2.3	5.3	1825	54.5	39.6	4.84	71.0	11.3	112.6	7.2	6.8	3.3	0.1	0.2	2050	73.1	4.45	57.9	4.8	103.0	65.0	6.1	5.8
	15.0	4.0	9.3	1480	54.0	35.9	4.43	69.1	12.2	109.2	6.5	6.2	3.3	0.1	0.2	1660	71.4	4.69	55.5	4.5	109.9	65.0	5.9	5.6
	15.0	4.0	9.3	1825	55.6	40.1	4.66	71.5	11.9	109.5	6.7	6.4	3.3	0.1	0.2	2050	73.1	4.45	57.9	4.8	103.0	65.0	6.1	5.8
110	7.5	0.8	1.8	1480	46.6	32.7	5.67	65.9	8.2	127.6	9.4	8.9	2.6	0.1	0.2	1660	71.4	4.69	55.5	4.5	109.9	65.0	5.9	5.6
	7.5	0.8	1.8	1825	47.9	36.5	5.97	68.3	8.0	128.2	9.7	9.2	2.6	0.1	0.2	2050	73.1	4.45	57.9	4.8	103.0	65.0	6.1	5.8
	11.3	2.2	5.2	1480	49.2	33.8	5.23	67.0	9.4	121.9	8.4	8.0	2.6	0.1	0.2	1660	71.4	4.69	55.5	4.5	109.9	65.0	5.9	5.6
	11.3	2.2	5.2	1825	50.6	37.8	5.50	69.4	9.2	122.3	8.7	8.3	2.6	0.1	0.2	2050	73.1	4.45	57.9	4.8	103.0	65.0	6.1	5.8
	15.0	4.0	9.2	1480	50.5	34.4	5.02	67.6	10.1	119.0	7.9	7.5	2.6	0.1	0.2	1660	71.4	4.69	55.					

Preventive Maintenance

WATER COIL MAINTENANCE

(Direct ground water applications only)

If the system is installed in an area with a known high mineral content (125 P.P.M. or greater) in the water, it is best to establish a periodic maintenance schedule with the owner so the coil can be checked regularly. Consult the well water applications section of this manual for a more detailed water coil material selection. Should periodic coil cleaning be necessary, use standard coil cleaning procedures, which are compatible with the heat exchanger material and copper water lines. Generally, the more water flowing through the unit, the less chance for scaling. Therefore, 1.5 gpm per ton [2.0 l/m per kW] is recommended as a minimum flow. Minimum flow rate for entering water temperatures below 50°F [10°C] is 2.0 gpm per ton [2.6 l/m per kW].

WATER COIL MAINTENANCE

(All other water loop applications)

Generally water coil maintenance is not needed for closed loop systems. However, if the piping is known to have high dirt or debris content, it is best to establish a periodic maintenance schedule with the owner so the water coil can be checked regularly. Dirty installations are typically the result of deterioration of iron or galvanized piping or components in the system. Open cooling towers requiring heavy chemical treatment and mineral buildup through water use can also contribute to higher maintenance. Should periodic coil cleaning be necessary, use standard coil cleaning procedures, which are compatible with both the heat exchanger material and copper water lines. Generally, the more water flowing through the unit, the less chance for scaling. However, flow rates over 3 gpm per ton (3.9 l/m per kW) can produce water (or debris) velocities that can erode the heat exchanger wall and ultimately produce leaks.

HOT WATER GENERATOR COILS

See water coil maintenance for ground water units. If the potable water is hard or not chemically softened, the high temperatures of the desuperheater will tend to scale even quicker than the water coil and may need more frequent inspections. In areas with extremely hard water, a HWG is not recommended.

COMPRESSOR

Conduct annual amperage checks to insure that amp draw is no more than 10% greater than indicated on the serial plate data.

CABINET – “INDOOR” COMPRESSOR SECTION

Do not allow water to stay in contact with the cabinet for long periods of time to prevent corrosion of the cabinet sheet metal. Generally, cabinets are set up from the floor a few inches [7 - 8 cm] to prevent water from entering the cabinet. The cabinet can be cleaned using a mild detergent.

REFRIGERANT SYSTEM

To maintain sealed circuit integrity, do not install service gauges unless unit operation appears abnormal. Reference the operating charts for pressures and temperatures. Verify that air and water flow rates are at proper levels before servicing the refrigerant circuit.

Troubleshooting

GENERAL

If operational difficulties are encountered, perform the preliminary checks below before referring to the troubleshooting charts.

- Verify that the unit is receiving electrical supply power.
- Make sure the fuses in the fused disconnect switches are intact.

After completing the preliminary checks described above, inspect for other obvious problems such as leaking connections, broken or disconnected wires, etc. If everything appears to be in order, but the unit still fails to operate properly, refer to the "DXM2.5 Troubleshooting Process Flowchart" or "Functional Troubleshooting Chart."

DXM2.5 BOARD

DXM2.5 board troubleshooting in general is best summarized as verifying inputs and outputs. After inputs and outputs have been verified, board operation is confirmed and the problem must be elsewhere. Below are some general guidelines for troubleshooting the DXM2.5 control.

FIELD INPUTS

Conventional thermostat inputs are 24VAC from the thermostat and can be verified using a voltmeter between C and Y1, Y2, W, O, G. 24VAC will be present at the terminal (for example, between "Y1" and "C") if the thermostat is sending an input to the DXM2.5 board.

Proper communications with a thermostat can be verified using the Fault LED on the DXM2.5. If the control is NOT in the Test mode and is NOT currently locked out or in a retry delay, the Fault LED on the DXM2.5 will flash very slowly (1 second on, 5 seconds off), if the DXM2.5 is properly communicating with the thermostat.

SENSOR INPUTS

All sensor inputs are 'paired wires' connecting each component to the board. Therefore, continuity on pressure switches, for example can be checked at the board connector. The thermistor resistance should be measured with the connector removed so that only the impedance of the thermistor is measured. If desired, this reading can be compared to the thermistor resistance chart shown in Table 20. An ice bath can be used to check the calibration of the thermistor.

Table 20: Nominal resistance at various temperatures

Temp (°C)	Temp (°F)	Resistance (kOhm)	Temp (°C)	Temp (°F)	Resistance (kOhm)
-17.8	0.0	85.34	55	131.0	2.99
-17.5	0.5	84.00	56	132.8	2.88
-16.9	1.5	81.38	57	134.6	2.77
-12	10.4	61.70	58	136.4	2.67
-11	12.2	58.40	59	138.2	2.58
-10	14.0	55.30	60	140.0	2.49
-9	15.8	52.38	61	141.8	2.40
-8	17.6	49.64	62	143.6	2.32
-7	19.4	47.05	63	145.4	2.23
-6	21.2	44.61	64	147.2	2.16
-5	23.0	42.32	65	149.0	2.08
-4	24.8	40.15	66	150.8	2.01
-3	26.6	38.11	67	152.6	1.94
-2	28.4	36.18	68	154.4	1.88
-1	30.2	34.37	69	156.2	1.81
0	32.0	32.65	70	158.0	1.75
1	33.8	31.03	71	159.8	1.69
2	35.6	29.50	72	161.6	1.64
3	37.4	28.05	73	163.4	1.58
4	39.2	26.69	74	165.2	1.53
5	41.0	25.39	75	167.0	1.48
6	42.8	24.17	76	168.8	1.43
7	44.6	23.02	77	170.6	1.39
8	46.4	21.92	78	172.4	1.34
9	48.2	20.88	79	174.2	1.30
10	50.0	19.90	80	176.0	1.26
11	51.8	18.97	81	177.8	1.22
12	53.6	18.09	82	179.6	1.18
13	55.4	17.26	83	181.4	1.14
14	57.2	16.46	84	183.2	1.10
15	59.0	15.71	85	185.0	1.07
16	60.8	15.00	86	186.8	1.04
17	62.6	14.32	87	188.6	1.01
18	64.4	13.68	88	190.4	0.97
19	66.2	13.07	89	192.2	0.94
20	68.0	12.49	90	194.0	0.92
21	69.8	11.94	91	195.8	0.89
22	71.6	11.42	92	197.6	0.86
23	73.4	10.92	93	199.4	0.84
24	75.2	10.45	94	201.2	0.81
25	77.0	10.00	95	203.0	0.79
26	78.8	9.57	96	204.8	0.76
27	80.6	9.16	97	206.6	0.74
28	82.4	8.78	98	208.4	0.72
29	84.2	8.41	99	210.2	0.70
30	86.0	8.06	100	212.0	0.68
31	87.8	7.72	101	213.8	0.66
32	89.6	7.40	102	215.6	0.64
33	91.4	7.10	103	217.4	0.62
34	93.2	6.81	104	219.2	0.60
35	95.0	6.53	105	221.0	0.59
36	96.8	6.27	106	222.8	0.57
37	98.6	6.01	107	224.6	0.55
38	100.4	5.77	108	226.4	0.54
39	102.2	5.54	109	228.2	0.52
40	104.0	5.33	110	230.0	0.51
41	105.8	5.12	111	231.8	0.50
42	107.6	4.92	112	233.6	0.48
43	109.4	4.72	113	235.4	0.47
44	111.2	4.54	114	237.2	0.46
45	113.0	4.37	115	239.0	0.44
46	114.8	4.20	116	240.8	0.43
47	116.6	4.04	117	242.6	0.42
48	118.4	3.89	118	244.4	0.41
49	120.2	3.74	119	246.2	0.40
50	122.0	3.60	120	248.0	0.39
51	123.8	3.47	121	249.8	0.38
52	125.6	3.34	122	251.6	0.37
53	127.4	3.22	123	253.4	0.36
54	129.2	3.10			

Troubleshooting, Cont'd.

OUTPUTS

The compressor and reversing valve relays are 24VAC and can be verified using a voltmeter. For units with ECM blower motors, the DXM2.5 controls the motor using serial communications, and troubleshooting should be done with a communicating thermostat or diagnostic tool. The alarm relay can either be 24VAC as shipped or dry contacts for use with DDC controls by clipping the JW1 jumper. Electric heat outputs are 24VDC “ground sinking” and require a voltmeter set for DC to verify operation. The terminal marked “24VDC” is the 24VDC supply to the electric heat board; terminal “EH1” is stage 1 electric heat; terminal “EH2” is stage 2 electric heat. When electric heat is energized (thermostat is sending a “W” input to the DXM2.5 controller), there will be 24VDC between terminal “24VDC” and “EH1” (stage 1 electric heat) and/or “EH2” (stage 2 electric heat). A reading of 0VDC between “24VDC” and “EH1” or “EH2” will indicate that the DXM2.5 board is NOT sending an output signal to the electric heat board.

TEST MODE

Test mode can be entered for 20 minutes by pressing the Test push button. The DXM2.5 board will automatically exit test mode after 20 minutes.

ADVANCED DIAGNOSTICS

To properly troubleshoot advanced control features, and to aid in troubleshooting basic control features, a communicating thermostat or diagnostic tool must be used.

SERVICE MODE

The Service Mode provides the installer with several functions for troubleshooting, including Manual Operation, Control Diagnostics, Control Configuration, and Fault History.

Manual Operation – The Manual Operation mode allows the installer to bypass normal thermostat timings and operating modes, to directly activate the thermostat inputs to the DXM2.5, activate the DXM2.5 Test mode, and directly control the ECM blower, internal flow center, and proportional valve.

Control Diagnostics – The Control Diagnostics menus allow the installer to see the current status of all DXM2.5 control switch inputs, values of all temperature sensor inputs, control voltage, ECM blower, internal flow center, and proportional valve operating status and parameters.

DIP Switch Configuration – The DIP Switch Configuration menus allow the installer to easily see the current DXM2.5 control configuration.

Fault History – In addition to the fault code, the DXM2.5 stores the status of all control inputs and outputs when a fault condition is detected. The fault history covering the last five lockout conditions is stored and may be retrieved from the DXM2.5. After a specific fault in the fault history is selected, the operating mode and time when the fault occurred are displayed, with options to select specific control status values when the lockout occurred.

Fault Temp Conditions – This option displays the DXM2.5 temperature and voltage values when the lockout occurred.

Fault Flow Conditions – This option displays the DXM2.5 ECM blower, pump, and valve operating parameters when the lockout occurred.

Fault I/O Conditions – This option displays the status of the DXM2.5 physical and communicated inputs and the relay outputs when the lockout occurred.

Fault Configuration Conditions – This option displays the status of the DXM2.5 option selections when the lockout occurred.

Fault Possible Causes – This option displays a list of potential causes of the stored fault.

Clear Fault History – The Clear Fault History option allows the fault history stored in the non-volatile memory of the DXM2.5 to be cleared.

DXM2.5 TROUBLESHOOTING PROCESS FLOWCHART/ FUNCTIONAL TROUBLESHOOTING CHART

The “DXM2.5 Functional Troubleshooting Process Flowchart” is a quick overview of how to start diagnosing a suspected problem, using the fault recognition features of the DXM2.5 board. The “Functional Troubleshooting Chart” on the following page is a more comprehensive method for identifying a number of malfunctions that may occur, and is not limited to just the DXM2.5 controls. Within the chart are five columns:

- The “Fault” column describes the symptoms.
- Columns 2 and 3 identify in which mode the fault is likely to occur, heating or cooling.
- The “Possible Cause column” identifies the most likely sources of the problem.
- The “Solution” column describes what should be done to correct the problem.



WARNING!


WARNING! HAZARDOUS VOLTAGE! DISCONNECT ALL ELECTRIC POWER INCLUDING REMOTE DISCONNECTS BEFORE SERVICING.

Failure to disconnect power before servicing can cause severe personal injury or death.

DXM2.5 Functional Troubleshooting Flow Chart

⚠ WARNING! ⚠
WARNING! HAZARDOUS VOLTAGE! DISCONNECT ALL ELECTRIC POWER INCLUDING REMOTE DISCONNECTS BEFORE SERVICING.
 Failure to disconnect power before servicing can cause severe personal injury or death.

DXM2.5 Functional Troubleshooting Flow Chart

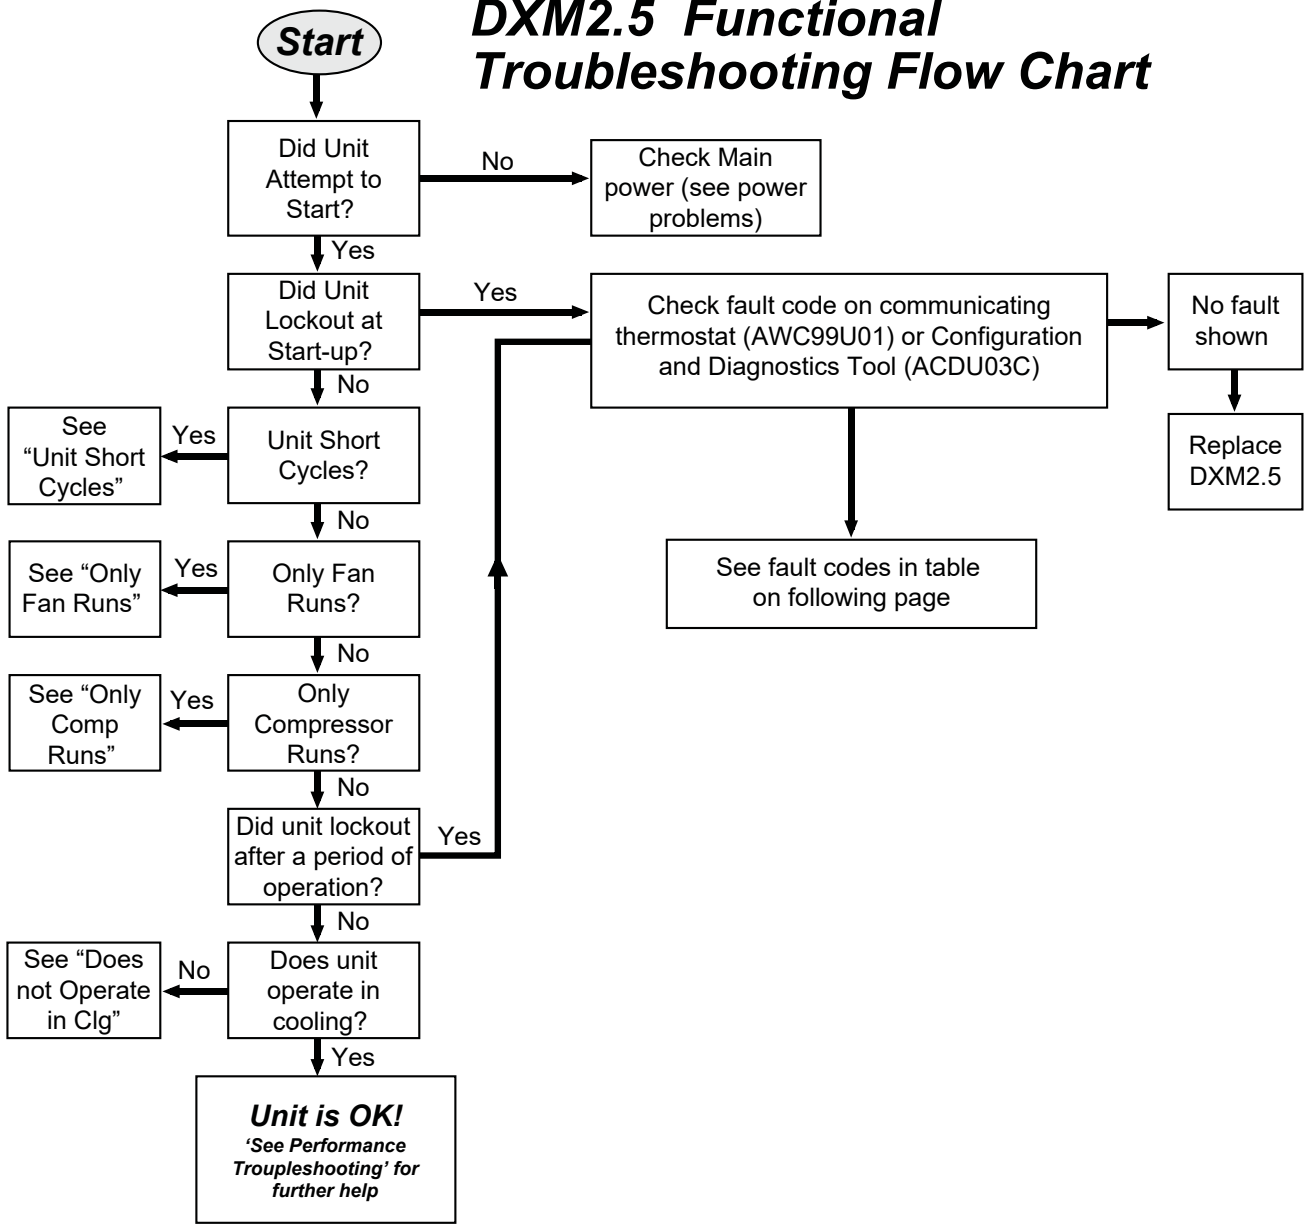

Functional Troubleshooting

Fault	Htg	Clg	Possible Cause	Solution
Main Power Problems	X	X	Green Status LED Off	Check line voltage circuit breaker and disconnect.
				Check for line voltage between L1 and L2 on the contactor.
				Check for 24VAC between R and C on DXM2.5
				Check primary/secondary voltage on transformer.
HP Fault Code 2 High Pressure		X	Reduced or no water flow in cooling	Check pump operation or valve operation/setting. Check water flow adjust to proper flow rate.
		X	Water Temperature out of range in cooling	Bring water temp within design parameters.
	X		Reduced or no airflow in heating	Check for dirty air filter and clean or replace.
				Check fan motor operation and airflow restrictions.
				Dirty Air Coil - construction dust etc.
				Too high of external static? Check static vs blower table.
	X		Air temperature out of range in heating	Bring return air temp within design parameters.
	X	X	Overcharged with refrigerant	Check superheat/subcooling vs typical operating condition table.
X	X	Bad HP Switch	Check switch continuity and operation. Replace.	
X		Frozen water heat exchanger	Thaw heat exchanger.	
LP/LOC Fault Code 3 Low Pressure / Loss of Charge	X	X	Insufficient charge	Check for refrigerant leaks
	X		Compressor pump down at start-up	Check charge and start-up water flow.
LT1 Fault Code 4 Water Low Temperature	X		Reduced or no water flow in heating	Check pump operation or water valve operation/setting.
				Plugged strainer or filter? Clean or replace.
				Check water flow. Adjust to proper flow rate.
	X		Inadequate antifreeze level	Check antifreeze density with hydrometer.
	X		Improper low temperature setting (30°F vs 10°F)	Clip LT1 jumper for antifreeze (10°F) use.
X		Water temperature out of range	Bring water temp within design parameters.	
LT2 Fault Code 5 Low Air Temperature (Air Handler)		X	Reduced or no airflow in cooling	Check for dirty air filter and clean or replace.
		X		Check fan motor operation and airflow restrictions.
		X		Too high of external static? Check static vs blower table.
		X	Air Temperature out of range	Too much cold vent air? Bring entering air temp within design parameters.
	X	X	Improper low temperature setting (30°F vs 10°F)	Normal airside applications will require 30°F only.
Condensate Fault Code 6 High Condensate Level (Air Handler)	X	X	Blocked drain	Check for blockage and clean drain.
	X	X	Improper trap	Check trap dimensions and location ahead of vent.
		X	Poor drainage	Check for piping slope away from unit.
		X		Check slope of unit toward outlet.
		X		Poor venting? Check vent location.
		X	Moisture on sensor	Check for moisture shorting to air coil.
X	X	Plugged air filter	Replace air filter.	
X	X	Restricted return airflow	Find and eliminate restriction. Increase return duct and/or grille size.	

Table continued on next page.

Functional Troubleshooting, Cont'd.

Table continued from previous page.

Fault	Htg	Clg	Possible Cause	Solution
Over/Under Voltage Code 7 (Auto resetting)	X	X	Under voltage	Check power supply and 24VAC voltage before and during operation.
				Check power supply wire size.
	X	X	Over voltage	Check compressor starting. Need hard start kit?
				Check 24VAC and unit transformer tap for correct power supply voltage.
Unit Performance Sentinel Code 8	X		Heating mode LT2 > 125°F	Check for poor airflow or overcharged unit.
		X	Cooling Mode LT1 > 125°F OR LT2 < 40°F	Check for poor water flow or airflow.
Unit Performance Test/ Swapped Thermistor Code 9	X	X	LT1 and LT2 swapped	Reverse position of thermistors
ECM Fault Code 10 (Air Handler)	X	X	Blower does not operate	Check blower line voltage.
				Check blower low voltage wiring.
	X	X	Blower operating with incorrect airflow	Wrong unit size selection.
				Wrong unit family selection.
Low Air Coil Pressure Fault (ClimaDry®) Code 11		X	Reduced or no airflow in cooling or ClimaDry®	Wrong motor size.
				Incorrect blower selection.
		X	Air temperature out of range	Check for dirty air filter and clean or replace.
				Check fan motor operation and airflow restrictions.
	X	Bad pressure switch	Too high of external static? Check static vs blower table.	
Low Air Coil Temperature Fault (ClimaDry®) Code 12		X	Reduced airflow in cooling, ClimaDry®, or constant fan	Too much cold vent air? Bring entering air temp within design parameters.
				Check switch continuity and operation. Replace.
		X	Air temperature out of range	Check for dirty air filter and clean or replace.
				Check fan motor operation and airflow restrictions.
	X	Bad thermistor	Too high of external static? Check static vs blower table.	
IFC Fault Code 13 Internal Flow Controller Fault	X	X	No pump output signal	Check DC voltage between A02 and GND. Voltage should be between 0.5 and 10 VDC with pump active.
				Check line voltage to the pump.
	X	X	No pump feedback signal	Check DC voltage between T1 and GND. Voltage should be between 3 and 4 VDC with pump OFF and between 0 and 2 VDC with pump ON.
				Replace pump if the line voltage and control signals are present at the pump and the pump does not operate.
ESD - ERV Fault (DXM2.5 Only) Green Status LED Code 3	X	X	ERV unit has fault (Rooftop units only)	Troubleshoot ERV unit fault.
No Fault Code Shown	X	X	No compressor operation	See "Only Fan Operates".
	X	X	Compressor overload	Check and replace if necessary.
	X	X	Control board	Reset power and check operation.
Unit Short Cycles	X	X	Dirty air filter	Check and clean air filter.
	X	X	Unit in "Test Mode"	Reset power or wait 20 minutes for auto exit.
	X	X	Unit selection	Unit may be oversized for space. Check sizing for actual load of space.
	X	X	Compressor overload	Check and replace if necessary
Only Fan Runs	X	X	Thermostat position	Ensure thermostat set for heating or cooling operation.
	X	X	Unit locked out	Check for lockout codes. Reset power.
	X	X	Compressor overload	Check compressor overload. Replace if necessary.
	X	X	Thermostat wiring	Check thermostat wiring at DXM2.5. Put in test mode and jumper Y1 and R to give call for compressor.

Performance Troubleshooting

Symptom	Htg	Clg	Possible Cause	Solution
Insufficient Capacity/ Not Cooling or Heating Properly	X	X	Dirty filter	Replace or clean.
	X		Reduced or no airflow in heating	Check for dirty air filter and clean or replace.
				Check fan motor operation and airflow restrictions.
				Too high of external static? Check static vs blower table.
		X	Reduced or no airflow in cooling	Check for dirty air filter and clean or replace.
				Check fan motor operation and airflow restrictions.
				Too high of external static? Check static vs blower table.
	X	X	Leaky duct work	Check supply and return air temperatures at the unit and at distant duct registers. If significantly different, duct leaks are present.
	X	X	Low refrigerant charge	Check superheat and subcooling per chart.
	X	X	Restricted metering device	Check superheat and subcooling per chart. Replace.
		X	Defective reversing valve	Perform RV touch test.
X	X	Thermostat improperly located	Check location and for air drafts behind stat.	
X	X	Unit undersized	Recheck loads & sizing. Check sensible cooling load and heat pump capacity.	
X	X	Scaling in water heat exchanger	Perform scaling check and clean if necessary.	
X	X	Inlet water too hot or too cold	Check load, loop sizing, loop backfill, ground moisture.	
High Head Pressure	X		Reduced or no airflow in heating	Check for dirty air filter and clean or replace.
				Check fan motor operation and air flow restrictions.
				Too high of external static? Check static vs blower table.
		X	Reduced or no water flow in cooling	Check pump operation or valve operation/setting.
				Check water flow. Adjust to proper flow rate.
		X	Inlet water too hot	Check load, loop sizing, loop backfill, ground moisture.
	X		Air temperature out of range in heating	Bring return air temperature within design parameters.
		X	Scaling in water heat exchanger	Perform scaling check and clean if necessary.
X	X	Unit overcharged	Check superheat and subcooling. Re-weigh in charge.	
X	X	Non-condensables in system	Vacuum system and re-weigh in charge.	
X	X	Restricted metering device	Check superheat and subcooling per chart. Replace.	
Low Suction Pressure	X		Reduced water flow in heating	Check pump operation or water valve operation/setting.
				Plugged strainer or filter. Clean or replace.
				Check water flow. Adjust to proper flow rate.
	X		Water temperature out of range	Bring water temperature within design parameters.
		X	Reduced airflow in cooling	Check for dirty air filter and clean or replace.
				Check fan motor operation and airflow restrictions.
			Too high of external static? Check static vs blower table.	
	X	Air temperature out of range	Too much cold vent air? Bring entering air temperature within design parameters.	
X	X	Insufficient charge	Check for refrigerant leaks.	
Low Discharge Air Temperature in Heating	X		Too high of airflow	Check fan motor speed selection and airflow chart.
	X		Poor performance	See 'Insufficient Capacity'.
High humidity		X	Too high of airflow	Check fan motor speed selection and airflow chart.
		X	Unit oversized	Recheck loads & sizing. Check sensible clg load and heat pump capacity.

Table continued on next page.

Performance Troubleshooting (cont.)

Table continued from previous page.

Symptom	Htg	Clg	Possible Cause	Solution
Low Discharge Air Temperature in Heating	X		Too high of airflow	Check fan motor speed selection and airflow chart.
	X		Poor performance	See "Insufficient Capacity".
High Humidity		X	Too high of airflow	Check fan motor speed selection and airflow chart.
		X	Unit oversized	Recheck loads and sizing. Check sensible cooling load and heat pump capacity.
Only Compressor Runs	X	X	Thermostat wiring	Check G wiring at heat pump. Jumper G and R for fan operation. Check thermostat wiring at DXM2.5. Put in test mode and then jumper Y1 and W1 to R to give call for fan, compressor, and electric heat.
	X	X	Fan motor relay	Jumper G and R for fan operation. Check for line voltage across blower relay contacts. Check fan power. Enable relay operation (if present).
	X	X	Fan motor	Check for line voltage at motor. Check capacitor.
Unit Doesn't Operate in Cooling		X	Reversing valve	Set for cooling demand and check 24VAC on RV coil. If RV is stuck, run high pressure up by reducing water flow and, while operating, engage and disengage RV coil voltage to push valve.
		X	Thermostat setup	For DXM2.5, check for "O" RV setup, not "B".
		X	Thermostat wiring	Check O wiring at heat pump. DXM2.5 requires call for compressor to get RV coil "Click".
Modulating Valve Troubleshooting	X	X	Improper output setting	Verify the AO-2 jumper is in the 0-10V position.
	X	X	No valve output signal	Check DC voltage between AO2 and GND. Should be 0 when valve is OFF and between 3.3v and 10v when valve is ON.
	X	X	No valve operation	Check voltage to the valve. Replace valve if voltage and control signals are present at the valve and it does not operate.

Troubleshooting Form




Split Water-to-Air Troubleshooting Form

RP930
111414

Customer: _____ Loop Type: _____ Startup Date: _____

Model #: _____ Serial #: _____ Antifreeze Type & %: _____

Complaint: _____

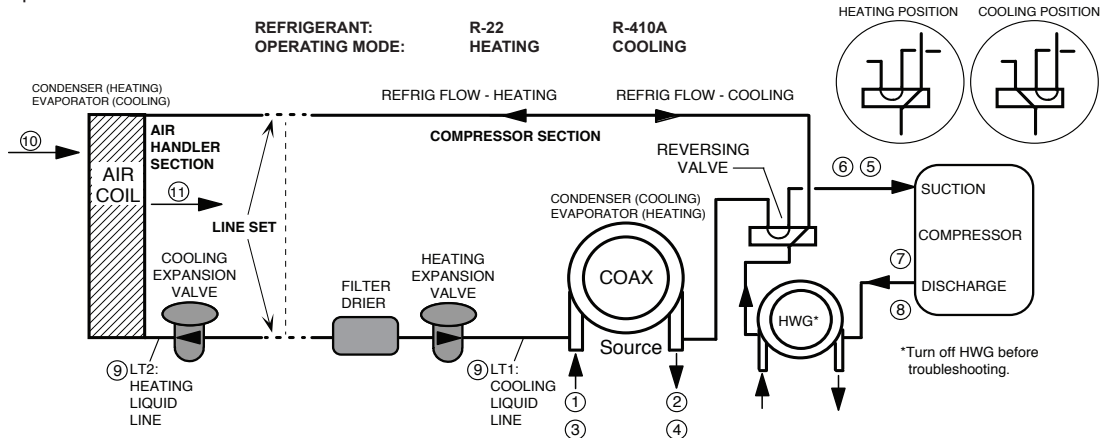

Description	Heating	Cooling	Notes
Water Side Analysis			
1	Water In Temp.		
2	Water Out Temp.		Temp. Diff. =
3	Water In Pressure		
4	Water Out Pressure		
4a	Pressure Drop		
4b	GPM		
Heat of Extraction (Absorption) or Heat of Rejection:			Fluid Factor: 500 (Water); 485 (Antifreeze)
HE or HR (Btuh) = _____ Enter HE or HR: _____			
_____ Flow Rate (GPM) x _____ Temp. Diff (deg F) x _____ Fluid Factor			
Refrigerant Analysis			
5	Suction Temp.		
6	Suction Pressure		
6a	Saturation Temp.		
6b	Superheat		
7	Discharge Temp.		
8	Discharge Pressure		
8a	Saturation Temp.		
8b	Subcooling		
9	Liquid Line Temp		
10	Return Air Temp.		
11	Supply Air Temp.		Temp. Diff. =
	Voltage		
	Compress Amps		

Line Set

Length: _____ Ft.

Liquid: _____ In. Dia

Suction: _____ In. Dia

NOTE: Never connect refrigerant gauges during startup procedures. Conduct water-side analysis using P/T ports to determine water flow and temperature difference. If water-side analysis shows poor performance, refrigerant troubleshooting may be required. Connect refrigerant gauges as a last resort.

Warranty



CLIMATE MASTER, INC. LIMITED EXPRESS WARRANTY AND LIMITATION OF LIABILITY AND REMEDIES FOR RESIDENTIAL CLASS PRODUCTS WITH LABOR ALLOWANCE

This Limited Express Warranty And Remedies Affects Your Legal Rights And Should Be Read Carefully In Its Entirety.

Subject to the terms and conditions below, Climate Master, Inc. ("CM") extends a limited warranty ("Limited Warranty") for Residential Class heating and cooling equipment manufactured or sold by CM ("Products"), that was purchased on or after May 1, 2010 (this would generally include CM Units with serial numbers beginning with "N118" and higher), and installed in a one or two family residential dwelling, for personal, household or family purposes in the United States of America or Canada, ("Application"), to be free from defects and workmanship under normal use and maintenance. If you are unsure if this Limited Warranty applies to a Product you have purchased, contact CM at the phone number or address reflected below.

This Limited Warranty DOES NOT cover commercial applications of the Products. Commercial applications include any application other than installation in a one or two family residential dwelling for personal, household or family purposes. Refer to ClimateMaster Commercial Limited Express Warranty for details. Full copies are available for download at ClimateMaster.com.

This Limited Warranty provides a complete statement of CM's responsibilities to purchasers of the Products. No oral or written statement made by CM, any person or entity associated with CM, or by any person or entity claiming to be associated with CM, including but not limited to statements made in sales literature, catalogs, or agreements to purchase or install the Products, is intended to provide an express or implied warranty of any kind and does not form a part of the basis of the bargain. Further, no such statement shall operate to extend, alter or modify the scope or terms of this Limited Warranty.

EXCEPT AS SPECIFICALLY SET FORTH HEREIN, THERE IS NO EXPRESS WARRANTY AS TO ANY OF CM'S PRODUCTS. CM MAKES NO WARRANTY AGAINST LATENT DEFECTS, OF MERCHANTABILITY OF THE PRODUCTS OR OF THE PRODUCTS FOR ANY PARTICULAR PURPOSE.

TERM: This Limited Warranty shall commence on the earliest to occur of the following dates: (i) proof of date of first occupancy; (ii) proof of date of start-up of the Product by a qualified and trained HVAC contractor; or (iii) six (6) months from the shipment date of the Product from CM if items (i) or (ii) are not available ("Warranty Inception Date"). The Limited Warranty shall extend as follows:

Costs of Repair or Replacement of Covered Product Parts

- (1) Ten (10) years from the Warranty Inception Date for air conditioning, heating and/or heat pump units built or sold by CM ("CM Units");
- (2) Ten (10) years from the Warranty Inception Date for thermostats, auxiliary electric heaters, water storage tanks, and geothermal pumping modules; built or sold by CM, when installed with CM Units;
- (3) One (1) year from the date of shipment from CM for any other accessories or parts built or sold by CM, when installed with CM Units; and
- (4) Ninety (90) days from the date of shipment from CM for all repair or replacement parts that are not supplied under this warranty.

Costs of Labor to Install/Repair or Replaced Covered Product Parts

- (1) Five (5) years from the Warranty Inception Date for CM Units;
- (2) Five years from the Warranty Inception Date for thermostats, auxiliary electric heaters, water storage tanks, and geothermal pumping modules built or sold by CM, when installed with CM Units;
- (3) Five years from the Warranty Inception Date for installation of other accessories or parts built or sold by CM or any repair or replacement parts that are not supplied under this Limited Warranty.

WHO IS COVERED: This Limited Warranty is provided only to the original owner of the one or two family residential dwelling in which the Products are first installed. This Limited Warranty is not transferable. CM reserves the right to request any documentation necessary in its sole discretion to determine the date of purchase and occupancy of the residential dwelling or the date of installation and start-up of the Product(s). For the avoidance of any doubt, this Limited Warranty shall not extend to, and shall provide no remedies whatsoever for, any distributor or installer of the Products. **CLAIM PROCESS:** To make a claim under this warranty, the Product or parts must be returned to CM in Oklahoma City, Oklahoma, freight prepaid, no later than ninety (90) days after the date of the failure of the part. HCM determines the Product or part to be defective and covered by this Limited Warranty. CM will either repair or replace the Product or part and send it to a CM-recognized distributor, dealer or service organization, F.O.B. CM, Oklahoma City, Oklahoma, freight prepaid. The Limited Warranty on any Product or part repaired or replaced under this Limited Warranty extends only through the original warranty period.

WHAT IS COVERED: Subject to the terms of this Limited Express Warranty covers the (i) the cost of repair or replacement of any covered Product or Product parts; and (ii) the cost of labor incurred by CM authorized service personnel in connection with the installation of a repaired or replaced covered Product or Product part.

If a Product part is not available, CM will, at its option, provide a free suitable substitute part or provide a credit in the amount of the then factory selling price for a new suitable substitute part to be used by the claimant towards the retail purchase price of a new CM product. All labor costs are subject and limited to amounts specifically set forth in the then existing labor allowance schedule provided by CM's Warranty Department. Actual labor costs are not covered by this Limited Warranty to the extent they: (i) exceed the amount allowed under the allowance schedule; (ii) are not specifically provided for in the allowance schedule; (iii) are not performed by CM authorized service personnel; (iv) are incurred in connection with installation of a part not covered by this Limited Warranty; or (v) are incurred outside the Term.

WHAT IS NOT COVERED: This Limited Warranty does not cover and does not apply to: (1) air filters, fuses, refrigerant, fluids, oil, (2) any portion or component of any system that is not supplied by CM, regardless of the cause of the failure of such portion or component; (4) Products on which the unit, identification tags or labels, or rating labels, have been removed or defaced; (5) Products on which payment to CM, or to the owner's seller or installing contractor, is in default; (6) Products which have not been installed and maintained by a qualified and trained HVAC contractor; (7) Products installed in violation of applicable building codes or regulations including but not limited to wiring or voltage conditions; (8) Products subjected to accident, misuse, negligence, abuse, fire, flood, freezing, lightning, unauthorized alteration, misapplication, contaminated or corrosive air or liquid supply, operation at abnormal air or liquid temperatures or flow rates, or opening of the refrigerant circuit by unequalled damages; (9) mold, fungus or bacteria damages; (10) corrosion or abrasion of the Product; (11) products supplied by others; (12) Products that have been operated in a manner contrary to CM's printed instructions; (13) Products which have insufficient performance as a result of improper system design, sizing or the improper application, installation, or use of CM's products; (14) electricity or fuel costs, or any increases or unrealized savings in same, for any reason whatsoever; or (15) operating any water storage tanks when they are empty or partially empty (i.e. dry firing), at temperatures exceeding the maximum setting of the operating or high limit controls, at pressures greater than those shown on the rating label, with non-potable water, with alterations or attachments (including energy savings devices) not specifically authorized in writing by CM, or without the free circulation of water. CM may request written documentation showing compliance with the above limitations.

In connection with repair or replacement of covered Product parts, CM is not responsible for: (1) the costs of any fluids, refrigerant or system components supplied by others, or associated labor to repair or replace the same, which is incurred as a result of a repair or replacement of a covered Product part; (2) the costs of labor, refrigerant, materials or service incurred in diagnosis and removal of a covered Product part subject to repair or replacement under this Limited Warranty; (3) shipping costs incurred in sending a claimed defective part from the installation site to CM; (4) shipping costs to return a claimed defective part from CM to the installation site if the part is not covered by this Limited Warranty; (5) removal or disposal costs associated with the repair or replacement of covered Product Parts; or (6) the costs of normal maintenance.

OTHER WARRANTY LIMITATIONS: This Limited Warranty is given in lieu of all other warranties express or implied, in law or in fact. If, notwithstanding the disclaimers contained herein, it is determined that other warranties apply, any such warranty, including without limitation any express warranties or any implied warranties of fitness for particular purpose and merchantability, shall be limited in time to the Term of this Limited Warranty.

LIMITATION OF REMEDIES: In the event of a breach of the Limited Warranty, a claimant's remedies will be limited to repair or replacement of a part or unit, or to furnish a new or rebuilt part or unit in exchange for the part or unit which has failed. If after notice to CM's factory in Oklahoma City, Oklahoma of each defect, malfunction or other failure, and a reasonable number of attempts by CM to correct the defect, malfunction or other failure, the remedy fails of its essential purpose, CM shall refund the purchase price paid to CM in exchange for the return of the sold good(s). Said refund shall be the maximum liability of CM. THIS REMEDY IS THE SOLE AND EXCLUSIVE REMEDY OF THE BUYER OR THEIR PURCHASER AGAINST CM FOR ANY ACTION FOR BREACH OF CONTRACT, BREACH OF ANY WARRANTY, PATENT INFRINGEMENT, OR FOR CM'S NEGLIGENCE OR IN STRICT LIABILITY. NO ACTION ARISING OUT OF ANY CLAIMED BREACH OF THIS LIMITED WARRANTY MAY BE BROUGHT MORE THAN ONE (1) YEAR AFTER THE CAUSE OF ACTION HAS AROSE.

LIMITATION OF LIABILITY: CM shall have no liability for any damages (CM's performance is delayed for any reason or is prevented to any extent by any event such as, but not limited to: any war, civil unrest, government restrictions or restraints, strikes, or work stoppages, fire, flood, accident, shortages of transportation, fuel, material, or labor, act of God or any other reason beyond the sole control of CM.

CM EXPRESSLY DISCLAIMS AND EXCLUDES ANY LIABILITY FOR CONSEQUENTIAL, INCIDENTAL, SPECIAL AND/OR PUNITIVE DAMAGES BASED ON ANY THEORY IN CONTRACT, BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, PATENT INFRINGEMENT, OR IN TORT; WHETHER FOR CM'S NEGLIGENCE OR STRICT LIABILITY, AND REGARDLESS OF WHETHER CM IS ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

OBTAINING WARRANTY PERFORMANCE: Normally, the dealer or service organization who installed the products will provide warranty performance for the owner. Should the installer be unavailable, contact any CM recognized distributor, dealer or service organization. If assistance is required in obtaining warranty performance, write or call:

Climate Master, Inc. • Customer Service • 7300 SW 44th Street • Oklahoma City, Oklahoma 73179 • (405) 745-6000 • e-service@climatemaster.com
NOTE: Some states or Canadian provinces do not allow the exclusion or limitation of implied warranties or the limitation of incidental or consequential damages for certain products supplied to consumers, or the limitation of liability for personal injury, so the above limitations and exclusions may be limited in their application to you. When the implied warranties are not allowed to be excluded in their entirety, they will be limited to the duration of the applicable written warranty. This warranty gives you specific legal rights, which may vary depending on local law. IF ANY PRODUCT TO WHICH THIS LIMITED WARRANTY APPLIES IS DETERMINED TO BE A "CONSUMER PRODUCT" UNDER THE MAGNISON-MOSS WARRANTY ACT (15 U.S.C. §2301-ET SEQ) OR OTHER APPLICABLE LAW, THE FOREGOING DISCLAIMER OF IMPLIED WARRANTIES SHALL NOT APPLY TO YOU, AND ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR THE PARTICULAR PURPOSE, SHALL APPLY FOR THE SAME TERM SET FORTH ABOVE (ONE YEAR) AS PROVIDED UNDER APPLICABLE LAW. The portions of this Limited Warranty and limitation of liability shall be considered fully-severable, and all portions which are not disallowed by applicable law shall remain in full force and effect.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state and from Canadian province to Canadian province. Refer to your local laws for your specific rights under this Limited Warranty.
Please refer to the CM Installation, Operation and Maintenance Manual for operating and maintenance instructions.

Rev.: 3/20
Part No.: R19851

Notes:

Notes:

Revision History

Date	Page #	Description
18 Oct. 22	All	Updated for DXM2.5 and AWC99U01 Communicating Thermostat
05 Oct., 21	23-26	Updated Water Quality Standard
15 May, 20	All	Updated Decoder and Corrected Table Order
14 Nov., 19	All	Figure and Table Order Corrected
29 Oct., 19	3, 11, 15	Decoder and pump curve updates
24 Jan, 19	All	High Head Variable Pump update
21 Aug, 18	4	Added Warning
27 April, 17	34	Edit HWG Start up text
23 Dec., 15	3,9,	vFlow verbage updated
14 Dec. ,15	All	Updated to revision B
18 June, 15	7, 24-25	Updated Water Pressure Warning and Added Text for TXV Installation
13 Mar., 15	24	Updated Text and Table
04 Mar., 15	53	Updated to include no vFlow and UPM Geo Data
06 Oct., 14	67	Updated Troubleshooting Form
30 Sept., 14	53	Edit Table 16a
10 Sept., 14	8, 20	Polyolester Oil Information
16 May, 14	24	Updated Valve Positions Table 8
25 Sept., 13	53	PSI Correction to Table 14
7 June, 13	36	Edits to 038-064 RLA, FLA MCA
7 Dec., 12	All	Figure and Table Order Corrected
19 Nov., 12	All	First Published



97B0047N05

7300 S.W. 44th Street
 Oklahoma City, OK 73179
 Phone: 405-745-6000
 Fax: 405-745-6058
 climatemaster.com

ClimateMaster works continually to improve its products. As a result, the design and specifications of each product at the time for order may be changed without notice and may not be as described herein. Please contact ClimateMaster's Customer Service Department at 1-405-745-6000 for specific information on the current design and specifications. Statements and other information contained herein are not express warranties and do not form the basis of any bargain between the parties, but are merely ClimateMaster's opinion or commendation of its products.